


USE AND CARE GUIDE

MANHATTAN 5 LT AGED BRASS PENDANT

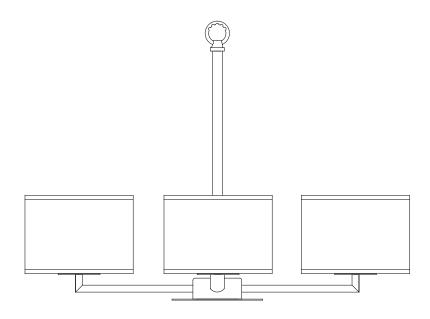

Questions,problems,missing parts? Before returning to the store, call Fifth and Main Customer Service fifthandmainsupport@troycsl.com 8 a.m. - 6 p.m., PST, Monday - Friday

THANK YOU

We appreciate the turst and confidence you have placed in Fifth and Main Collection through the purchase of this 5 light chandelier.

We strive to continually create quality products designed to enhance your home. Thank you for choosing Fifth and Main!

Table of Contents

| Table of Contents | Tools required · · · · · · · · · · · · · · · · · · · |
|------------------------|---|
| Safety Information | Hardware Included · · · · · · · · · · · · · · · · · · |
| Warranty2 | Package Contents |
| What is Covered | Installation |
| What is Not Covered2 | Care and Cleaning |
| Pre-Installation | |
| Planning Installation3 | , i |

Safety Information



WARNING: Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.



WARNING: Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.

Warranty

WHAT IS COVERED

The manufacturer warrants this fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Cusromer Service fifthandmainsupport@troycsl.com

Pre-Installation


PLANNING INSTALLATION

Read all instructions before assembly. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

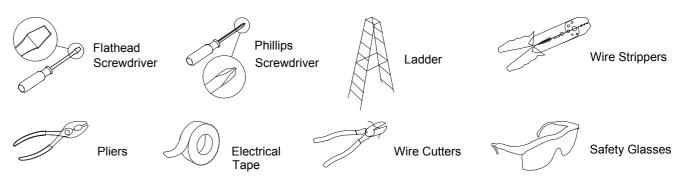


HARDWARE INCLUDED

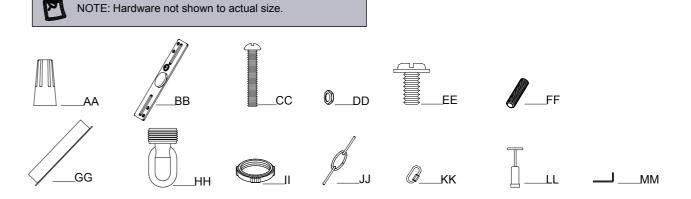

| Part | Description | Quantity |
|------|---|----------|
| AA | Wire connector | 3 |
| BB | Cross bar | 1 |
| CC | Outlet box screw | 2 |
| DD | Lock nut | 1 |
| EE | Ground screw | 1 |
| FF | Nipple | 1 |
| GG | Canopy | 1 |
| HH | Screw Collar Loop(preassembled to Cross bar(BB) | 1 |
| II | Ring(preassembled to Cross bar(BB) | 1 |
| JJ | Chain | 1 |
| KK | Chain-Loop | 2 |
| LL | Plastic tool | 1 |
| MM | Hex wrench | 1 |

Pre-Installation (continued)

PACKAGE CONTENTS

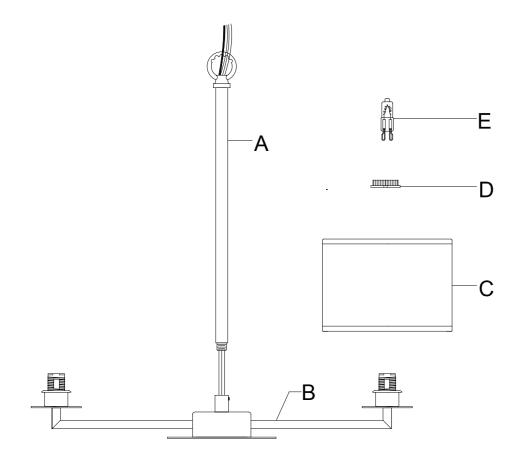

| Part | Description | Quantity |
|------|---------------------|----------|
| Α | Fixture center pipe | 1 |
| В | Fixture body | 1 |
| С | Fabric shade | 5 |
| D | Socket ring | 5 |
| Е | G9 bulb | 5 |


Assembly


Assembling the light fixture

□ Attach fixture center pipe (A) to fixture body(B), fasten set screw using hex wrench (MM).

2 Preparing the light fixture to hang

□ Open the bottom section of the chain(KK) and attach it to the fixture loop(A).

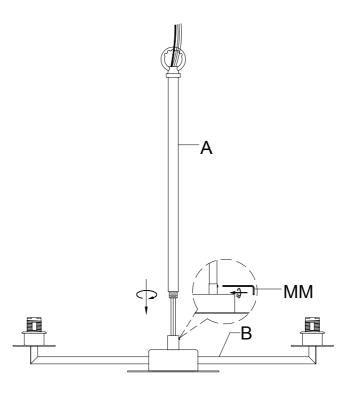


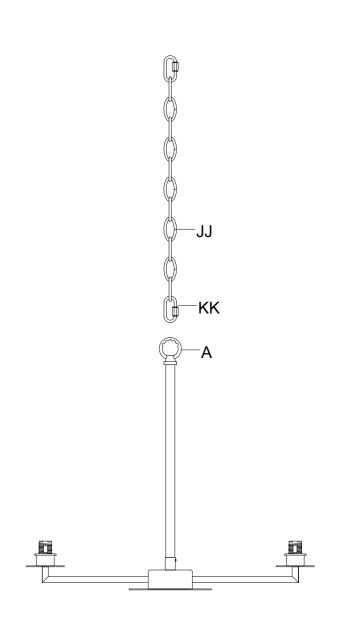

Installation

3 Installing the cross bar


- □ Switch off the power.
- □ Place outlet box screw(CC) to cross bar (BB), Attach screw collar loop (HH) to the threaded nipple on the cross bar(BB).
- Open the top section of the chain(KK) and attach it to the screw colloar loop(HH). Pass the chain(JJ) through canopy(GG) and ring(II).
- ☐ Then weave the fixture wire and the fixture ground wire from fixture through the chain(JJ), ring(II), canopy(GG), screw collor loop(HH) and the threaded nipple on cross bar(BB)

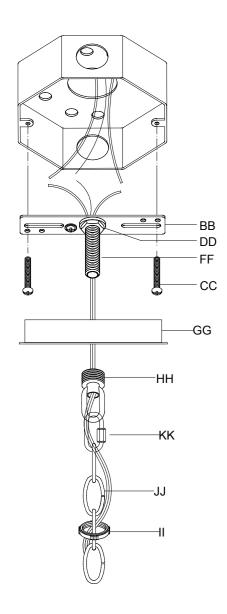

6

4 Connecting the wires


- □ Wrap the ground wire (1) from the fixture around the ground screw (EE) on the cross bar (BB) and connect it to the supply ground wire (2) from the outlet box using a wire nut (AA).
- □ Connect the ribbed fixture wire (3) and white (or ribbed) supply wire (4) from the outlet box using a wire nut (AA).
- ☐ Connect the smooth fixture wire (5) and black (or red) supply wire (6) in the outlet box using a wire nut (AA).

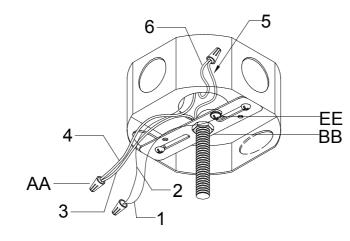

Installation (continued)

5 Hanging the light fixture

- $\hfill\square$ Push all excess wires into the outlet box.
- □ Raise the canopy (GG) to the ceiling and secure in place by screwing the ring (II) onto the screw collar loop(HH).

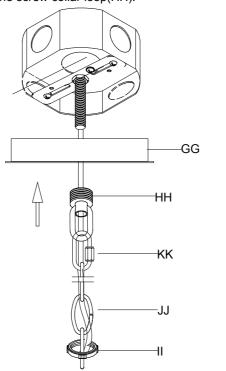


Install shades and bulbs

- Attach shade(C) to socket, tighten socket ring(D) to socket by plastic tool(LL).
- Do not touch the light bulbs with your fingers.
 Use a clean cloth or gloves, as oils from fingers will shorten bulb life.
- ☐ Install bulbs(E) to socket.



NOTE: Use five 40-watt max.medium-base G9 bulbs included.

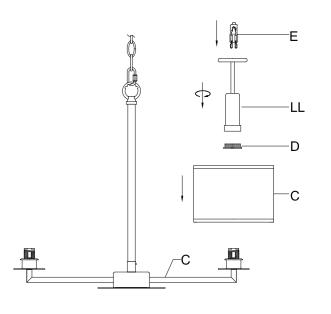

Care and cleaning

- □ Clean the fixture with a soft,dry cloth.
- □ Do not use any cleaners with chemicals, solvents or hash abrasives.



CAUTION: Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box

Troubleshooting

| Problem | Possible cause | Solution |
|--|---|--|
| The fixture will not light. | The power is off. | Ensure the power supply is On. |
| | The circuit breaker is off. | Ensure the circuit breaker is in the On position. |
| The fuse blows or the circuit breaker trips when the light is turned on. | The wires are crossed or the power wire is grounding out. | Check the wire connections.Contact a qualified. electrician or call the Customer Service Team at 1-800-533-7869 ext.4131 |

7

Fifth Main LIGHTING

Questions, problems, missing parts? Before returning to the store, call Fifth and Main Customer Service fifthandmainsupport@troycsl.com 8 a.m.-6 p.m., PST, Monday-Friday

Retain this manual for future use.