


## 12 " Atomic Wall Clock

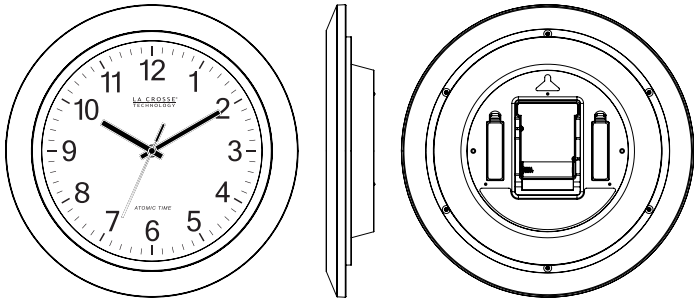

Model: WT-3129Bx1 | WT-3129Sx1  
DC: 101316


For information about WWVB, atomic time signal visit:  
[www.nist.gov/pml/div688/grp40/wwvb.cfm](http://www.nist.gov/pml/div688/grp40/wwvb.cfm)

### Power up

- ① Select Time Zone and DST ON or OFF.
- ② Insert 1 AA battery into the movement.  
OPTIONAL: Insert 2 AA batteries in the side compartments, for up to 3 year battery life.
- ③ For best reception, place clock on a wall that faces Ft. Collins, Colorado.
- ④ During the night, your clock will set itself.

#### IMPORTANT:

- Hands will move to 12:00 and search for the atomic time signal.
- If no signal, after 8-10 minutes, clock will run from 12:00.
- Clock will search for atomic time signal again, after midnight, when signal is strongest.
- Allow up to 5 nights for the clock to receive the atomic time signal.

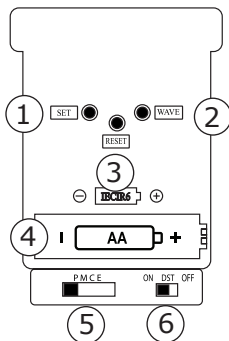

- ① SET
- ② WAVE (Atomic search)
- ③ RESET
- ④ Battery
- ⑤ Time Zone Selector
- ⑥ DST Selector

### Set the clock manually:

- ① Hold **SET** for 3 seconds
- ② Press and Hold **SET** to move hands quickly.
- ③ Press and release **SET** to move hands forward step by step.
- ④ The atomic time signal will override manual settings.

### Reset:

If the clock does not respond to function modes, press the **RESET** button on the movement case.

### Specifications

Batteries: 1 AA (IEC LR6) required in movement  
(Alkaline recommended)  
Optional 2 AA batteries for up to 3 year battery life.

## Visit Us on Social Media



For latest video content:  
[http://bit.ly/LaxTech\\_YouTube](http://bit.ly/LaxTech_YouTube)



For personal interaction:  
[http://bit.ly/LaxTech\\_Facebook](http://bit.ly/LaxTech_Facebook)



Join the conversation:  
[http://bit.ly/LaxTech\\_\\_Twitter](http://bit.ly/LaxTech__Twitter)



Pin and Share:  
[http://bit.ly/LaxTech\\_Pinterest](http://bit.ly/LaxTech_Pinterest)

### Care and Maintenance

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries
- Always purchase the correct size and grade of battery most suitable for use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended time.
- Promptly remove expired batteries.

### Warranty Support

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

Before returning a product, please contact our friendly customer support with questions or visit our online help.

Phone: 1-608-782-1610 [www.lacrossetechnology.com](http://www.lacrossetechnology.com)

View full warranty details online at:  
[www.lacrossetechnology.com/warranty\\_info.pdf](http://www.lacrossetechnology.com/warranty_info.pdf)