

# KIRI SLIDE/RAIL/BAR SHOWER AND HANDSET INSTALLATION GUIDE


## TECHNICAL SPECIFICATIONS

### Operating Pressure:

Min. 35 kPa/5 psi, Max. 500 kPa/72 psi.

### Operating Temperature:

Maximum mixed temperature 70°C/158°F.

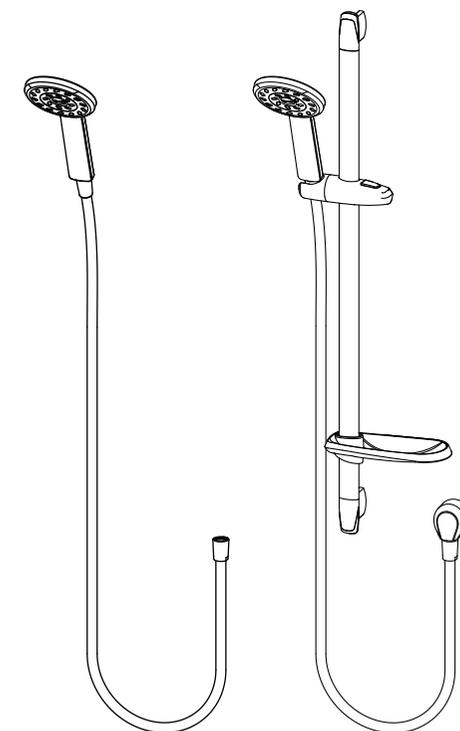

Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to [www.methven.com](http://www.methven.com) or call Customer Service

New Zealand  
0800 804 222

Australia  
1300 638 483

USA  
1800 975 5409


UK  
0800 195 1602

Issue A




NOTE FOR HANDSET ONLY INSTALLATIONS - use step 5 only.

1.

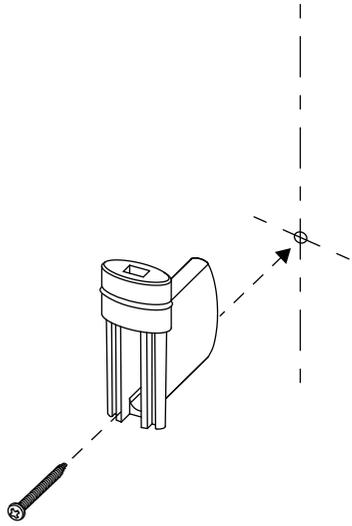


Locate the bottom bracket in the desired position and attach with one screw.

2.

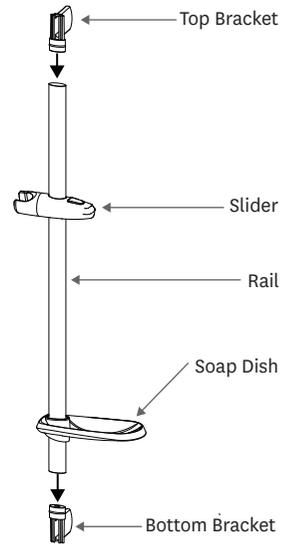


Attach the slider and the soap dish to the rail in the desired orientation. Fit the rail to the bottom bracket. Fit the top bracket to the rail.

3.

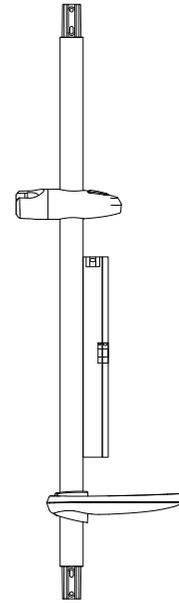


Ensure that the rail is vertical.

4.

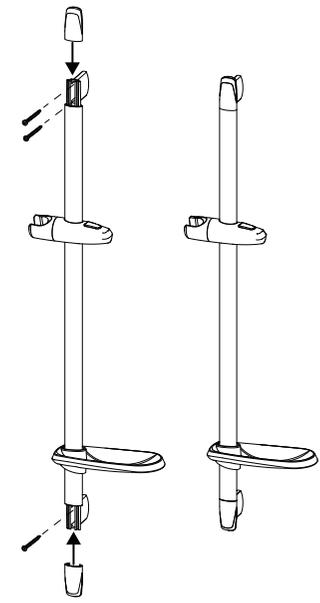


Insert the remaining screws. Fit the end caps.

5.

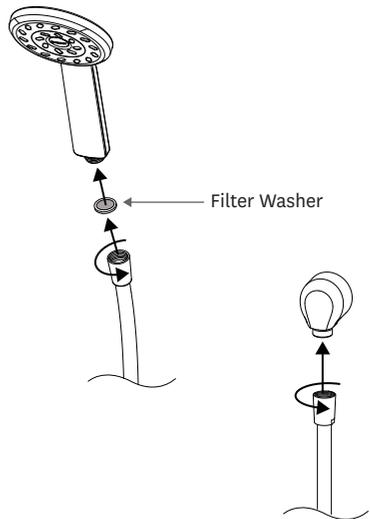

For handset only installations remove existing hose. Insert the filter washer into the new hose before screwing to the handset.

6.

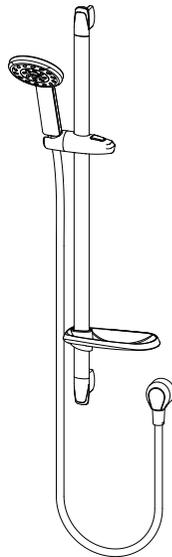

Adjust shelf and slider position to desired height.


### CLEANING

Water contains lime which remains on the surface after the water has evaporated. These lime deposits can be prevented from forming by wiping immediately after use.

To clean the chrome-plated surfaces use a soft cloth, soap and warm water. Never use cleaning agents that contain a corrosive acid or a scouring additive.



Do not use any sharp objects to clean nozzles

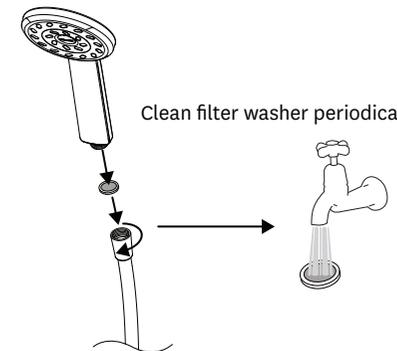

Clean filter washer periodically.

Note: Removal of the flow restrictor in the handset may be necessary to optimise flow performance in low or unequal pressure systems only.