




500 West Warner Avenue, Santa Ana, CA ArielBath.com | AtlasUSA.net Email: sales@arelbath.com | Phone: 1-714-622-1565



Important safe information

- 1. Please read this instruction and assemble the steam shower according to it.
- The leakage protection switch must be installed. Besides, please try it to check whether it is safe enough before formal using.
- 3. The ground line of the product must be connected to the earth permanently.
- To avoid being shocked by the electricity, please prepare enough plugs and fixed them near to the steam shower. Please change those old or disrepair wires in time.
- It is strictly forbidden to use the steam shower after drink or eat some hypnotic medicine.
- 6. Children should be guided by parents while using.
- Especially note: The using water temperature should not pass 60 centigrade or 140 Fahrenheit.
- Do not use any strong chemical liquid such as Vitriol, Hydrochloric acid, Lye and so on to clean the steam shower.
- 9. There is a connecting screw in the Wire Connecting Box, to avoid being shocked by the electricity, please be sure to connect this screw to the ground wire which is fixed on the power board. It is better to use the same size insulated wire to connect them, and the connecting wire diameter should not less than 1.5 square millimeter cooper-core wire.
- Warning: To avoid being shocked by the electricity, please be sure to connect the DFCI/RCD to the ground plug.
- If the steam shower with 3KW/4.5KW/6KW steam generator, the diameters of wires which are used not less than 2.5squre millimeter/ 4squre millimeter/ 6squre millimeter.
- 12. It is not allowed to use any moisture enhancing machine in the steam shower.

Installation wiring diagram

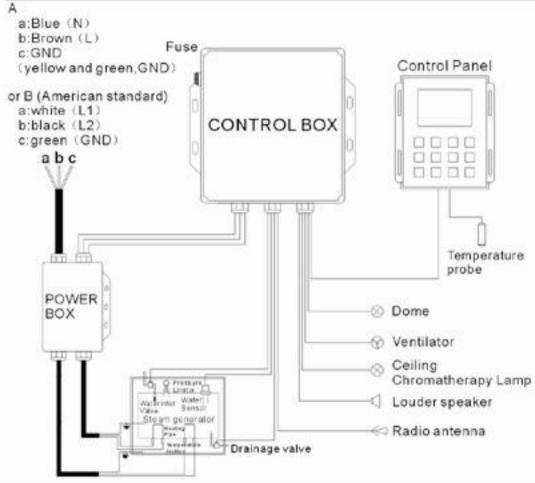


Electrical parts specification								
Configuration Parameter	massage pump	steam generator	ceiling light	exhausting fan	Solenoid valves	СРИ	Speaker	Note
Rating voltage		AC220-240V/50HZ	DC12V	DC12V	DC12V	AC220V~240V/ 50HZ		
Rating voltage		AC240V/60HZ	DC12V	DC12V	DC12V	AC240V/60HZ		
Rating power		3000W	10W	3W	5W		10W	
Rating power		4500W	10W	3W	5W		10W	
Rating power		6000VV	10W	3W	5W		10W	

CONTENTS

01-02	Component Directions	
03	Technical Drawing	
04-10	Installation steps	
11-12	Control panel keys and function direction	
13	Illustration for cleaning function	
14	Maintenance service card	
16	Troubles shooting	

Parts instruction

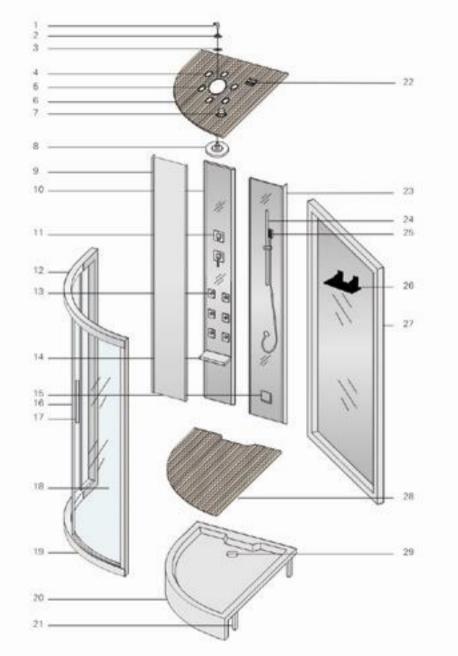

1、4"4 copper elbow	2 . 1/2" copper nuts	3、4mm plastic seal	4. daylight lamp
8	0	0	(A)
5. colorful light	6. top cover	7. loud speaker	8. Head shower
9. left back panel	10. Mid back panel	11. square 3 ways faucet	12 unner aluminum track
3. Telt back panel	To, wid back parier	TI. square 5 ways raucet	de la constant da
13. Jet	14. folded seat	15. Steam outlet	16. movable door
		9	
17 . H-style handle	18. fixed door	19. lower aluminum track	20. shower base
II		eile Mar	
21 . Adjustable leg	22. Ventilator	23. right back panel	24, hand shower bracke
4	(A)		-

Parts instruction



Parts package



962 block: 9pcs	Small cover: 6pcs
~	



6x30mm screws:4pcs	6mm spring seal: 4pcs


ļ	6mm steel seal: 8pcs	plastic coated for screws: 4pcs



Binding strips,	

Technical drawing for water and electricity


Size: 1200X900X2260mm (Left side)

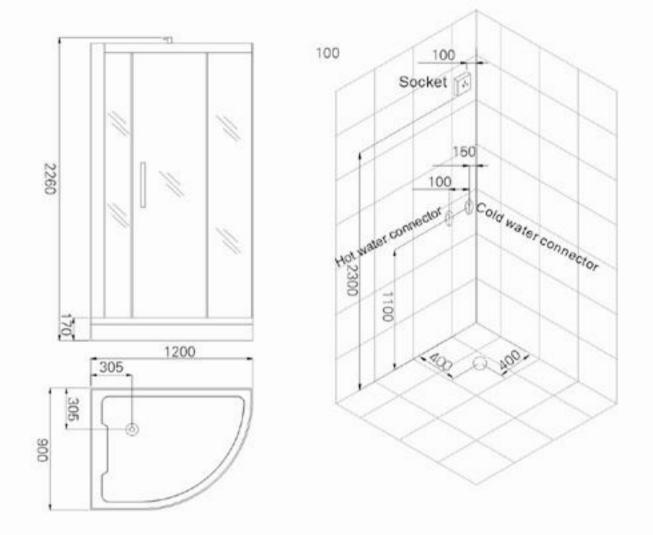

Installation instruction 1

Install the shower base


- Take the shower base out from the carton and put it on the floor carefully.
 Put the level ruler on the shower base to check whether the shower base is level. If not, please use a Wrench to adjust the adjusting legs to make the shower base become level. Illustrated in the drawing A.

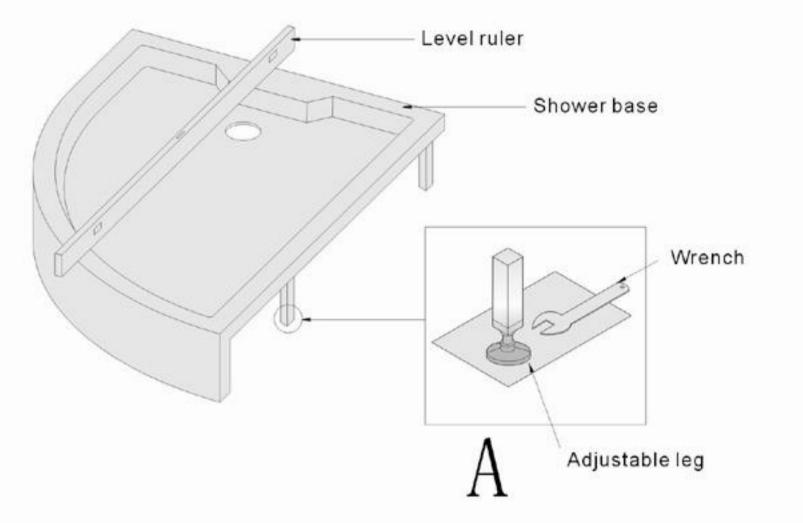

Installation instruction 2

Install the back panels


- 1. Take the No.1 panel out of the carton and put it on the shower base carefully. Please be sure to make one person to stand beside to hold it on safely.
- 2. Take the No.2 mid panel out and put it beside of the No.1 panel carefully. Then make one person hold on the No.1 and the No.2 panels, the other person uses a Philip Screwdriver to fix them with 4x25mm self-locking screws. Illustrated in the drawing A. Use the same way to fix the No.3 right back panel to the No.2 middle back panel.
- Cover the small covers onto the small holes. Please kindly note when users want to amend spare parts behind of the mid back panel, just need to take
 the cover off and unscrew the screws in the small holes, then users can take the mid panel off very easily, no need to move the whole steam
 shower out. Illustrated in the drawing B.
- 4. Put the No.4 side panel on the shower base which is beside of the No.3 right back panel. Then insert the No.4 side panel into the corner aluminum profile of No.3 right back panel. Use a Phillip Screwdriver to fix the No.3 panel and No.4 panel with 4x10mm self-locking screws. Illustrated in the drawing C.
- Fix the No.931-1 supporter separately to No.1 panel and No.3 panel. The two supporters are going to be used to pull the No.1 and No.3 panels closely to the No.2 mid panel. Illustrated in the drawing D.

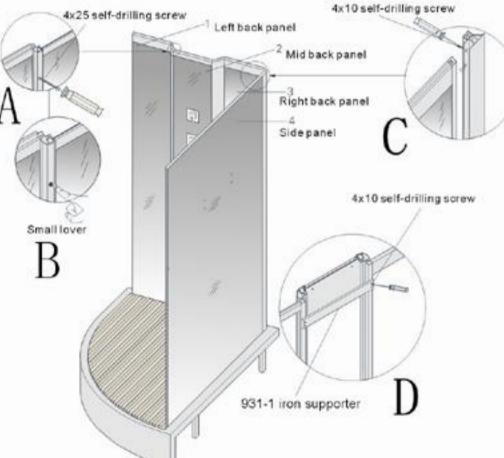

Installation instruction 3

Install front fixed glass doors


- Put the No.1 lower aluminum track on the floor. Slide the No.3 right fixed door into the No.1 track, then use a Phillip Screwdriver to fix No.1 aluminum track and No.3 fixed door together with 3.5x30mm self-locking screws. Illustrate in the drawing A.
- Slide the No.3 right door into the No.4 upper aluminum track, use a Phillip Screwdriver to fix them together with 3.5x30mm self-locking screws as well. Also according to the illustration in the drawing A.
- Use the same way to install the No.2 left fixed door to the No.1 and No.4 aluminum tracks.

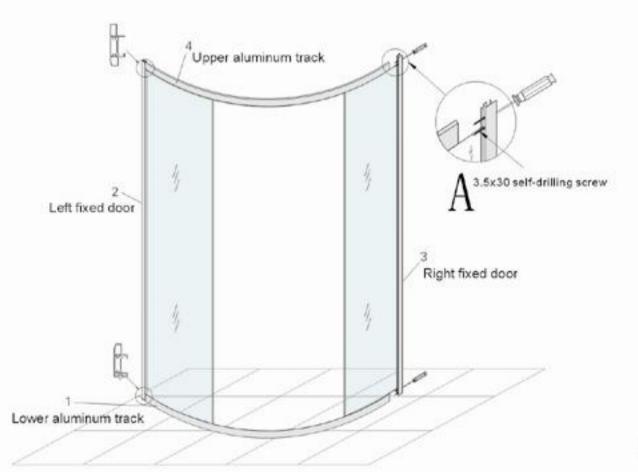

Installation instruction 4

Install the Fixed Glass Doors to the Back Panels and the Shower Base

- Cover the No.5 right corner aluminum profile onto the No.3 right installed fixed glass door doorframe (Illustrated in drawings A).
 Use the same way to cover the No.6 left corner aluminum profile on the No.2 left installed fixed glass doorframe.
- Please ask two persons to carry on the left and the right installed fixed glass doors, and put them on the shower base carefully. Then one person holds on the glass doors, the other person uses a Phillip Screwdriver to fix them to the left back panel and the side panel with 4x10mm self-locking screws. Illustrated in the drawing B.

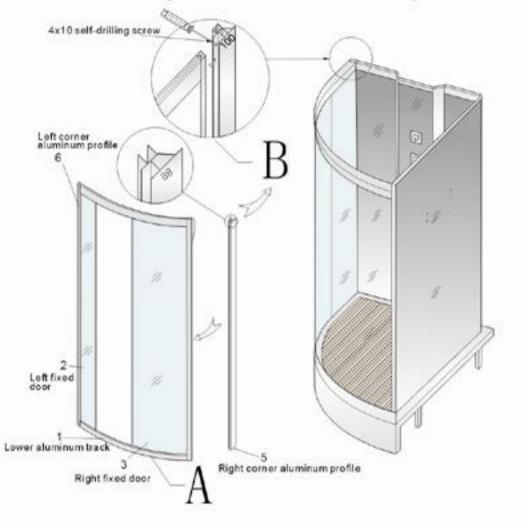


Installation instruction 5

Install Movable Door.

07


- 1. Hang up the movable door to the upper aluminum track (Illustrated in the drawing A), and then press the lower wheel to hook it into the lower aluminum track (Illustrated in the drawing B). Note: There is a Spring in the Upper Wheel. If there is a gap between the Movable Door and the Fixed Door, or the Movable Door can not swing very well, please adjust the Upper Wheels.
- Adjust Way: Use a Phillip Screwdriver to adjust the Screw at the bottom of the Upper Wheel, to make the Movable Door vertical.
- 2. Install the handles with a Hexangular Wrench. Illustrated in the drawing C.

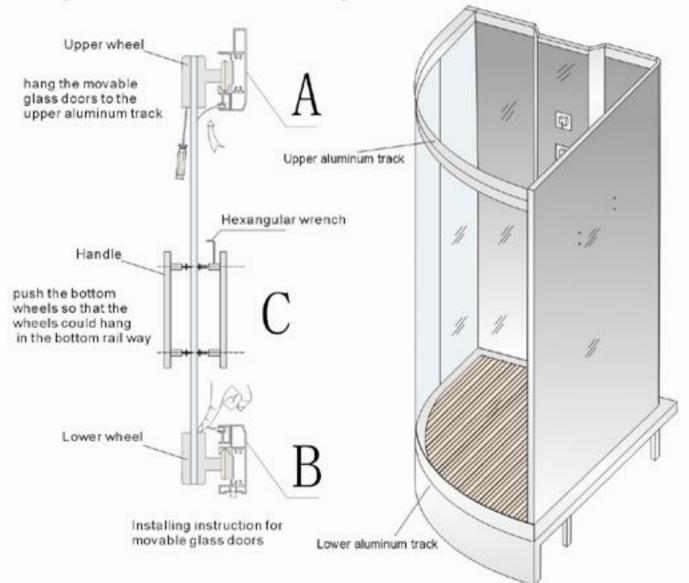

Installation instruction 6

Install Accessories


- Install the Glass Shelf: Use a Phillip Screwdriver to fix the Glass Clip to the back panel with 4x16mm screws, 4mm plastic cushion, 6mm plastic cushion and 4mm nuts, illustrated in the drawing A. Then put the Glass Shampoo Holder on the track of Glass Clip and use a Phillip Screwdriver to fix them well. Illustrated in the drawing B.
- Install the Up and Down Hand Shower Bracket: Use a Phillip Screwdriver to install the Up and Down Hand Shower Bracket to the back panel with 4x16mm screws, 4mm plastic cushion, 6mm plastic cushion and 4mm nuts. Illustrated in the drawing C.
- 3. Connect the hand shower chain to the hand shower socket. Illustrated in the drawing D.
- Then use a Phillip Screwdriver to fix the back panels to the base with 6x30mm screw, 6mm cushion, the Aluminum Bloc and so on. Illustrated in the drawing E.

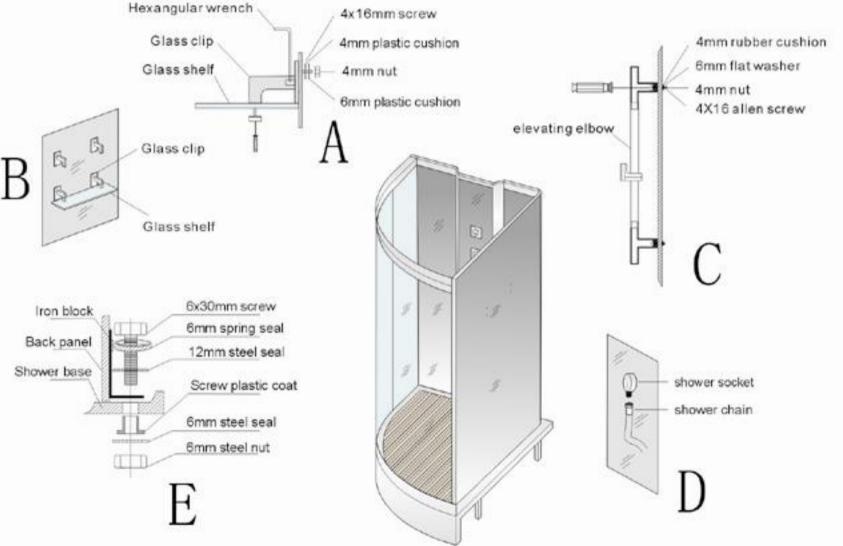

Installation instruction 7

Connect Wires

- 1 Put the top cover onto the steam shower carefully (Illustrated in the drawing A).
- 2. Use a Phillip Screwdriver to fix the Top Cover to Back Panels with 4x10mm self-locking screws and Stainless Steel Cushion. Illustrated in the drawing B.
- 3. Put the Solid Cherry Wood Floor in the steam shower carefully, put the stool on the floor.
- 4. Find out the Ventilator sign, the Lamp sign, and the Louder Speaker sign which are on the behind of the back panel, then connect the relative wires of these spare parts to the relative sockets. Illustrated in the following drawing.

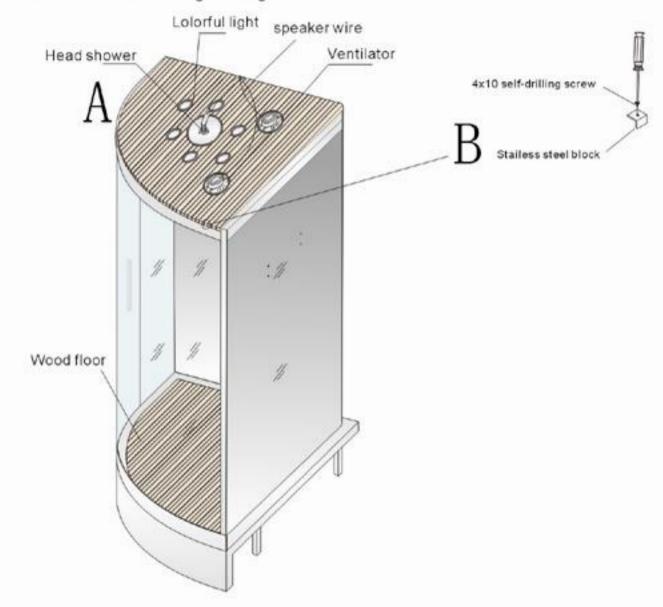



Installation instruction 8

Connect Fittings and Water Pipes


- Connect the head shower pipe to the head shower joint. Connect the water outlet pipe to the shower base and connect the steam pipe to the steam outlet, illustrated in the drawing A.
- 2. Connect the hot water inlet pipe and the cold water inlet pipe separately to the relative joints. Illustrated in drawing A, B and C.
- Especially note: The thermostatic faucet is an optional function, just when customers require to install this spare part and we will do, the standard steam shower is without the thermostatic function. Illustrated in drawing D and E.

Note: Before use the steam shower, please try to test whether all the functions are ok.

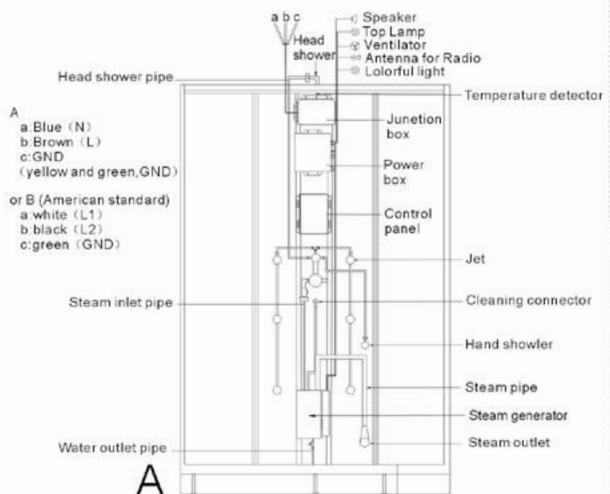

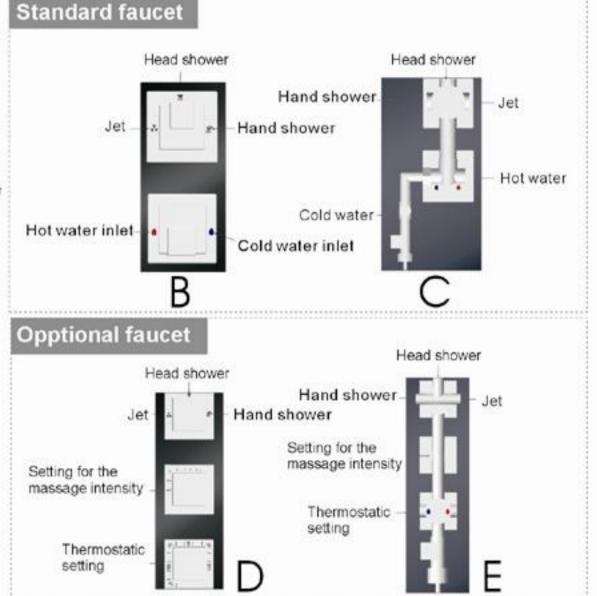

F8 Control panel keys and operating instructions

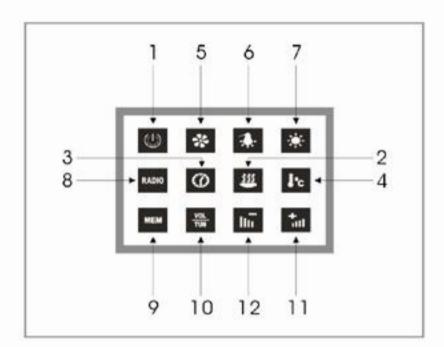

1).Power key

Press (1) to switch on the steam room, press (1) again to switch it off. The steam room will shut down in 60 minutes automatically. (As picture1)



As picture1

2).Steam key


Press III The steam generator starts working. The temperature will be shown on the control panel like the picture 2.



As picture 2

3).Time adjusting

After the steam function is turned on, press @ will

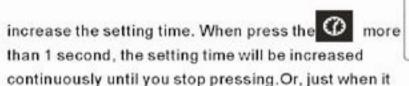

reaches the maximum limitting time (50 minutes) after that it will return to the minimum limitting time(5 minutes) autmotatically. Note: The time setting range is between 5-50 minutes. The default time setting is 30 minutes. (As picture3)

4). Temperature adjusting key


After steam function is turned on, press



increase the temperature. When press to more than 1 second, the setting temperature will be As picture4 increased continously until you stop pressing Or, just when it reaches the maximum limitting temperature that it will return to the minimum limitting temperature automatically

Note: The temperature setting range is between 20 ℃-50℃. The controlled temperature tolerance: ±3℃ The default temperature is 40℃.

5).Ventilator key

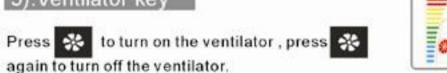

As picture5

F8 control panel key and operation instructio

6).Color light key

Press to turn on the color light. After the color light is turned on, each more press will change the different colors of the light. The color light works in this sequence: Turn on, blue ---blue and red ---red----red and orange---orange

--- orange and blue---blue---circulating---turn off.

7).lamp key

Press the key to turn on the lamp, press again and turn it off. (As picture 6)

8).Radio key

Press page to turn on the radio, press page again to turn off the radio.(As picture 7)



As picture 7

As picture6

9). Channel memory key

Press MEM and release within 1 second, the frequency of current channel will be changed; Press and hold it more than 1 second, the frequency of current chanel will be saved. It can memory total 8 channels.

10).Select key

This key gets double functions. When the radio is turned on, this key shows the Frequency function. Press the key and it can be switched from the frequency to the volume function. Press the 🙀 key, on the Displayer will show like the (Picture 10) or (picture 9). (Picture 9) is for volume and (picture 10) is for frequency.



As picture8

11). Volume up key

After the radio is turned on (As picture9), press will increase the volume. Hold on the key more than 1 second, volume will keep increasing until the key is released. When(picture 10) showes on the displayer, press im will increase the frequency. Hold on the key more than 1 second, the frequency will keep increasing until the key is released



As picture9

12). Volume down key

After the radio is turned on, when (Picture 9) is shown on the displayer, press Im will decrease the volume. Hold on the key more than 1 second, volumed will keep decreasing until the key is released. When (picture 10) is shown on the displayer, press III will decrease the frequency. Hold on the key more than 1 second, the

frequency will keep decreasing until the key is released

As pictur10

User's manual for cleaning the steem generator

Using steps: Turn off the power first, and then open the lid of cleanning cup, put the cleaning liquid in the cleanning cup, after that, cover the lid back. Now turn on the power, start the steam function to make the self-cleaning function work, later turn off the power, and pipe water away.

1).Power off

For safety, it is strictly prohibited to open the lid of the easy cleaning cup during using. In order to avoid steam gas emits out and scald users, please shut down all other functions before using the steam generator (As picture 11)

2). Open the easy cleaning cup

After Making sure all of functions are turned off, find out the cleaning cup according the right picture illustrated, and rotate the lid of the cleaning cup to the reverse direction, and then take the lid out slightly. (As picture 12)

3).put the cleaning liquid

After openning the cleanning cup, use a spoon to take a proper amount of cleaning liquid, such as Citric acid, or neutral compound cleaning liquid (around 5 ml) to put in the cleaning cup. Note: If the cleaning material is solid, first, please dissolve it with water to prevent blooking. Strictly prohibit to use any other acid, alkaline compounds to be pour ed into the cleanning cup directly (As picture 13).

4).Cover the lid

After adding the cleaning liquid, cover the lid back and turn it in clockwise direction to fasten, like this can prevent the steam emitting out to scald users (As picture 14).

5).Turn on and start the steam function

After covering the lid, press to turn on the steam generator function, and the system will begin to clean the steam box automatically. (As picture 15)

6). Turn off the power and drain out the waste water

After 5-10 minutes, press the to turn off the steam generator, then press the . the waste water will be drained out automatically (As picture 16).



As picture 11



As picture 12




As picture 13



As picture 14



As picture 15

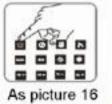

other function is on;

2. Strictly prohibit to
use any other
alkaline cleaning
compound to clean
steam generator;

3. Strictly prohibit to
use any solid cleaning
agent to clean steam
generator in order to
avoid blocking the pipe
We recommend that
you use citric acid
solution to clean steam
generator!

Strictly prohibit to

use the cleaning function while any

Maintenance service card		
Item number		
Serial number	Purchasing date	
Phone number		
and purchasing red problem, it will be f s not caused by the	icts in good repair against the maintenance service card ceipt since the purchasing date. If it is the product quality free maintenance or change the spare parts. If the problem is products itself or over-exceed the one-year guarantee, epairing fees and spare parts costs.	

The first page is kept for the customer.

Maintenance service card Item number Serial number Customer name Phone number Address Agent shop Phone number Purchasing date

The second page is sent back to eago head office.

Mainte	nance service card
Item number	
Serial number	
Customer name	
Phone number	
Address	
Agent shop	
Phone number	
Purchasing date	

Steam shower room trouble shooting

Malfunction Status	Reasons	Solutions
Small volume inlet water	Lower inlet water pressure The water inlet pipe is blocked	Check the inlet water pressure, then check with local plumber Clean the filtre
Water divert valve can't divert water	Rubber inside the valve damaged or distorted	1. Change a new one
No signal on the control panel	There is no power in the user's house or the wire not connected well Not switch the power on The connecting wire for the control panel becomes loose	Need to wait the power on, connect wires in right way Swtich on the power Take it off and install it again, don't forget fasten it
There is steam signal on the control panle, but no steam comes out	The Temperature limiter operate or the heater is broken	Ask help to qualified people
Chromatherapy light doesn't work	The connecting wire blew out or the lamp holder loosen Lamp pannel is broken	Change a new one or install it well again Change a new one
Ventilator doesn't work	The connecting wire is off The fan blade gets stuck The ventilation fan is broken	Reconnect it well When the fan is on spur the blades slightly Change a new one