DURAPANTM


U.S. PATENT NO. 5,452,739


MODEL: 98 WASHING MACHINE PAN



Made from extra-tough Durastone™

ROUGH IN FOR:
1" DWV (SOLVENT WELD) DRAIN

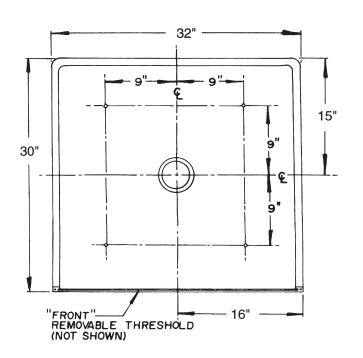

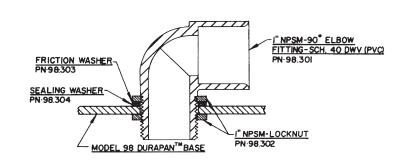

SECTIONAL VIEW (TOP)

FOR REPLACEMENT SIDE OUTLET DRAIN ASSEMBLY - COMPLETE, ORDER: PART NO. 98.300A

DOES NOT REQUIRE ALTERING SUB-FLOOR TO INSTALL

INSTALLATION:


- 1. Check **DURAPAN™** carefully making sure it is not damaged. Refer to the "rough-in" drawing and determine location of base on floor.
- 2. Determine desired location of 1" DWV Drain Fitting and drill the required 1-3/8" dia. mounting hole using the provided template as a guide (**FIG. A**). (**NOTE:** We recommend using a photocopy of the template and saving the original for your records.) Drill from the inside!
- 3. Screw locknut onto threaded end of drain fitting as far as possible by hand, then, use a wrench to tighten firmly. Assemble Drain Fitting to **DURAPAN™** as shown in the sectional view using all provided washers.
- 4. You will notice that there are four (4) countersunk holes in the floor area for securing **DURAPAN**[™]to sub-floor if desired. Using a 1/4" (inch) dia. drill bit, drill out each hole. Place **DURAPAN**[™] directly on sub-floor as a template and mark the four (4) previously drilled holes onto the sub-floor surface. Remove **DURAPAN**[™] and drill the appropriate sized holes as determined by the sub-floor composition:

Wood: 3/16" (inch) dia. drill

Cement: 3/8" (inch) dia. drill for anchors-supplied

Reposition **DURAPAN™**, align screw holes (apply a dab of silicone sealant into each hole) and secure with #14x1-1/4" Flat Hd. Screws - wipe away any excess sealant that seeps out from under screw head.

- 5. Make Drain Fitting connection in full compliance with local code requirements.
- 6. The removable Threshold is secured with two (2) #10-24x1/2" Pan Hd. Screws. Remove screws and Threshold and set "wash machine" in place. Reinstall Threshold.

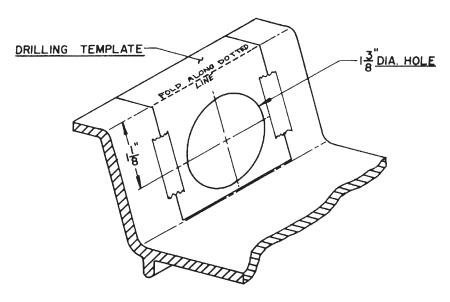


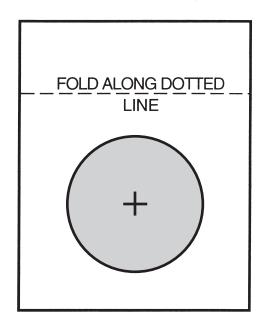


FIG. A

PARTS ILLUSTRATION:

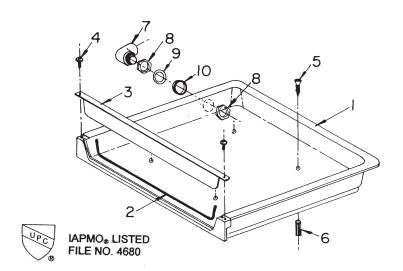

CARE AND CLEANING

The surface of your **DURAPAN™** Wash Machine/Overflow Base may be cleaned with a mild soap solution in warm water using a soft cloth. For stubborn stains use "Soft-Scrub" by Clorox or Lysol "Tub & Tile Cleaner" or a powdered detergent such as "Spic-n-Span". Never use abrasive scouring powder or steel wool pads as they will dull and scratch the surface. A periodic coating of a silicone based marine polish will help retain the fine finish.

PARTS LIST		
KEY NO.	PART NO.	DESCRIPTION
1	98.102	DURAPAN™ OVERFLOW BASE
2	99.401	THRESHOLD SEAL
3	99.201	THRESHOLD
4	99.801	#10-24 X 1/2" THRESHOLD SCREW - 2 REQUIRED
5	99.803	#14-1 1/4" FLAT HD. SCREW - 4 REQUIRED
6	17.806	ANCHOR, MOLDED - 4 REQUIRED
7	98.301	90° ELBOW FITTING
8	98.302	1" LOCKNUT - 2 REQUIRED
9	98.303	WASHER, FRICTION
10	98.304	WASHER, SEALING - 1/8" THICK