

# Quick Start Guide

Kidde Wire-Free Alarm Network Setup

**Please Read All Instructions First!**



Section 1


**Quick Start Wire-Free Network Setup**

Section 2


**Adding a Device to an Existing Network**

Section 3

**Resetting a Device**

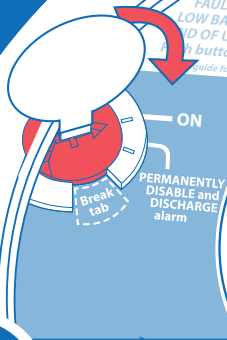

**ACTIVATION  
TOOL**

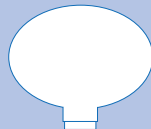

**1**

## Power Up All Devices

**Locate the red wheel on the back of the device.  
Turn the red wheel to the "ON" position on ALL  
devices using the included tool.**

Once powered, the light rings  
will glow red.



*"Searching for other devices."*

Hold for  
5 seconds

**DON'T** press buttons  
on other devices




2



## Pick One Device

Press & hold the button on only ONE device until you hear 2 beeps. Release button. You will hear "Searching for other devices."

The light will pulse green and device will sound a continuous "sonar" ping until step 4 is completed.

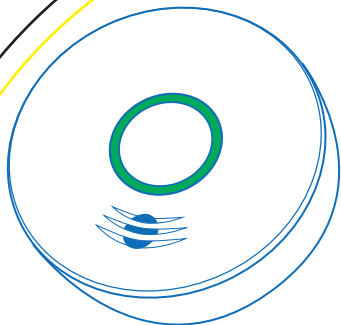

***"Success, now connected!"***

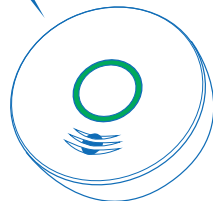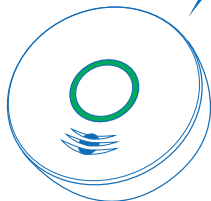

**3**

## Relax and Wait

**Wait until all devices have connected to network.  
Once connected, each device will speak:  
*"Success now connected!"***

Once connected, the lights will  
glow green.





**Hold for  
5 seconds**

**4**

## Pick One Device

**Press & hold the button on only ONE device until you hear 2 beeps. Release button. "Sonar" ping will stop.**

Device will announce that setup is complete and the number of connected devices.

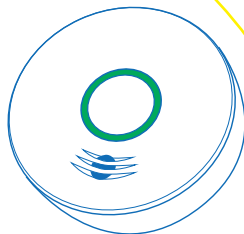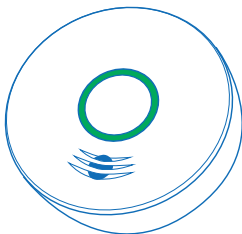

5

## Setup Complete!

**If all devices flash green and the “sonar” ping has stopped, the devices are now connected. Congratulations!**


Please mount alarms in your home.  
Refer to user guide for detailed  
installation instructions.




Section 2

**Adding a Device  
to an Existing Network**



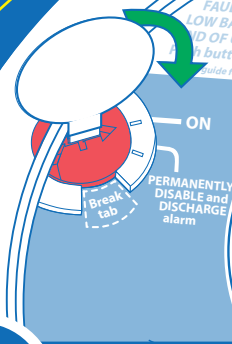

*SMOKE ALARM: 3 long beeps, repeating*  
*CO ALARM: 4 quick beeps, repeating*  
*STANDBY: Green LED blink every 60s*  
*FAULT: Amber LED blink every 60s*  
*LOW BATTERY: Amber LED blink every 60s*  
*END OF UNIT LIFE: Amber LED blink every 60s*  
*Press the test button to test weekly.*  
*See the user manual for more information.*

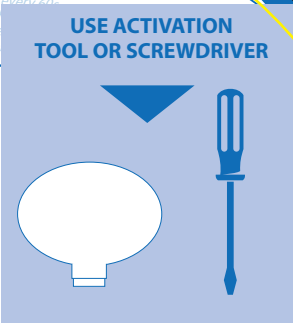

1

## Power Up New Device


**Locate the red wheel on the back of the device being added to the network. Using the activation tool or a standard screwdriver, turn the red wheel to the "on" position.**

Once powered, the light ring will glow red.

*"Searching for other devices."*



Installed Device

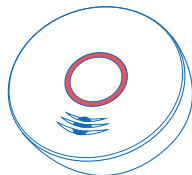

Device Being Added

2

## Pick One Installed Device

Press & hold the button on only ONE INSTALLED device on your network until you hear 2 beeps. Release button. You will hear "Searching for other devices."

The light will pulse green and device will sound a continuous "sonar" ping until step 4 is completed.



*"Success, now connected!"*

3

## Relax and Wait


**Wait until the new device has connected to the network. Once connected, the new device will speak: "Success now connected!"**

Once connected, the light ring will glow green.

*"Setup  
complete!"*



Installed Device

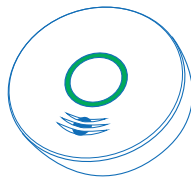

Added Device

4

## Pick the Installed Device

Press & hold the button on the INSTALLED device for 5 SECONDS until you hear 2 beeps. Release button. "Sonar" ping will stop.

Device will announce that setup is complete and the number of connected devices.

## Section 3

# Resetting Your Device

If you encounter an issue at any point during the wire-free network setup process, you may reset the device by following the subsequent directions.

***"Resetting  
wireless  
settings."***




**Hold for  
8-9 seconds**

**1**

## **Resetting the Device**

**Press & hold the button on the device for  
8-9 seconds until you hear 3 beeps.  
Release button. You will hear the words  
"Resetting wireless settings."**

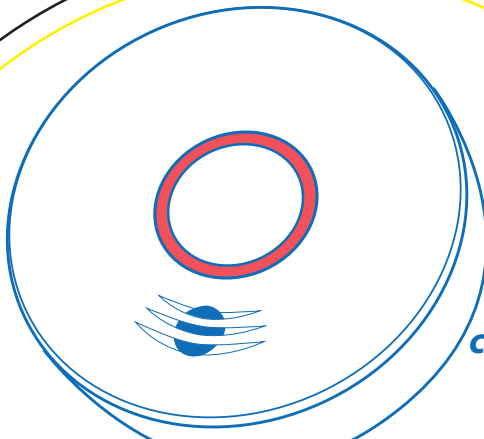

*"Ready to connect, follow Quick Start instructions!"*

**2**

## Resetting the Device

**Light ring will flash green once and then it will pulse red. You will hear the words "Ready to connect, follow quick start instructions."**

Device has been reset.

Need more help  
getting started?

Visit **[kidde.com/wirefreealarms](https://www.kidde.com/wirefreealarms)**  
to view video tutorials or scan the  
QR code below.



*Consult the User Guide for more detailed  
instructions on product installation and use.*

2556-7203-00 Rev A