
VINNOVA

## Step 4 Cleaning and care

Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.

# Step 5 Parts list

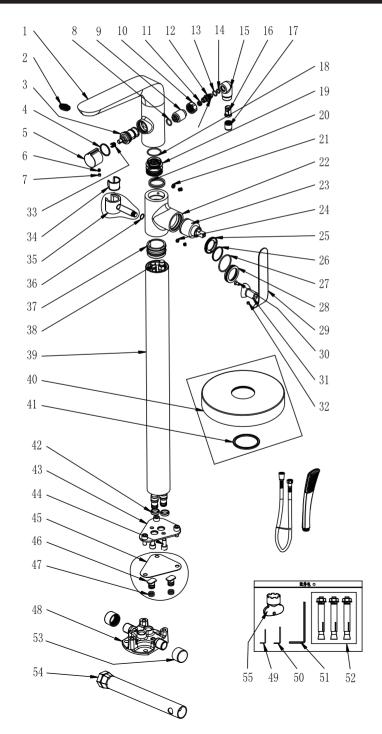


		11	O-ring
		12	Connector
		13	O-ring
		14	O-ring
		15	Shower Hose Connector
		16	Hose Connector Core
		17	Check Valve
		18	O-ring
		19	Spout Connector
38	Inlet Pipe	20	O-ring
39	Straight Tube	21	Screw
40	Plate	22	Body
41	O-ring	23	Cartridge
42	Nut	24	Screw
43	Connect Plate	25	Lock Nut
44	Screw	26	Wearing Ring
45	Fixed Plate	27	O-ring
46	Plug	28	Cartridge Cover
47	O-ring	29	Handle
48	Fixed Seat	30	Screw
49	Allen Key	31	Handle Cover
50	Allen Key	32	Screw
51	Allen Key	33	Valve
52	Screw	34	Handle Adapter
53	Sleeve	35	Shower Holder
54	Socket Wrench	36	O-ring
55	Aerator Wrench	37	Body Connecter

Spout
Aerator
Cartridge

Wearing Ring

Screw
Button
O-ring
Connecter
Connector Nut




### SINGLE HANDLE SHOWER SET, CHROME

The product is CUPC and ADA certified.


Original certification model code: BZ20U75-1392
ASME A112.18.1/CSA B125.1





# The tools might be applied to the following places:

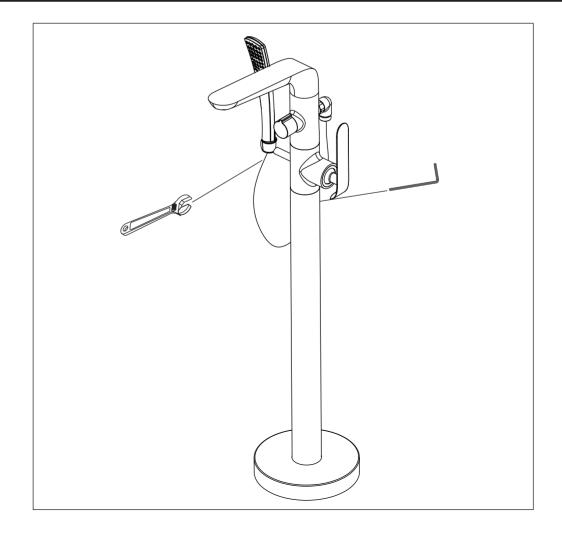


#### Step 1 Faucet installation

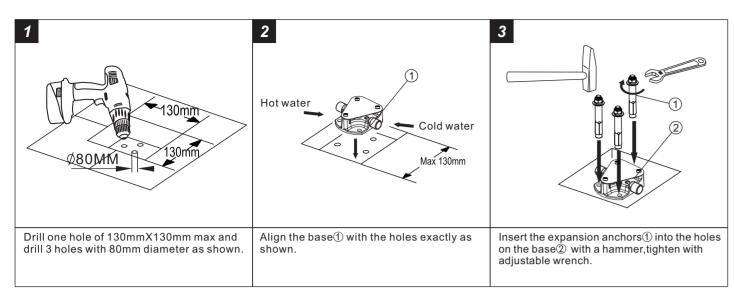

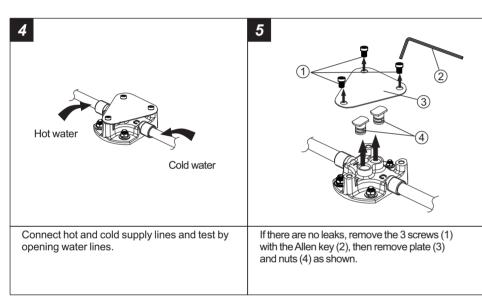


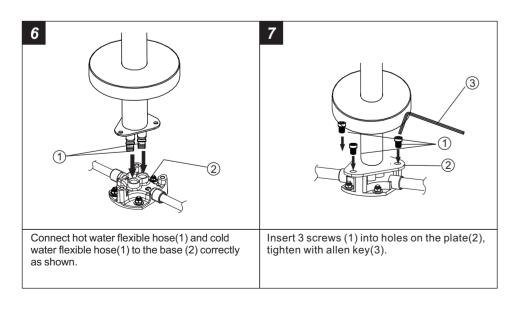

#### Step 2 Checking and testing

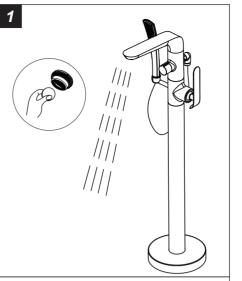

Remove aerator by coin and open the hot and cold water supplies. Check for leaks. Turn on faucet handle for one minute to flush debris from faucet.

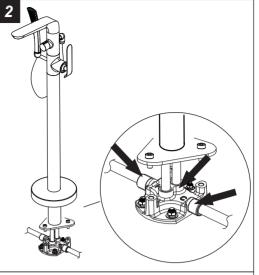


Check all connections at arrows for leaks, re-tighten it if necessary.

!


BUT DON'T OVERTIGHTEN

### Step 3 Maintenance


A. If there is splash or low flow rate, please remove the aerator with by coin and clean the debris.

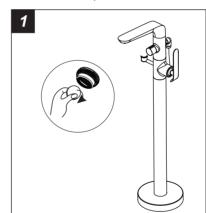


B.If faucet leaks from the handle or drips from spout, please replace cartridge following the following steps:

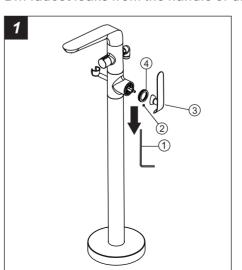

Disassemble the screw② with allenkey①, take out the handle③, then remove the trim cap④.

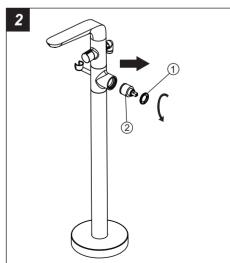

Unscrew the cartridge nut① with adjustable wrench, then take out the old cartridge②.

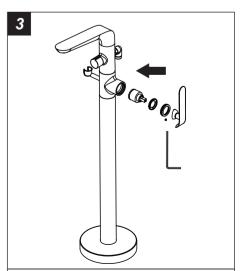

Place a new cartridge in the cartridge seat, then screw the cartridge lock nut and assemble the handle by securing the screws. Repeat the above steps for the other cartridge if necessary.