


## **USE AND CARE GUIDE**

#### **OLIVET 4-LIGHT VANITY FIXTURE**

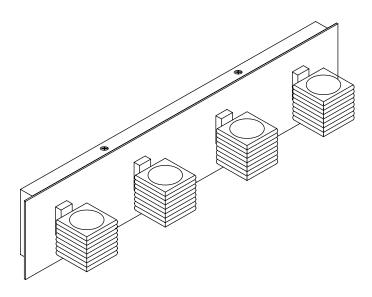

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

#### THANK YOU

#### **Table of Contents**

Table of Contents2	Hardware Included
Safety Information2	Package Contents
Warranty 2	•
Pre-Installation3	
Planning Installation3	
Tools Paguirad	

### Safety Information

- Read all instructions before assembling and installing.
- Consult a qualified electrician for installation of this fixture.
- If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.
- Please reference your SKU 1000 031 363 or (UPC 773546247283).
- Keep your receipt and these instructions for proof of purchase.



**CAUTION:** Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



IMPORTANT: Do not install this lighting system in a wet location.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 1-855-HD-HAMPTON.

### Warranty

# LIMITED WARRANTY WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

#### WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.


Contact Customer Care at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

#### **Pre-Installation**


#### PLANNING INSTALLATION

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.

#### **TOOLS REQUIRED**

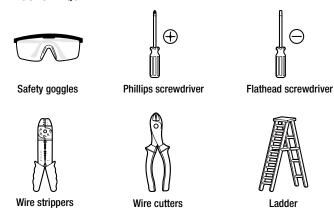


#### HARDWARE INCLUDED

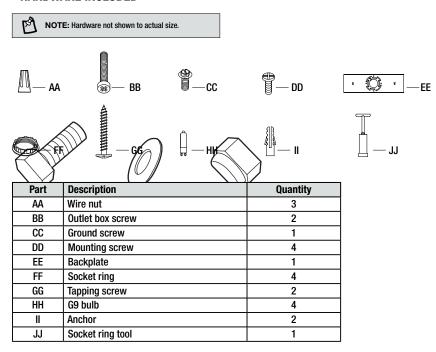

# **Pre-Installation (continued)**

#### PACKAGE CONTENTS

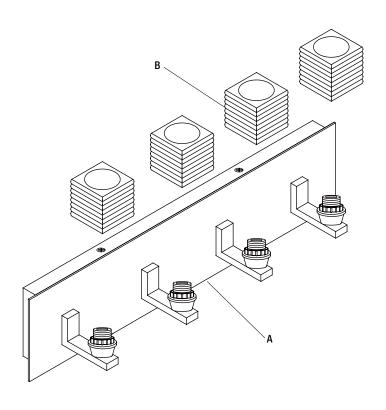

Part	Description	Quantity
Α	Fixture body	1
В	Glass shade	4


#### Installation

## Installing the universal crossbar

### A.

WARNING: Turn off power at the main fuse box.

- Carefully unpack the fixture. Lay out all the parts on a clean surface.
- □ Unscrew the mounting screws (DD) from the fixture body (A) and remove the backplate (EE). Using the backplate (EE) as a guide, mark on the wall with the outlet box (not included) the locations for anchors (II) with a pencil (not included). Drill a 1/4 in. hole at marks, then insert anchors (II). Secure the backplate (EE) to the outlet box with the outlet box screws (BB). Align the keyholes in the backplate (EE) with the anchors (II) and insert the tapping screws (GG).

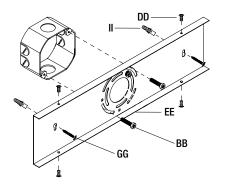


# **2** Making the electrical connections



NOTE: Always use the wire nuts (AA) to connect wires and push all excess wires and connections back into the junction box (not included).


- Fasten the open end of the ground wire (bare copper or green wire) to the ground wire from the junction box or the ground screw (CC) on the backplate (EE).
- Connect the black wire of the power supply to the black wire of the fixture and connect the white wire of the power supply to the white wire of the fixture.

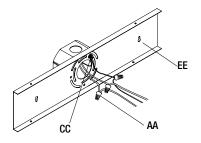

/ WHITE WIRE	<u> </u>	WHITE WIRE
FROM HOUSE		FROM FIXTURE
BLACK WIRE	4	BLACK WIRE
FROM HOUSE		FROM FIXTURE
GROUND WIRE	<b>A</b>	GROUND WIRE
FROM HOUSE		FROM CANOPY ,

# 3 Installing the fixture body


 Attach the fixture body (A) to the backplate (EE) and secure it with the supplied mounting screws (DD).

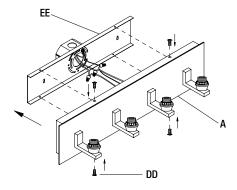

### Installation (continued)


# 4 Installing the glass shades

- Remove the socket ring (FF) from the socket of the fixture body (A) by hand.
- Place the glass shade (B) on the socket. Secure with the socket ring (FF) by using the socket ring tool (JJ). Do not overtighten.
- □ Repeat for the other glasses (B).

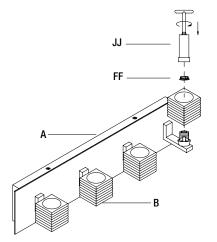

## 5 Installing the bulbs

□ Install 60W max. G9 bulbs (HH) (included) to each socket of the fixture body (A).

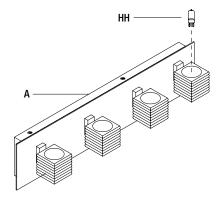

### **Care and Cleaning**

□ Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

## **Troubleshooting**

Problem	Possible Cause	Solution
□ The bulb will not light.	□ The bulb is burned out.	□ Replace the light bulb.
	□ The power is off.	□ Ensure that the power supply is turned on.
	□ The circuit breaker is off.	☐ Ensure that the circuit breaker is set to the ON position.
☐ The fuse blows or the circuit breaker trips when the light is turned on.	□ There are too many items on one circuit.	□ Unplug the other items on the circuit. □ Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.