decora®

LED / CFL / INCANDESCENT SLIDE DIMMER

Single Pole or 3-Way

Cat. No. DSLØ6 - LED/CFL 300W (2.5A), Incandescent 600W 120VAC. 60Hz

WARNINGS AND CAUTIONS:

at the dimmer

INSTALLATION INSTRUCTIONS

LEVITON

DI-000-DSL06-02B

WARNINGS AND CAUTIONS:

- TO AVOID FIRE, SHOCK, OR DEATH: TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring or servicing fixture!
- TO AVOID FIRE, SHOCK, OR DEATH: use with compatible dimmable LED and CFL bulbs, incandescent or 120V halogen fixtures only. For a complete list of compatible LED and CFL bulbs refer to www.leviton.com/universal.

Ruler

 \cap

Cutters

• To be installed and/or used in accordance with appropriate electrical codes and regulations.

Electrical Tape

- If you are unsure about any part of these instructions, consult an electrician.
- · Use this device with copper or copper clad wire only.


Tools needed to install your Dimmer

Slotted/Philips Screwdriver Pliers

Changing the color of your Dimmer

If a color change kit is provided with your device, proceed with the following step before wiring the device if you need to change the color. Otherwise, proceed with the "Installing Dimmer by itself or with other devices" section.

Pencil

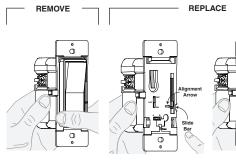

hottom

Press the side of the color kit at either bottom tab and pull forward to release.

Align slide bar with Insert top tabs of the alignment arrow as color kit into the slots on shown. Move the slide the top of the dimmer. bar of the color kit to the Then press the bottom of the color kit in until it snaps into place.

Installing Dimmer by itself or with other devices

In incandescent multi-dimmer installations, the reduction of the dimmer's capacity is required. Refer to the chart for maximum load per dimmer No derating is required for use in dimmable CFL or dimmable LED multidimmer installations.

	, e	(in the second	÷.
r.			
	l Î	¢	¢ ¢


MAXIMUM LOAD PER DIMMER FOR MULTI-DEVICE					
Cat. No.	Load	Single	Two Devices	More than 2 Devices	
DSLØ6	Incand.	600W	500W	500W	
DSLØ6	LED/CFL	300W (2.5A)	300W (2.5A)	300W (2.5A)	

Installing your Dimmer

NOTE: Use check boxes when Steps are completed.




WARNING: TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring or servicing fixture!

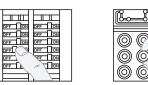


Identifying your wiring application Step 2 (most common):

NOTE: If the wiring in the wall box does not resemble any of these configurations, consult an electrician.

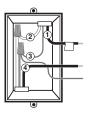

Single Pole 1. Line (Hot) 2. Neutral 3. Ground 4. Load

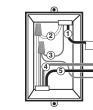

3-Way

- 1. Line or Load (See note below)
- 2. Neutral
- 3. Ground
- 4. First Traveler note color 5. Second Traveler - note color

NOTE: For 3-Way applications, note that one of the screw terminals from the old switch being removed will usually be a different color (Black) or labeled Common. Tag that wire with electrical tape and identify as the common (Line or Load) in both the dimmer wall box and 3-way wall box.



or incandescent. Using the same make/model of each bulb will enhance performance.

· When multiple bulbs are used with one dimmer DO NOT mix bulb types. All bulbs shall be either LED; CFL


To avoid overheating and possible damage to this device and other equipment. DO NOT install to control a

receptacle, a motor or a transformer-operated appliance, or any other lighting sources than those specified.


• Use only one (1) dimmer in a 3 or 4-way circuit. The switch(es) will turn the light on at the brightness level selected


Preparing and connecting wires:

- Make sure that the ends of the wires from the wall box are straight (cut if necessary).
- Remove 5/8" (1.6 cm) of insulation from each wire in the wall box.
- For Single-Pole Application, go to Step 4a.
- For 3-Way Application, go to Step 4b.

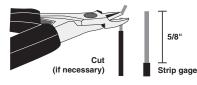

Single-Pole Wiring Application: Step 4a

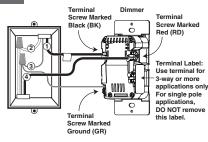

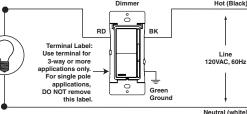


Connect wires per WIRING DIAGRAM as follows:

- · Green or bare copper wall box wire to terminal screw marked "GR".
- · Line Hot wall box wire to terminal screw marked "BK".
- Load wall box wire to terminal screw marked "RD".
- Remaining Dimmer terminal screw marked "RD" should have an insulation label affixed. DO NOT REMOVE this label in a single pole application.



- Hot (Black)

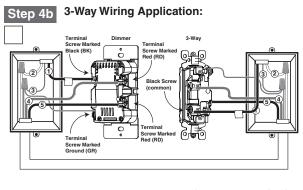

3-Way Hot (Black) Dimme ô RD Line 120VAC, 60H; RD Green Ground ç Black Screw (common) Neutral (white

Connect wires per WIRING DIAGRAM as follows:


- Green or bare copper wall box wire to terminal screw marked "GR".
- · Common (Line hot or Load) wire to terminal screw marked "BK".
- Remove insulating label and connect the first traveler wire to the

terminal screw below marked "RD". · Second traveler wire to the remaining terminal screw marked "RD". Proceed to Step 5.

Step 5 Dimmer Bulb Selector Switch:

Cat. No. DSL06 is pre-set at the factory with the bulb selector switch set to Mode A (LED/Incandescent). For CFL bulb applications the switch should be moved to Mode B (CFL). The lamp selector slide switch also allows the user to adjust the minimum light level when dimming. Information on this feature is found under PROGRAMMING

NOTE: See illustration for location of bulb selector switch.

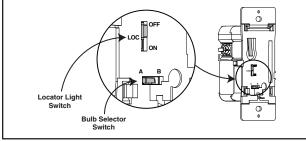

LED/Incandescent (Mode A): The selector switch is pre-set at the factory to this mode. Use this mode for dimmable LED bulbs and incandescent/halogen bulbs. To avoid flickering at the low end of the dimming range you can pre-set the minimum light level. See PROGRAMMING to manually program the minimum light level.

CFL (Mode B): To be used for dimmable CFL bulbs only. In this mode the dimmer provides a pre-set kick-start to aid the lamp in starting. To avoid flickering at the low end of the dimming range you can pre-set the minimum light level. See PROGRAMMING to manually program the minimum light level.

Locator Light Switch (LOC): The LED Locator Light will illuminate when the load is OFF. To disable the Locator Light move the Locator Light Switch to the OFF position.

Testing your Dimmer prior to mounting in the Step 6 wall box:

· Restore power at circuit breaker or fuse. ô 0

Dimmer Mounting: Step 7

TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.

turn ON to brightest level.

TROUBLESHOOTING section.

Installation may now be completed by carefully positioning all wires to provide room in wall box for dimmer. Mount dimmer into box with mounting screws supplied. Attach wallplate.

Carefully holding dimmer, move slider

control lever to highest position and press

If lights does not turn ON, refer to the

the top of the Decora® rocker. Lights should

Restore Power: Step 8

Restore power at circuit breaker or fuse. Installation is complete.

Programming

Setting Minimum Light Level

- 1. Press bottom of Decora® rocker to turn the dimmer OFF and move the slide bar to the bottom.
- 2. Remove color kit (see Changing the color of your Dimmer section on page 1).
- 3. Set the bulb selector switch to the LED/ Incandescent position (Mode A).
- 4. Press on/off actuator to turn the load ON.
- 5. Set the bulb selector switch to the CFL position (Mode B).
- 6. Raise or lower the slide control level to achieve the desired minimum light level.
- 7. Set the bulb selector switch back to LED/Incandescent position (Mode A).
- 8. A momentary flash of the bulb will occur confirming the new setting.
- 9. Press on/off actuator to turn the load OFF.

10.Replace color kit (see Changing the color of your Dimmer section on page 1). NOTE: For dimmable CFL lamps you must return the bulb selector to the CFL position (Mode B).

Operation

ON/OFF: Press top of Decora® rocker - Lights will turn ON.

Press bottom of Decora® rocker - Lights will turn OFF.

BRIGHTEN & DIM: Move slide bar

- Lights will BRIGHTEN or DIM.

Troubleshooting

- Lights flickering
 - Lamp has bad connection.
 - Wires not secured firmly with wire connectors.
- · CFL and LED flickers at low end of dimming range - Increase the low end of the dimming range. Programming Section - setting minimum light level
- · CFL or LED bulb flickers throughout dimming range - Ensure the bulbs are marked dimmable.
 - Please refer to recommended dimmable LED and CFL bulbs at

Push

ON

OFF

è

Nove Slide

& Dim

I FD

Locato

Liaht

bar to Brighter

- www.leviton.com/universal. Light does not turn ON
- Circuit breaker or fuse has tripped.
- Lamp is burned out.
- Lamp Neutral connection is not wired.

NOTE: If further information is needed in identifying the HOT wire in a 3-Way application, go to Leviton's website at www.leviton.com.

For Technical Assistance Call: 1-800-824-3005 (U.S.A. Only) www.leviton.com

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

© 2014 Leviton Mfg. Co., Inc

DI-000-DSL06-02B

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option. For details visit www.leviton.com or call 1-800-824-3005. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages. including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.

0 mi) / ц 0

െ



Slide ON/OFF Bar Actuator