


IRONKIDS™ fitnessplayground



FITNESS PLAYGROUND ***ITEM NO: 8101***

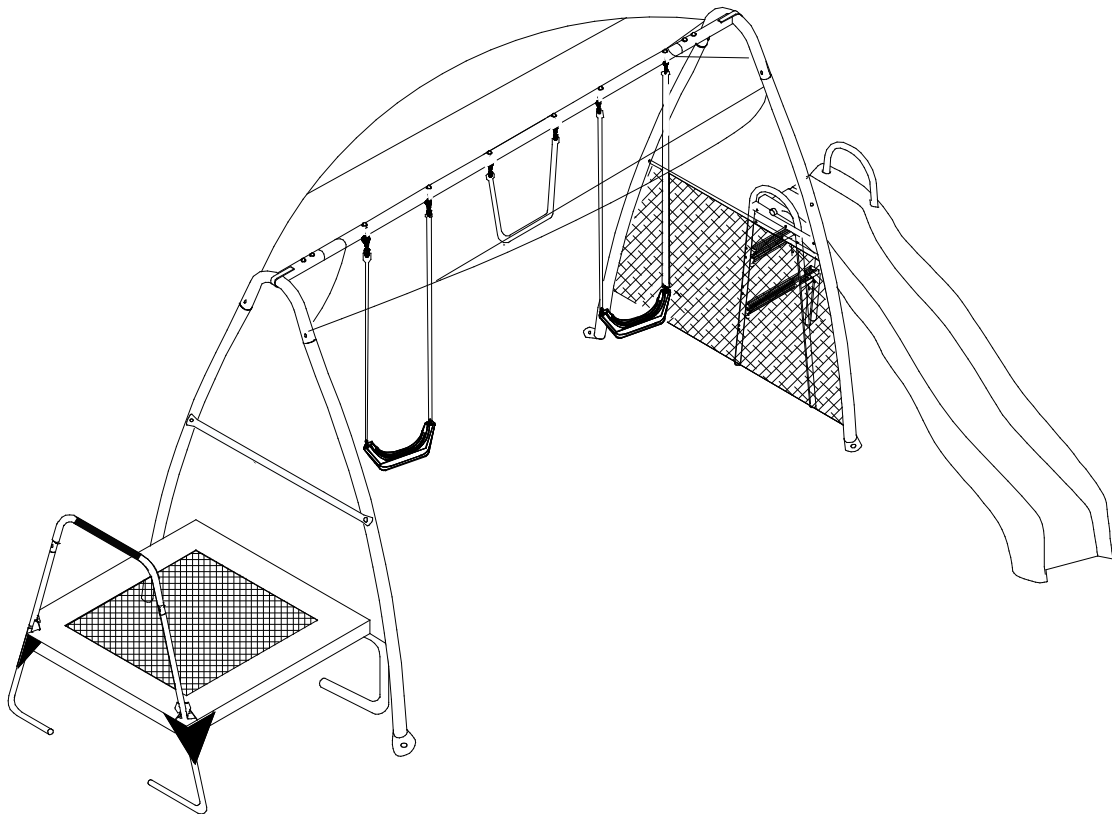

OWNER'S MANUAL

CAUTION: This unit is designed to be used safely by up to 6 children between the ages of 3 years to 8 years old with a maximum weight of 100 pounds (45.4kgs) each, simultaneously, not to exceed a combined weight of 600 pounds (272kgs).

The specifications of this product may vary from this photo and are subject to change without notice. IRONMAN, IRONMAN TRIATHLON and M-DOT are registered trademarks of World Triathlon Corporation. This product is licensed by the World Triathlon Corporation.

IMPORTANT: FOR NORTH AMERICA ONLY

For damage or defective product, questions, replacement parts or any other service support, please contact our customer service department (8:00 AM - 5:00 PM Pacific Standard Time, Daily) by below methods:

For Best Service Email:

Service@paradigmhw.com

Website:

www.paradigmhw.com

Toll-Free:

1-844-641-7922

Please have the following information ready when requesting for service:

Your name

Phone number

Model number

Serial number

Part number

Proof of Purchase

For damaged or defective product please contact our customer service before returning to the store.

*** Email us with detailed information will be this is the best method to receive immediately responds during peak business hours**

Paradigm Health & Wellness, Inc.

1189 Jellick Ave.

City of Industry, CA 91748, USA

TABLE OF CONTENTS

WARRANTY-----	4
IMPORTANT LABELS-----	5
SAFETY -----	6
TOOLS REQUIRED FOR ASSEMBLY -----	7
ASSEMBLY INSTRUCTIONS -----	8
INCLUDED HARDWARE -----	20
PARTS -----	21
OVERVIEW DRAWING -----	29
ANCHOR INSTALLATION -----	30
PARTS REQUEST FORM -----	32

MANUFACTURER’S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGROUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm’s Owner’s Manual. Paradigm’s obligation under this warranty applies to the following:

COMPONENT	LENGTH OF WARRANTY
Structural Frame	Life time
All Other Components	180 days

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm’s installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product’s warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service department:

1-844-641-7922

Daily 8:00 AM - 5:00 PM (PST).

service@paradigmhw.com

When ordering replacement parts please have the following information ready:

- 1. Owner’s Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

IMPORTANT LABELS



⚠ WARNING
 For canopy: Make sure all pole connections are tight and check the post-tensioning before use.
 Installation over a hard surface such as concrete, asphalt, or gravel may cause the equipment to become damaged or cause injury or death from falls.
 Children have died when hood or neck drawstrings on their clothing or equipment got caught on equipment. Parents are advised to remove hood and neck drawstrings from clothing.

⚠ AVERTISSEMENT
 Pour canopy: S'assurer que toutes les connexions des poteaux sont bien serrées et vérifier les tirants avant l'utilisation.
 L'installation sur une surface dure comme du béton, de l'asphalte ou de la terre compactée peut causer des dommages à l'équipement, ou entraîner des blessures, voire la mort.
 Des enfants sont morts lorsque des cordons de serrage sur les capuches ou encadrements de vêtements ont coincé les enfants dans l'équipement. Les parents sont avisés de retirer les cordons de serrage sur les encadrements et capuches des vêtements.

⚠ WARNING
 - Use at your own risk
 - For family domestic use and for outdoor use only
 - This play set complies with ASTM F 1148-09
 - This product has a maximum weight limit of 100 lbs per child and up to 4 children on it at one time.

⚠ AVERTISSEMENT
 - Utilisez l'équipement à vos propres risques
 - Réservé à un usage familial et domestique, et à un usage extérieur.
 - Cet ensemble de jeu est conforme à la norme ASTM F 1148-09.
 - La limite de poids maximale est de 45 kg par enfant et l'équipement peut accueillir jusqu'à 4 enfants à la fois.

ADULT SUPERVISION REQUIRED FOR USE AT ALL TIMES
NECESSAIRE LA SURVEILLANCE D'UN ADULTE REQUIS POUR UNE UTILISATION EN TOUT TEMPS

READ MANUAL BEFORE USE
LIRE LE MANUEL AVANT UTILISATION.

ALWAYS WEAR PROPER FOOTWEAR
TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.

DO NOT USE EQUIPMENT WHEN WET
NE PAS UTILISER L'ÉQUIPEMENT LORSQU'IL EST MOUILLÉ.


NO RUNNING, PUSHING, SHOVING, OR ROUGH-HOUSING
NE PAS COURIR, POUSSER, BOUSQUILLER, SE BAGARRER.

FOR KIDS AGES 3 - 8 YEARS
POUR LES ENFANTS DE 3 - 8 ANS

ADULT SUPERVISION IS REQUIRED.
LA SUPERVISION D'UN ADULTE EST REQUISE.

IRONKIDS
 For customer assistance call: Pour le service à la clientèle
1-844-641-7922
 8 am - 5 pm PST
 Daily
1-944-641-7922
 Tous les jours
 8:00 h - 17 h (PMP)

11434981010001
 Serial number/Numéro de série:
MADE IN CHINA/FABRIQUÉ EN CHINE

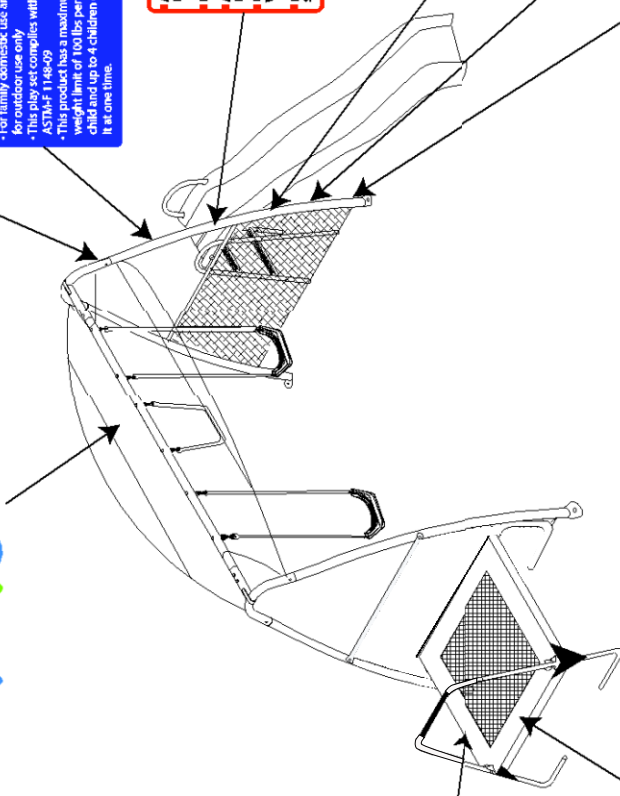

Adult supervision is required.
 La supervision d'un adulte est requise.

Do not sit on the hood or neck, nor push or pull on the equipment. Excessive movements will increase the risk of falling on your head or neck.
 Ne pas s'asseoir sur la tête ou le cou. Les mouvements excessifs augmentent le risque d'atterrir sur la tête ou le cou.

Only one person at a time on the trampoline.
 Seulement une personne à la fois doit se trouver sur le trampolin.



SAFETY

Read all instructions carefully before assembling operating this product. Retain this Owner's manual and keep the original purchase receipt for future reference.


1. Before assembling the Fitness Playground, find level ground no less than 6 feet from any structure or obstruction to the Fitness Playground. The Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product **MUST** be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle.
8. Do not hang on or climb from structural members of the Fitness Playground.
9. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
10. This product is intended to be used by children between the ages of 3-8 years old.
11. Be sure to observe your children and ensure that they have the strength and skills to enjoy all the rides safely before use on their own.
12. Do not allow children to walk close to, behind, or in front of moving items.
13. Do not allow children to twist the chains on the swing or loop them over the top bar. This may reduce the strength of the chain.
14. Teach and instruct children not to swing empty seats.
15. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
16. Warn children not to use the equipment in any manner other than intended.
17. Warn children not to get off the rides while in motion.
18. Warn children to dress appropriately. Loose fitting clothing is potentially hazardous when using the Fitness Playground.
19. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
20. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
21. Parents should check swing chains to ensure they are secure.
22. Do not place any part of the body near moving parts.
23. Never slide head first down the slide.
24. Ensure that all swings and chains are secured at both ends.
25. Never attach any materials that are not specifically designed for use with this swing set, such as jump ropes, pet leashes, rope or cords and other chains as these pose a potential strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.
27. When using the trampoline, do not perform flips, as this will increase the chances of injury. No more than one person at a time on the trampoline. Do not allow children to use without proper supervision.

Play Ground Rules


1. Do not use equipment when wet.
2. No running, pushing, shoving, or roughhousing.
3. Do not use play equipment before reading manual.
4. Always wear proper footwear.

TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

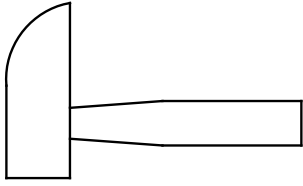


Hammer

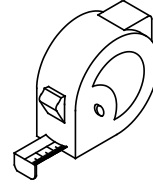


Tape Measure




Phillips Screwdriver

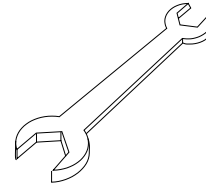


Wrench 13x10mm
(Included)

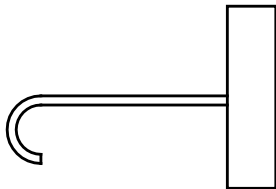

Spring Loading
(Included)

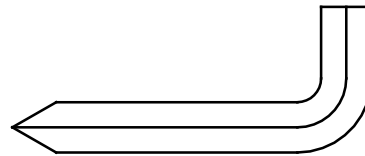

Big Allen Wrench with Phillips Screwdriver M5
(Included)

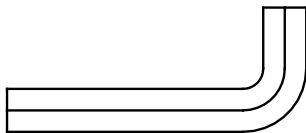

Allen Wrench M5
(Included)

ASSEMBLY INSTRUCTIONS

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.


TIGHTENING NUTS & BOLTS


- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts, and bolts and properly tighten them before using the playground equipment.

CARE AND MAINTENANCE

Inspect all Nuts, Bolts, and Anchors monthly, tighten as required.


Main Frame Layout

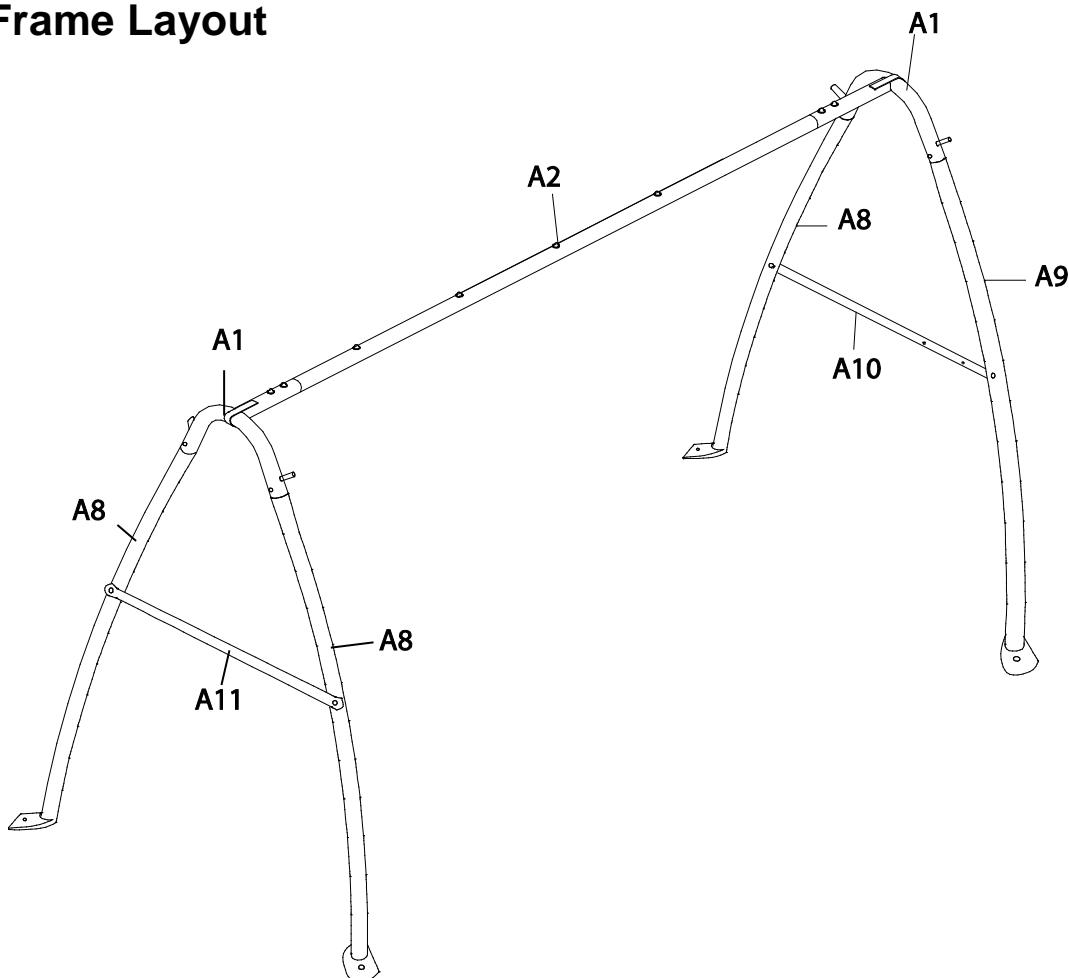

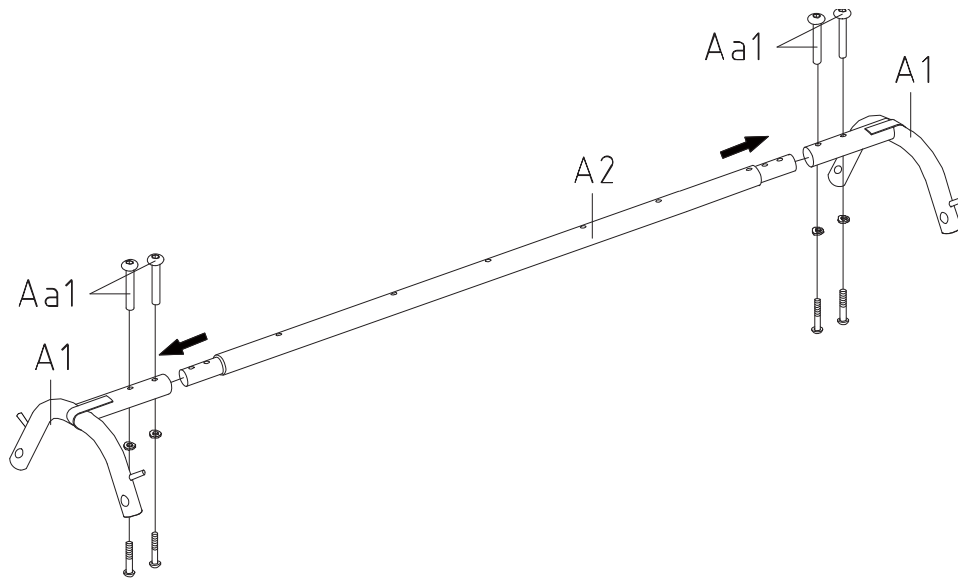


Step 1

- Remove four sets of hardware Aa1 from the Top Bar A2.
- Attach a Side Top Bar A1 on each side of the Top Bar A2 using the four sets of removed hardware Aa1.

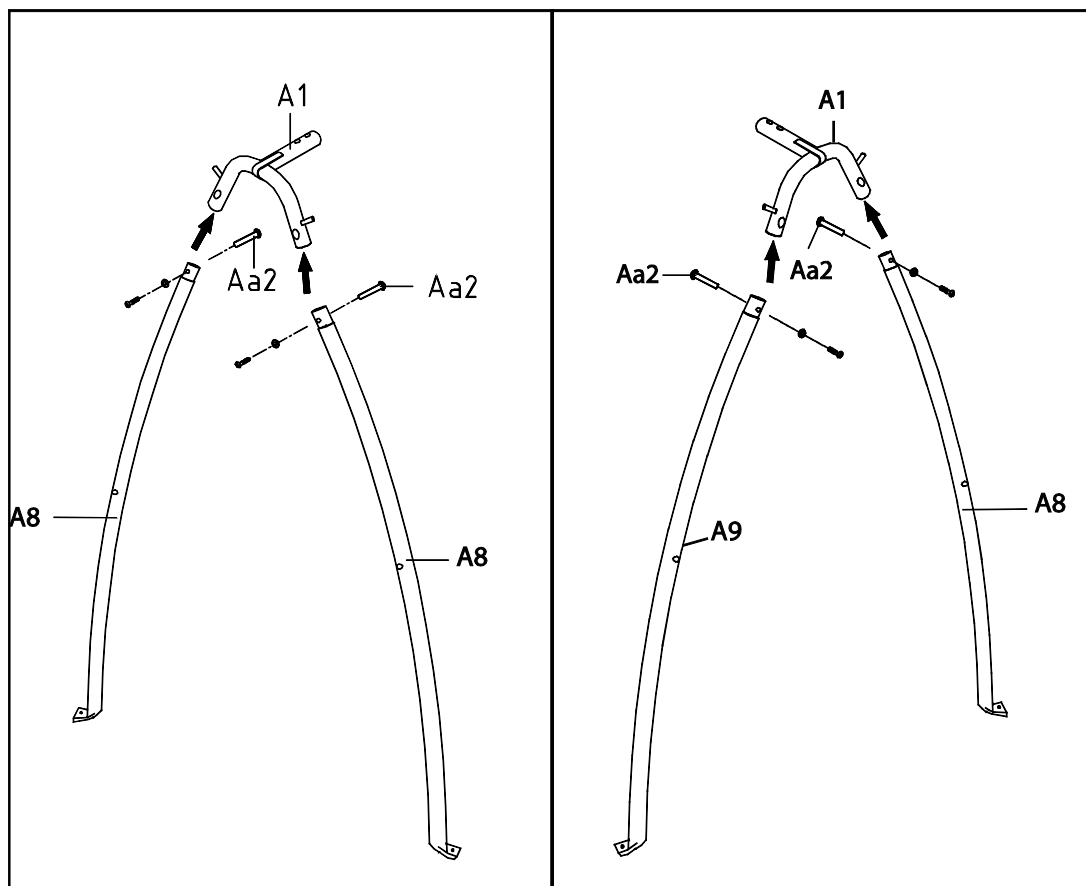


Step 2

- Remove the top sets of Hardware Aa2 from the Legs A8.
- Insert a Leg A8 into each socket of the Side Top Bar A1.
- Align the holes and secure them using the two sets of Hardware Aa2 that were removed.
- Repeat this step for the opposite side using a Leg A8 and Leg (Sticker) A9. For reference, See page 8.

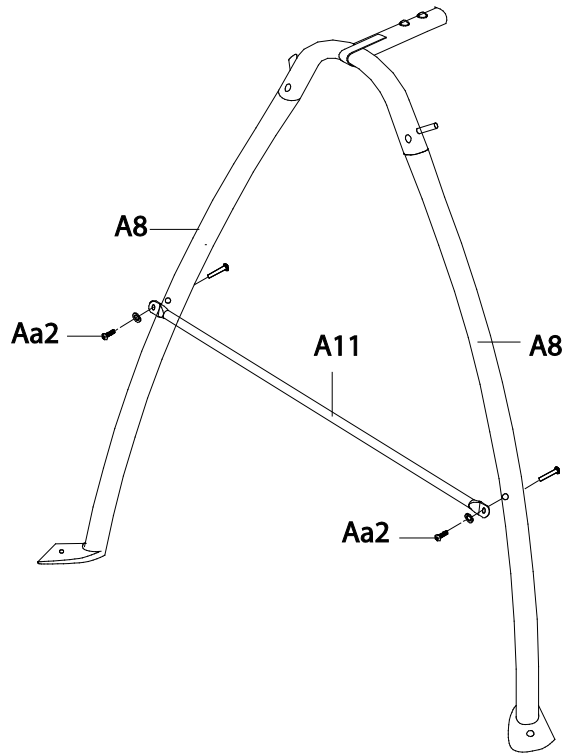

Step 3


- Remove the two bottom sets of hardware Aa2 from the Legs A8.
- Attach the Cross Bar A11 onto the Legs A8 using the two sets of hardware Aa2 that were removed.

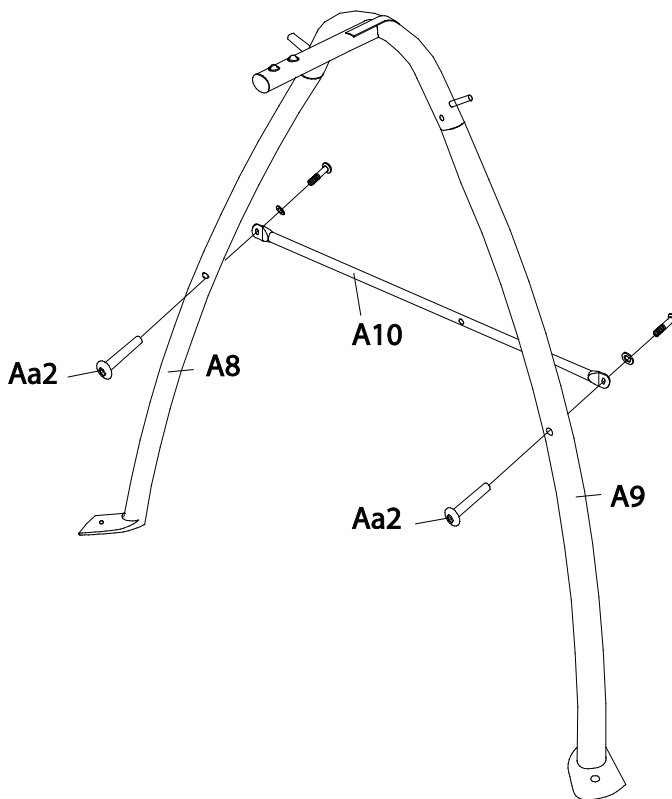

Step 4


- Remove two sets of Hardware Aa2 from the Leg A8 and Leg (Stickers) A9.
- Attach the Slide Mounting Bar A10 onto Leg A3 and A4 with the two sets of Hardware Aa2 that were removed. Make sure the Holes in the Slide Mounting Bar A10 are closest to Leg (Sticker) A9.

NOTICE: TIGHTEN ALL HARDWARE ON THE FRAME AT THIS TIME

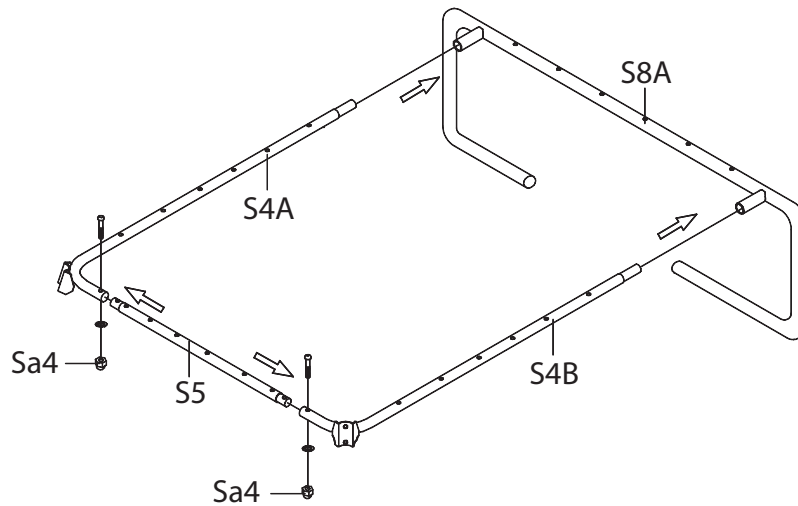

Step 5


- Remove two sets of Hardware Sa4 from the Straight Tube S5.
- Insert the small ends of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B into the sockets of the Elbow Tube S8A. The Welded bracket of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B should face outside.
- Insert the Straight Tube S5 into the openings of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B, align the holes.
- Secure using two sets of the hardware Sa4 that were removed.

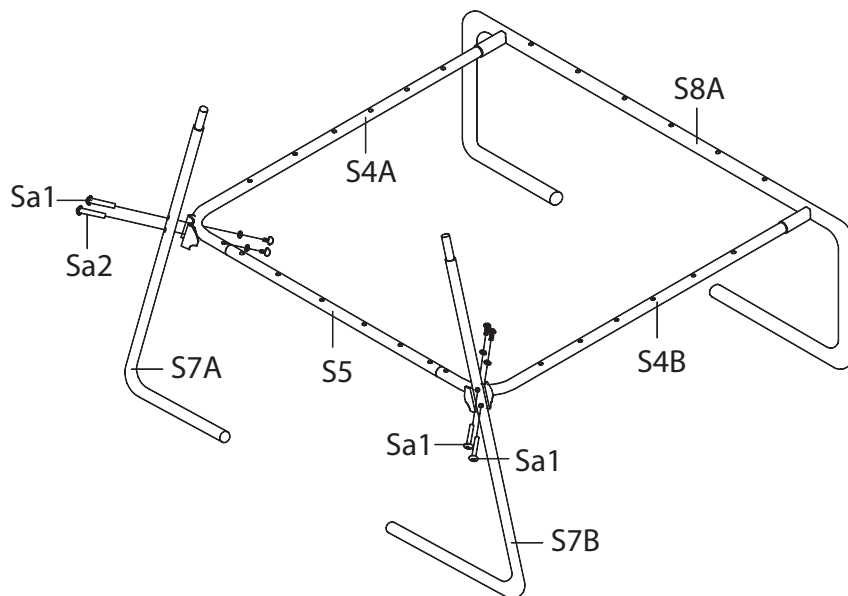

Step 6

- Remove two sets of the Hardware Sa1 from the Handlebar Base Tube (Left) S7A.
- Remove two sets of the Hardware Sa2 from the Handlebar Base Tube (Right) S7B.
- Put the Handlebar Base Tube (Left) S7A onto the Welded bracket of the L-Shaped Tube (Left) S4A, and put Handlebar Base Tube (Right) S7B onto the outside of the L-Shaped Tube (Right) S4B, align the holes.
- Secure using two sets of the Hardware Sa1 that were removed for the upper hole of Handlebar Base Tube (Left) S7A and Handlebar Base Tube (Right) S7B.
- Secure using two sets of the Hardware Sa2 that were removed for the lower hole of Handlebar Base Tube (Left) S7A and Handlebar Base Tube (Right) S7B.


NOTICE: TIGHTEN ALL HARDWARE

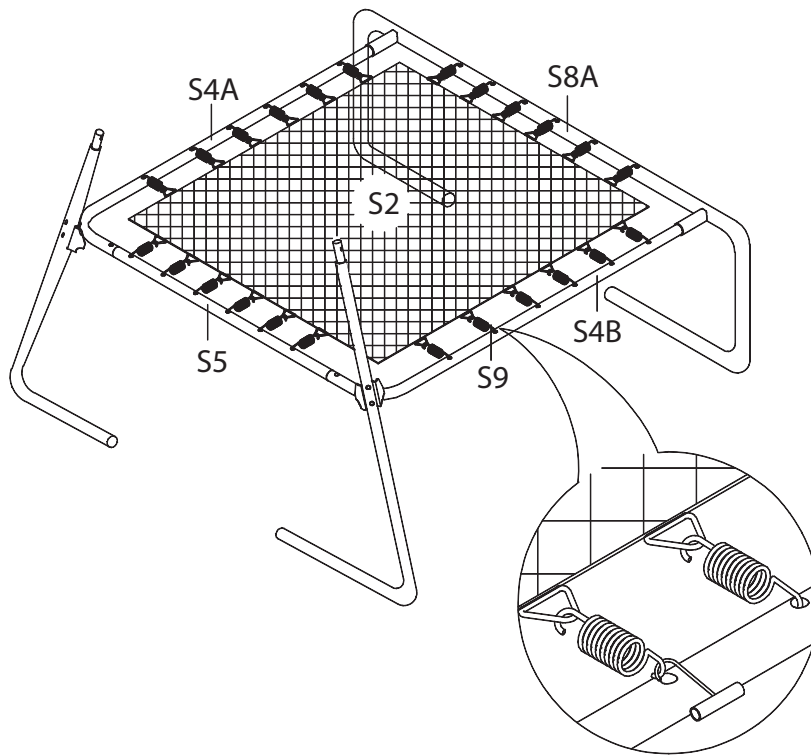

Step 7


- Lay out the Jump Mat S2 and align the triangle rings of the mat with the holes on the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B.
- Attach a Spring S9 with the hook facing down, onto the triangle ring of the mat. Hold the spring loading tool underhand and pull the spring hook towards the holes on the surrounding Frame. Drop hook into the frame hole until it latches on. Do this for all Springs S9 and Triangle Rings.

Note: BE CAREFUL NOT TO PINCH HANDS OR FINGERS ON SPRINGS. WEAR GLOVES TO PREVENT PINCHING. KEEP SPRINGS DRY; WET SPRINGS ARE VERY SLIPPERY.

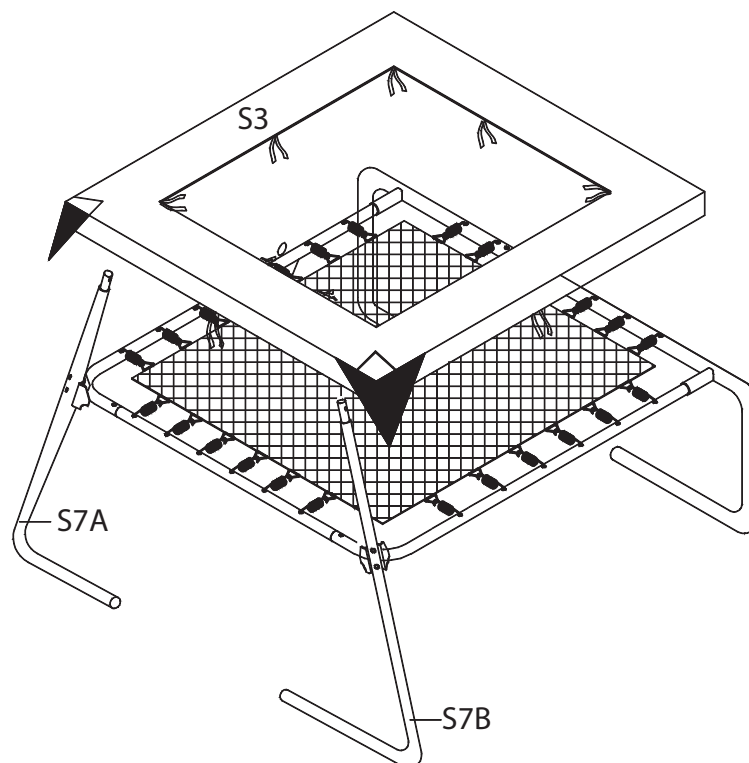

Step 8


- Slide the front two corners of the Frame Pad S3 to the small end of L-Shaped Tube (Left) S7A and L-Shaped Tube (Right) S7B.
- Lay the Frame Pad S3 over the trampoline, so that the springs and the steel frame are covered. Ensure that the Frame Pad S3 covers all metal parts.

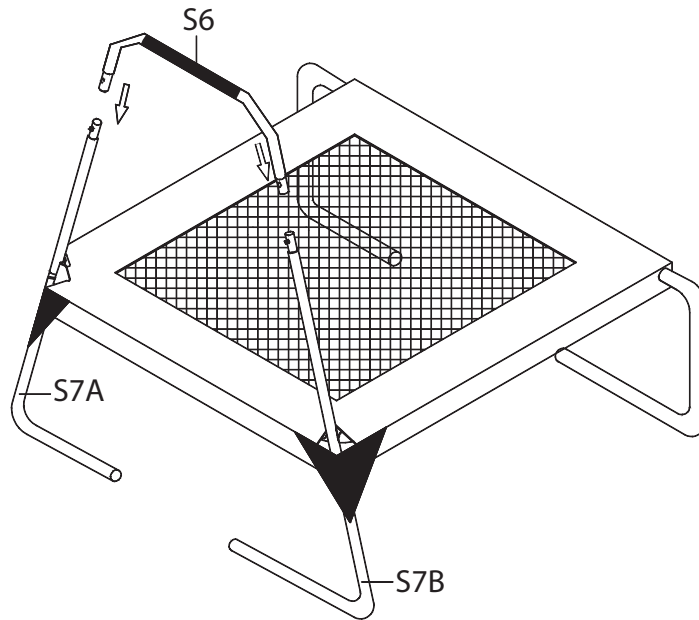

Step 9


- Slide the Handlebar S6 onto the small ends of the L-Shaped Tube S7A and S7B, Ensure that the Pop pins set into place.

.....

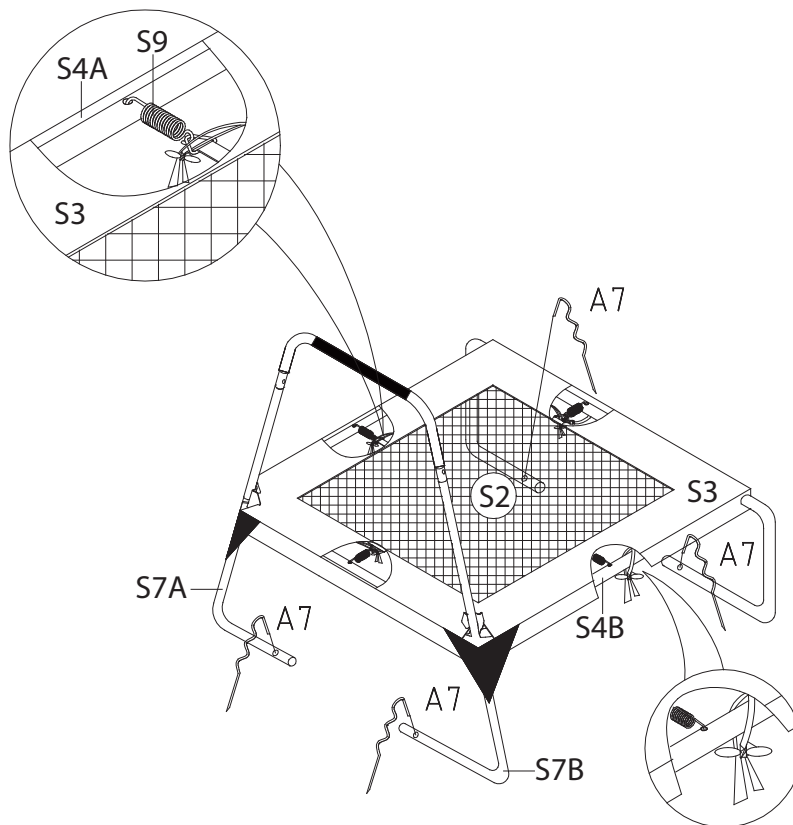

Step 10


- Tie the Straps of the Frame Pad S3 to the triangle rings with a knot. Repeat this for all straps. Make sure the knot is tight and the Frame Pad S3 fits securely over the trampoline.
- Line up the elastic straps over the Frame of the trampoline. Tie the straps making sure every strap is tightly secured.
- Place the trampoline in the desired location and secure it with the Anchors A7. Ensure that the hooked end of the Anchor A7 is securely in the Frame.

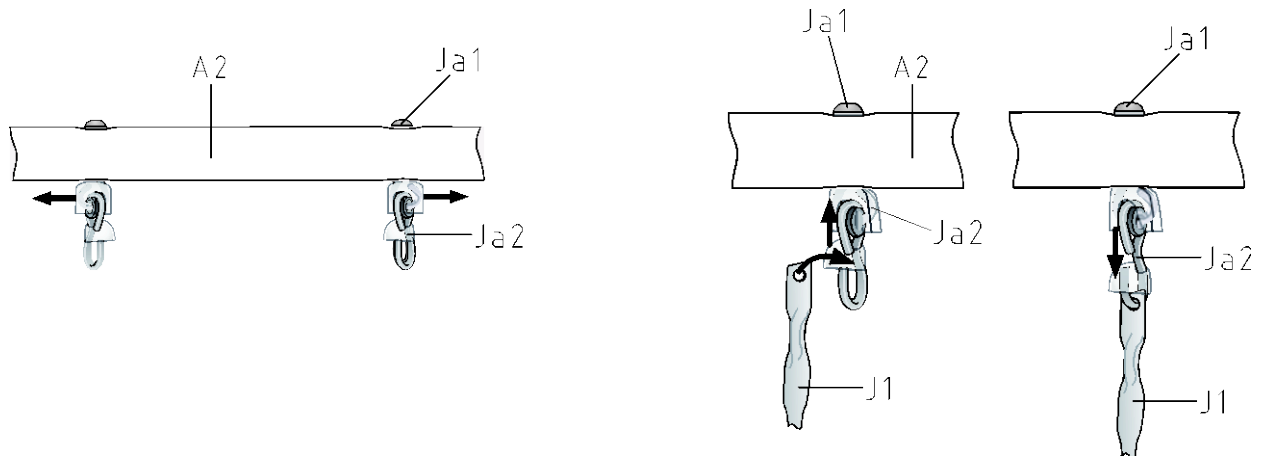

Step 11


- Hang the four Swing Chains J1 in place from the Eye Bolts Ja2 on the Top Bar A2.

.....

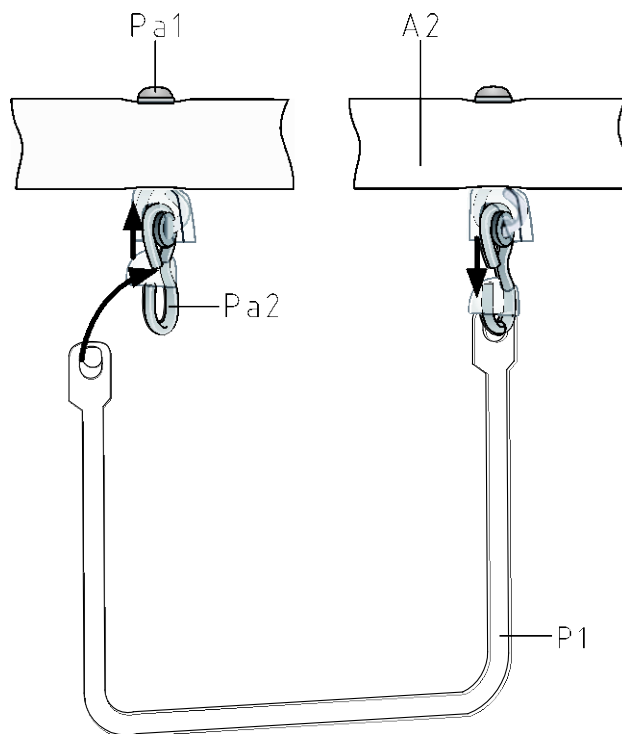


Step 12

- Hang the Trapeze Tube P1 in place from the Eye Bolts Pa2 on the Top Bar A2.

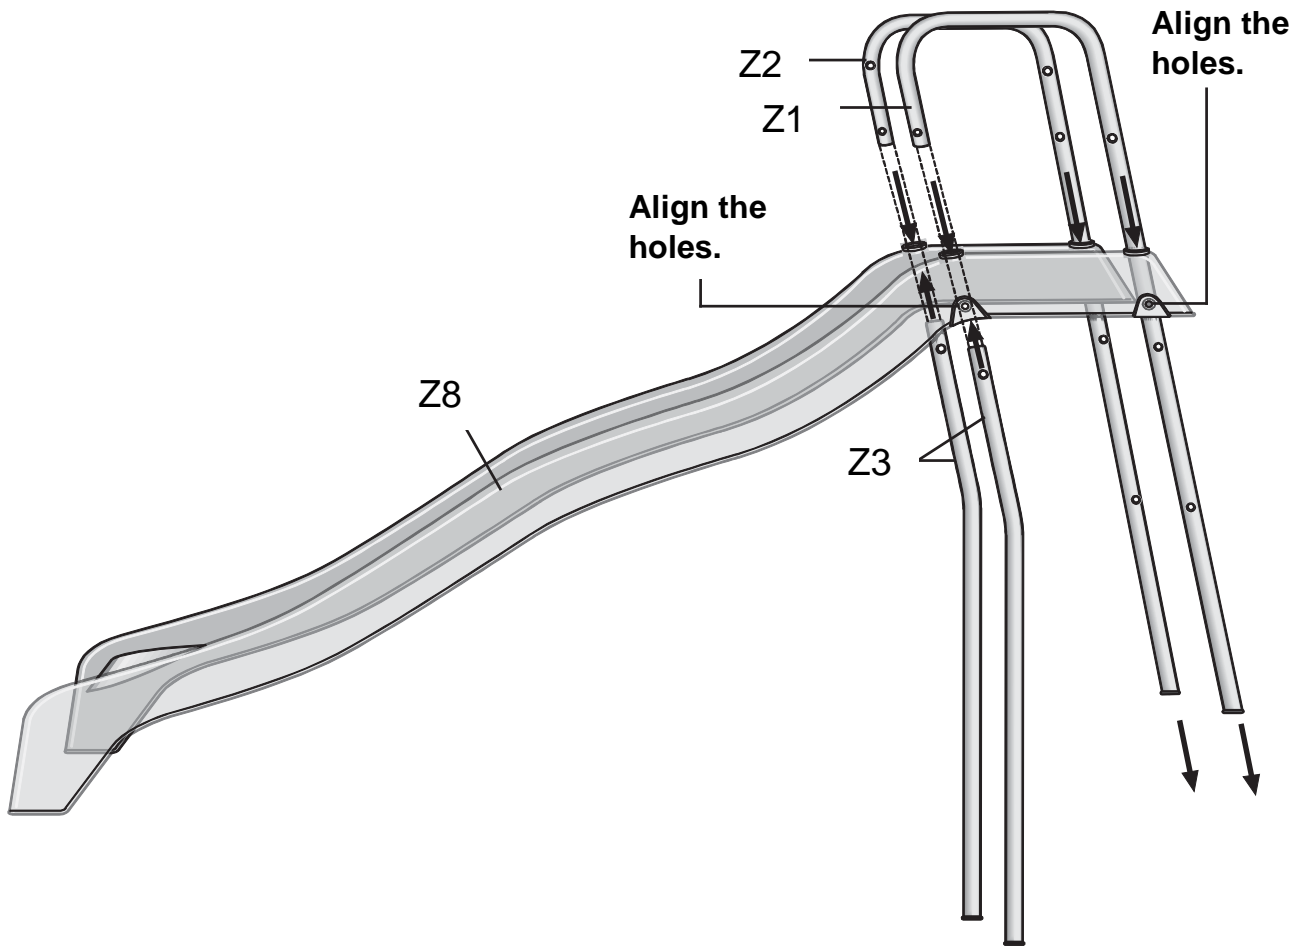


Step 13

- Remove all the preassembled Phillips Head Bolt sets Za1 from the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Insert the longer ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2 into the holes on the rear end of the Slide Z8 and align the holes.
- Insert both Slide Leg Tubes Z3 into the holes on the front end of the Slide Z8 and align the holes.

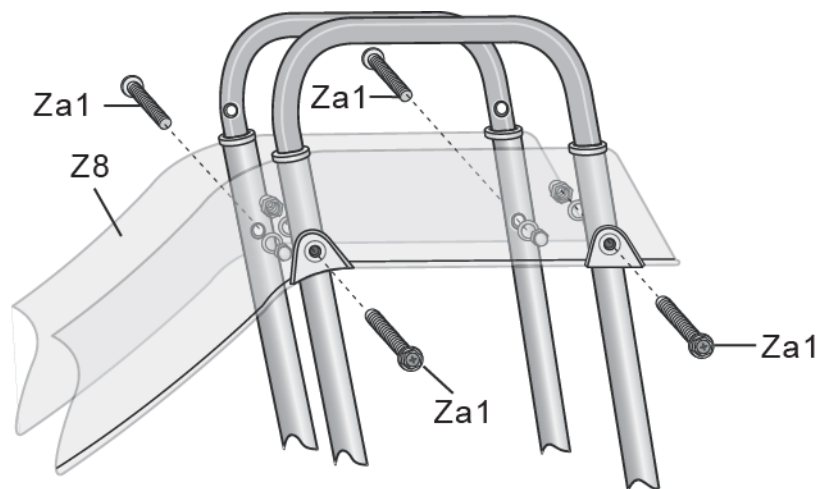


Step 14

- Secure the Slide Z8 using the 4 sets of Hardware Za1 previously Removed.

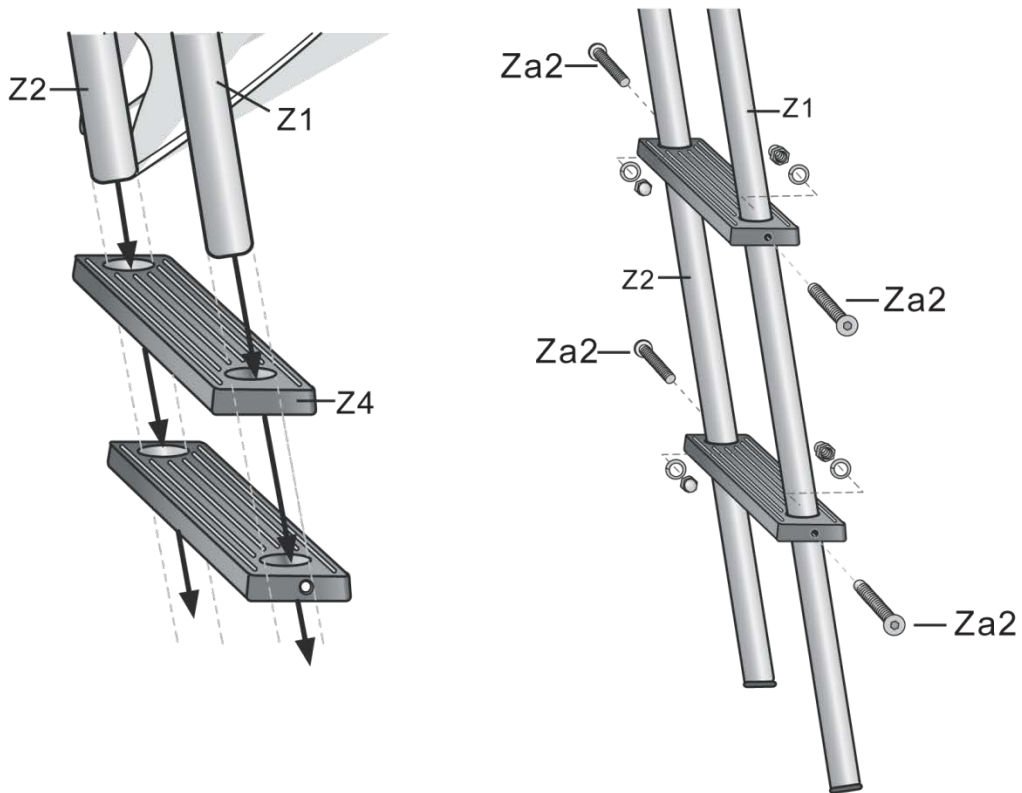


Step 15

- Slide the two Slide Ladder Steps Z4 up the bottom ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2. Align the holes of the Slide Ladder Steps Z4 with the TOP and BOTTOM set of holes on the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Secure the Slide Ladder Steps Z4 using the four sets of Hardware Za2 previously removed.

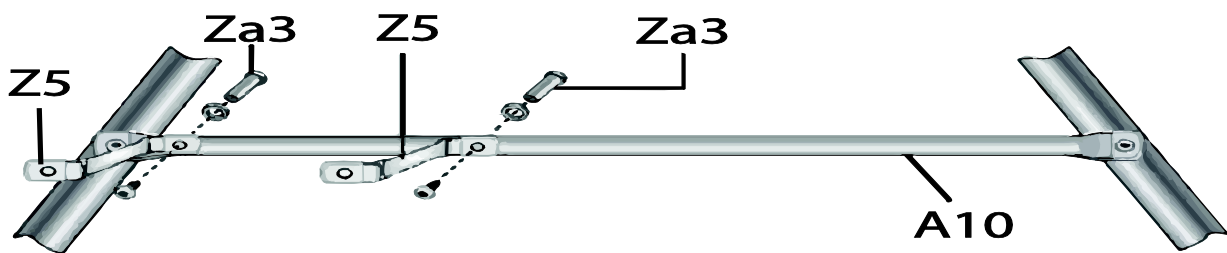


Step 16

- Remove two sets of preinstalled Hardware Za3 from the two Connecting Plates Z5.
- Attach both Connecting Plates Z5 to the Slide Mounting Bar A10 with the two removed sets of Hardware Za3.

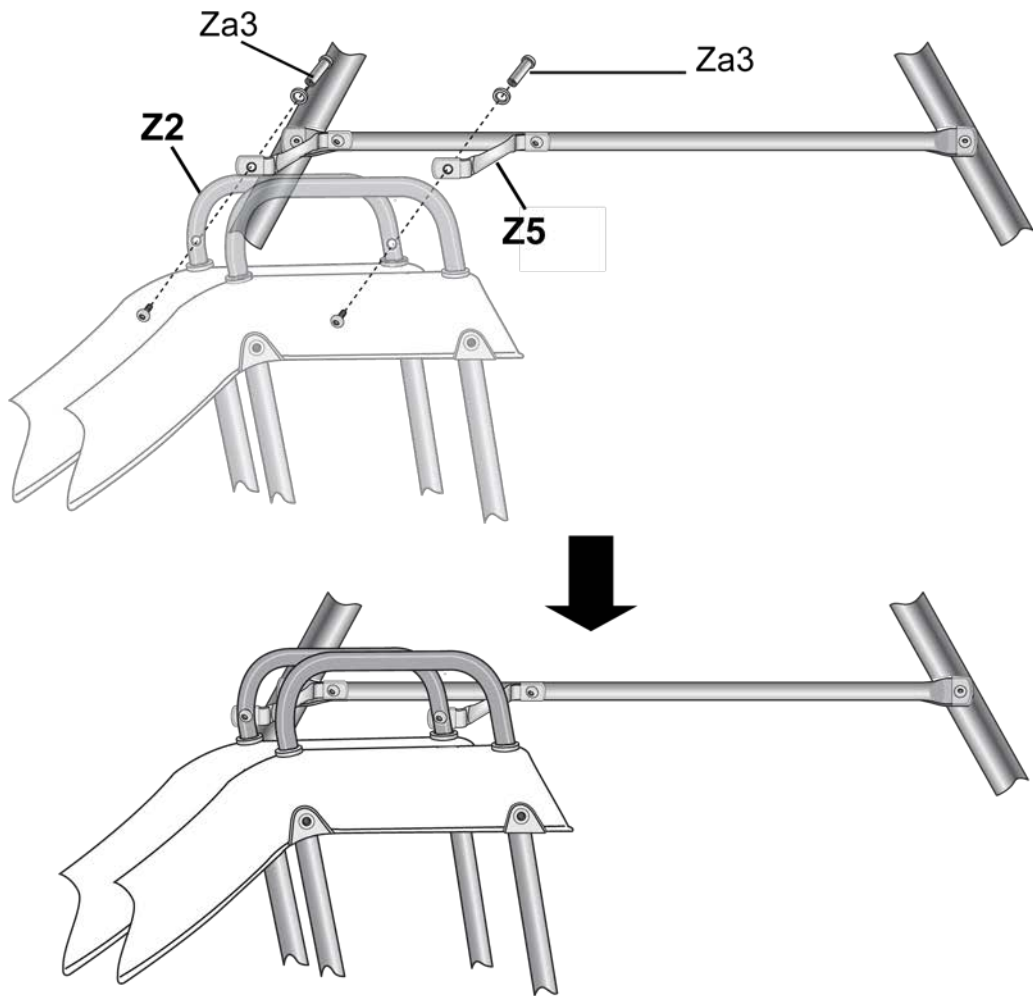

Step 17


- Attach the Slide Ladder Connecting Tube Z2 onto the Cross Bar A10 using the two Connecting Plates Z5 and the two sets of Hardware Za3 that was previously removed.

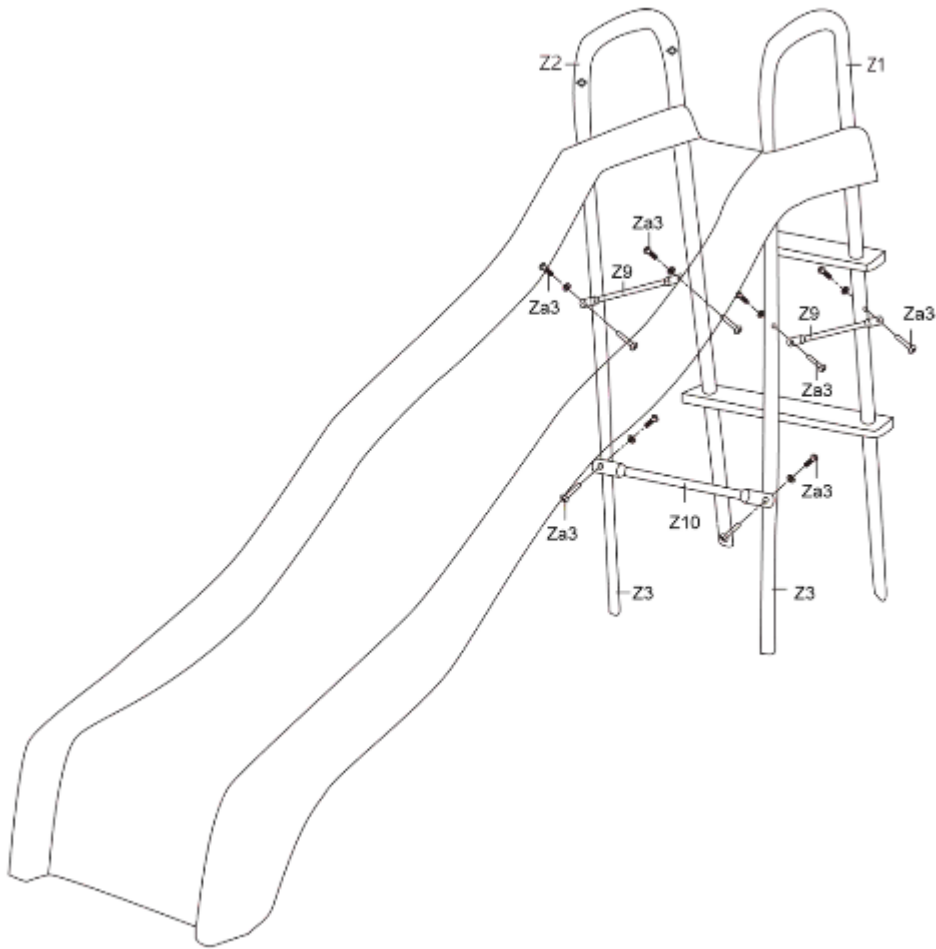

Step 18

- Remove two sets of Hardware Za3 from both Slide Ladder Support Tube Cross Bars Z9.
- Attach one Slide Ladder Support Tube Cross Bar Z9 onto each side of the ladder using the hardware sets Za3 that were removed.
- Remove two sets of Hardware Za3 from the Slide Leg Cross bar Z10.
- Attach the Slide Leg Cross Bar Z3 to the slide using the two sets of Hardware Za3 that were removed.

NOTICE: SECURELY TIGHTEN ALL BOLTS ON THE SLIDE

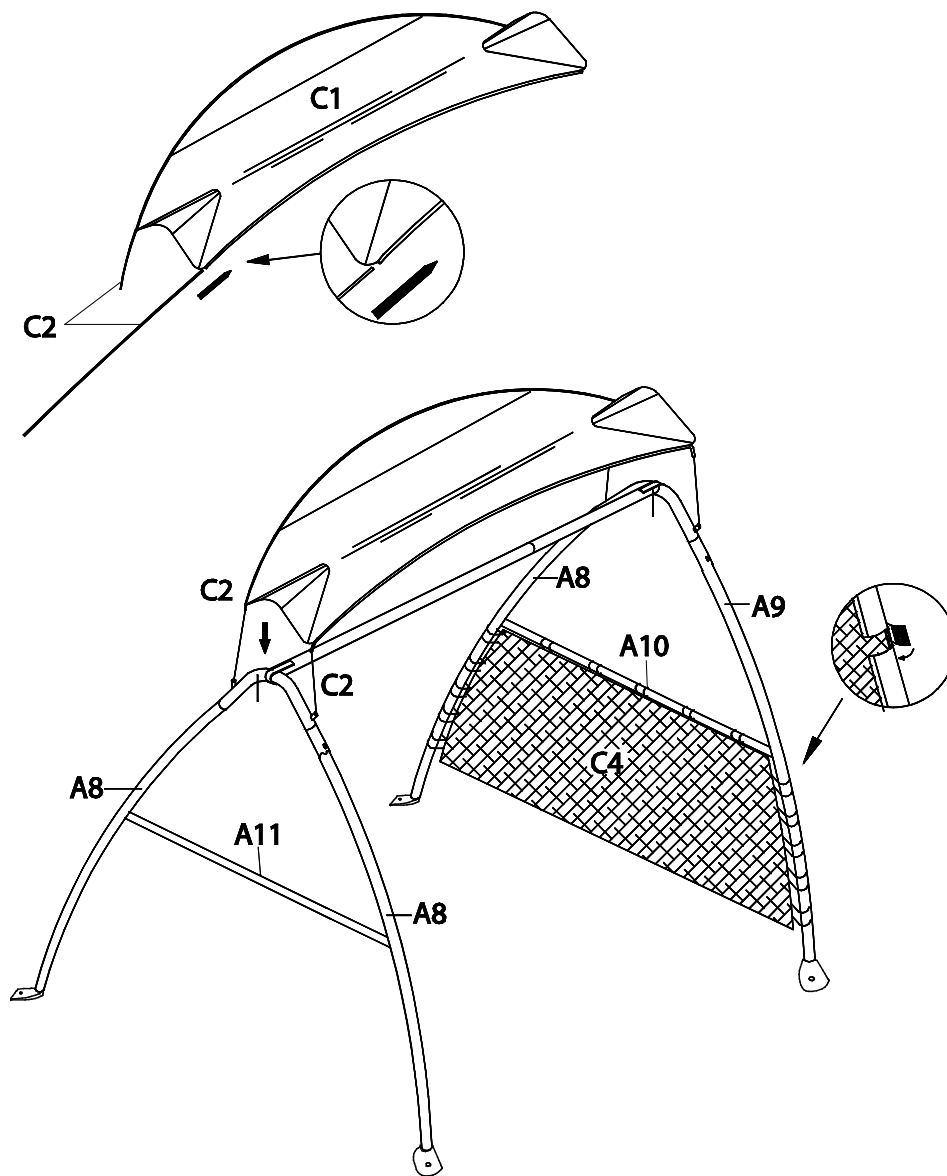

Step 19


- Slide the Plastic Sticks C2 through each side of the Sunshade C1.
- Insert both Plastic Sticks C2 into the holes on the Side Top Bars A1.
- Attach the Protective Net C4 onto the side of the Frame.

Note: Make sure to go back to check all hardware and securely tighten all bolts and nuts before using the playground equipment.


Warning: Do not let children use the playground equipment until it is properly assembled and anchored.

INCLUDED HARDWARE

Hardware used for main frame assembly




Binder Post & Bolt Set (Preassembled)
M8x15 Male Bolt
Ø10x50 Female Bolt
4 SETS



Binder Post & Bolt Set (Preassembled)
M6x12 Male Bolt
Ø8x50 Female Bolt
8 SETS


Hardware used for trampoline assembly



Binder Post & Bolt Set (Preassembled)
M6x12 Male Bolt
Ø8x52 Female Bolt
2 SETS










Binder Post & Bolt Set (Preassembled)
M6x12 Male Bolt
Ø8x26 Female Bolt
2 SETS





M6x32 Bolt Set (Preassembled)
2 SETS



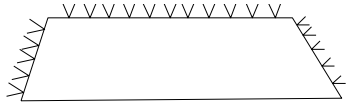
PARTS

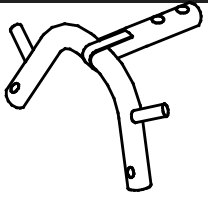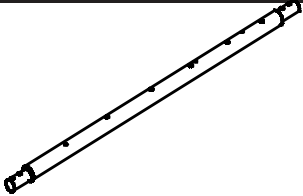Parts used for main frame assembly




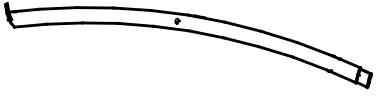
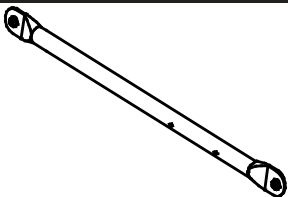
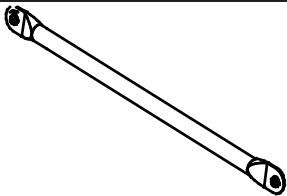




A1		Side Top Bar	2 PCS
A2		Top Bar	1 PC
A7		Anchor	8 PCS
A8		Leg	3 PCS
A9		Leg (Sticker)	1 PC
A10		Slide Mounting Bar	1 PC
A11		Crossbar	1 PC

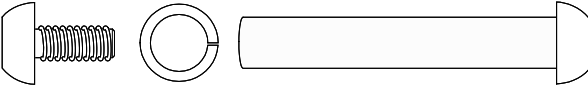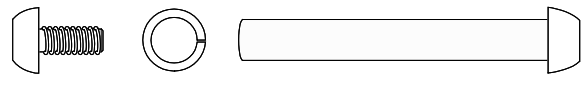Hardware used for main frame assembly

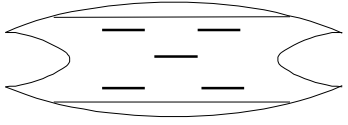

Aa1		Binder Post & Bolt Set (Preassembled)	4 SETS
Aa2		Binder Post & Bolt Set (Preassembled)	8 SETS

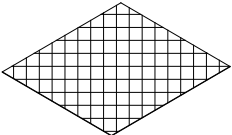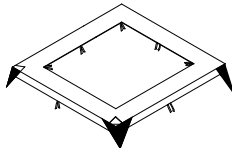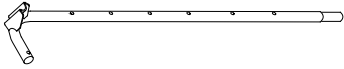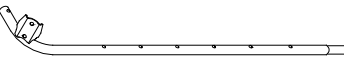
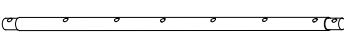
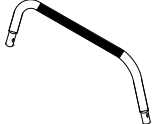
C1		Sunshade	1 PC
C2		Plastic Stick	2 SETS
C4		Protective Net	1 PC

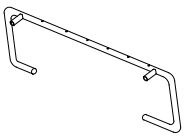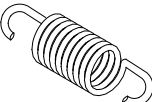Parts used for trampoline assembly

S2		Jump Mat	1 PC
S3		Frame Pad	1 PC
S4A		L-Shaped Tube (Left)	1 PC
S4B		L-Shaped Tube (Right)	1 PC
S5		Straight Tube	1 PC
S6		Handlebar with Foam	1 PC
S7A		Handlebar Base Tube (Left)	1 PC
S7B		Handlebar Base Tube (Right)	1 PC
S8A		Elbow Tube	1 PC
S9		Spring	24 PCS

Hardware used for trampoline assembly



S10		Elbow Tube End Cap (Preassembled)	2 PCS
S11		Handlebar Base Tube End Cap (Preassembled)	2 PCS

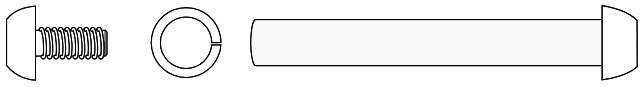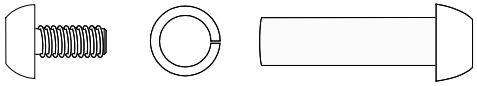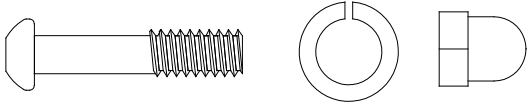Sa1		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa2		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa4		Bolt Set (Preassembled)	2 SETS



Parts used for trapeze assembly

P1		Trapeze Tube	1 PC
----	---	--------------	------

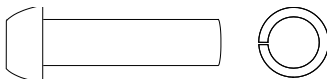

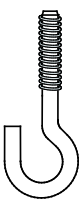
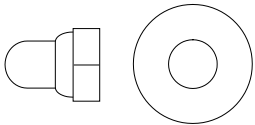
Hardware used for trapeze assembly

Pa1		Female Bolt Set (Preassembled)	2 SETS
Pa2		Eye Bolt Set (Preassembled)	2 SETS




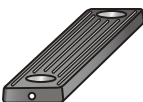
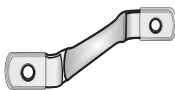





Parts used for swing seats assembly

J1		Swing Chain	4 PCS
J2		Swing Seat	2 PCS

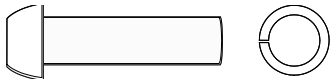


Hardware used for swing seats assembly

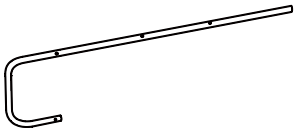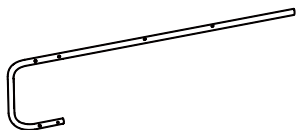Ja1		Female Bolt Set (Preassembled)	4 SETS
Ja2		Eye Bolt Set (Preassembled)	4 SETS
Ja3		Screw Hook (Preassembled)	4 PCS
Ja4		Screw Hook Cap Set	4 SETS

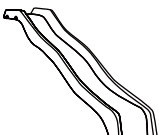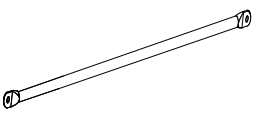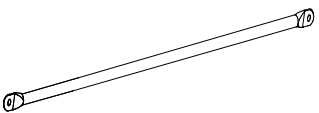
Parts used for slide assembly

Z1		Slide Ladder Support Tube	1 PC
Z2		Slide Ladder Connecting Tube	1 PC
Z3		Slide Leg Tube	2 PCS
Z4		Slide Ladder Step	2 PCS
Z5		Connecting Plate	2 PCS
Z6		Cap for Z1 and Z2 (Preassembled)	2 PCS
Z7		Cap for Z3 (Preassembled)	2 PCS
Z8		Slide	1 PC
Z9		Slide Ladder Support Tube Cross Bar	2 PCS
Z10		Slide Leg Cross Bar	1 PC

Hardware used for slide assembly

Za1		M6X36 Bolt Set (Preassembled)	4 SETS
Za2		M6X42 Bolt Set (Preassembled)	4 SETS
Za3		Binder Post & Bolt Set (Preassembled) M6X12 Bolt Ø8X24 Sleeve Nut	10 SETS

Overview Drawing


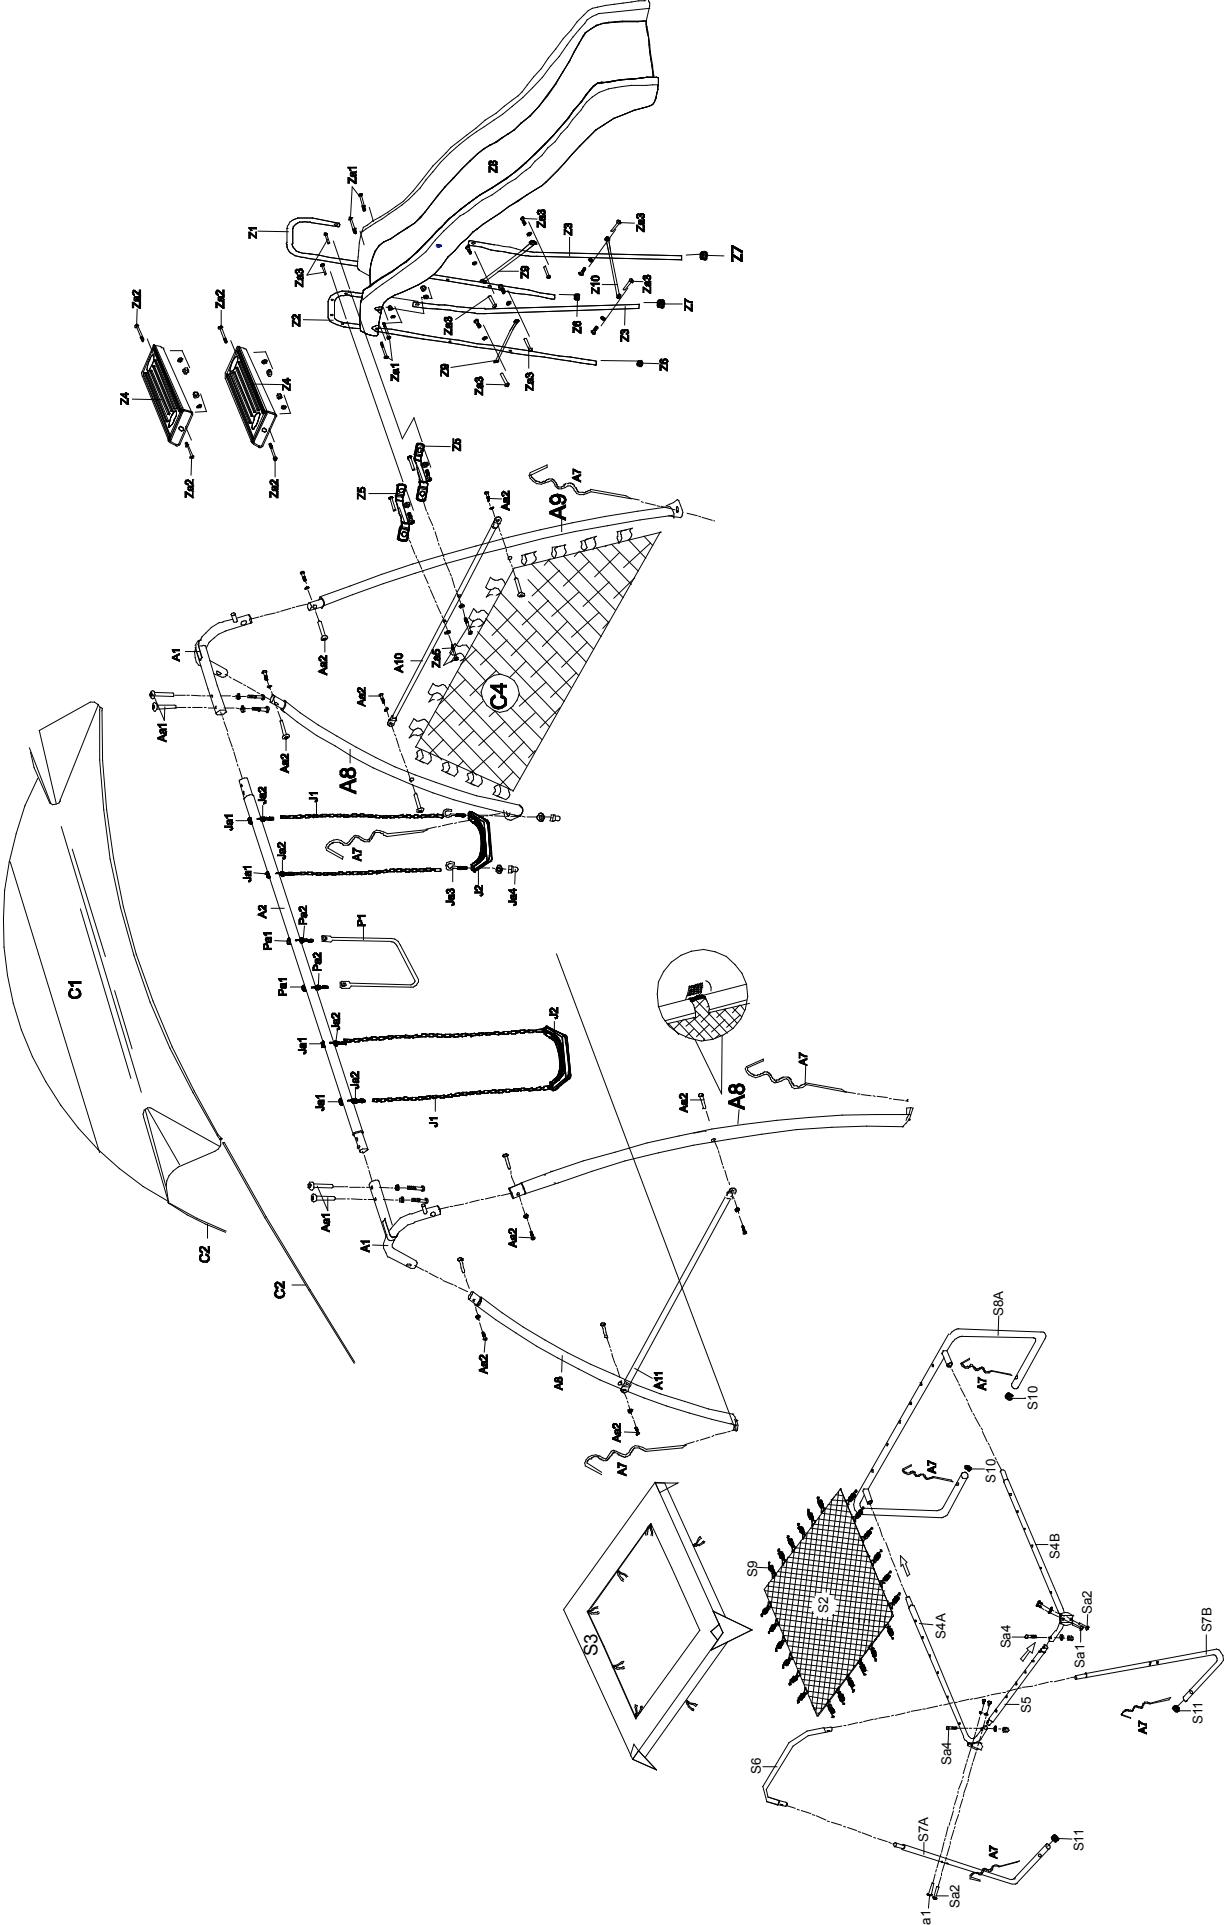


ANCHOR INSTALLATION


You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the Anchor (A7) to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:

Turn the Anchor A7 into the ground until only the hooked end is above the ground next to the leg. Insert the hooked end into the bottom opening of the leg. Ensure that the hooked end is secure in the leg opening.

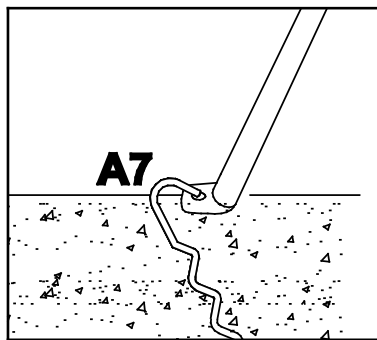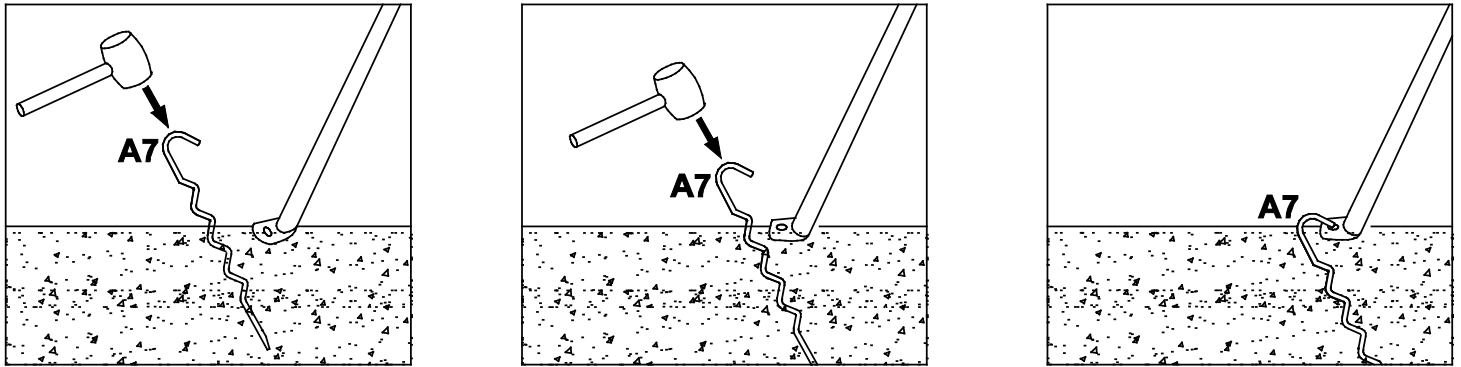

Correct

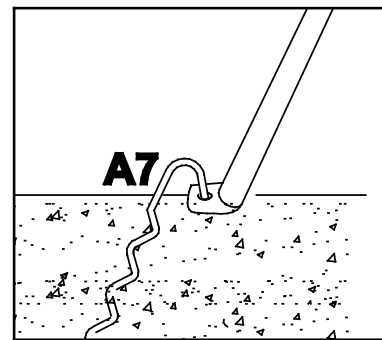


Incorrect


When turning the Anchor A7 into the ground, please make sure the anchor is roughly Perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

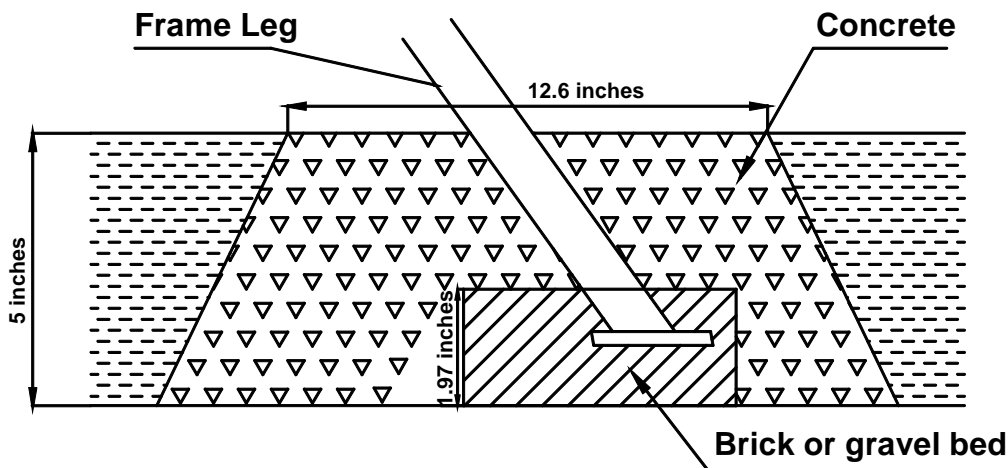

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

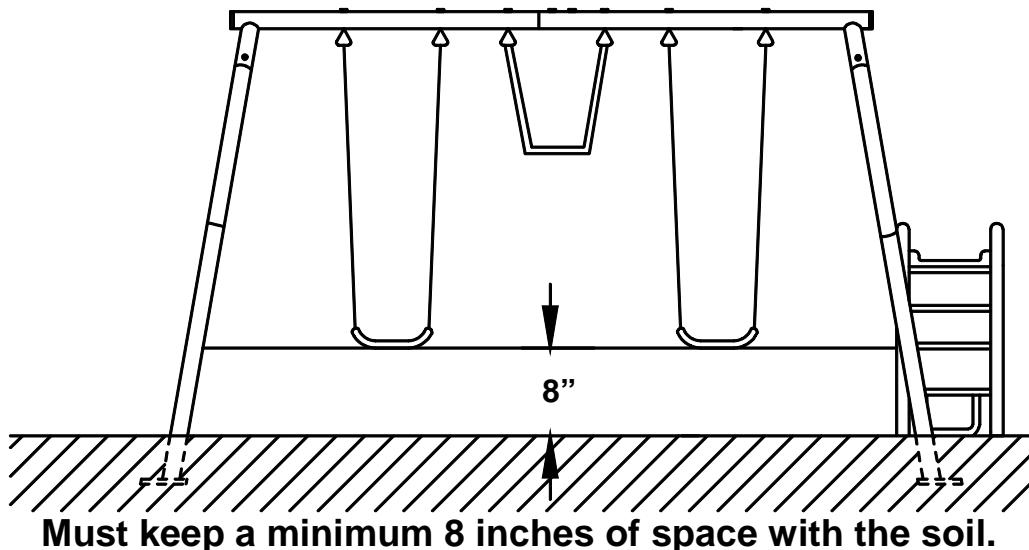

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F2276 and CPSIA certification.

