Hampton Bay Lifetime Limited Warranty

The retailer warrants the fan motor to be free from defects in workmanship and material present at time of shipment from the factory for a lifetime after the date of purchase by the original purchaser. The retailer also warrants that all other fan parts, excluding any glass or plexiglass blades, to be free from defects in workmanship and material at the time of shipment from the factory for a period of one year after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned to the retailer. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident or misuse or improper installation or by affixing any accessories, is not covered by this warranty. Because of varying climatic conditions in the United States this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing or peeling. Brass finishes of this type give their longest useful life when protected from varying weather conditions. A certain amount of wobble is normal and should not be considered a defect. Servicing performed by unauthorized persons shall render the warranty invalid. There is no other express warranty. The retailer hereby disclaims any and all warranties, including but not limited to. Those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty which cannot be disclaimed is limited to the time period as specified in the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives specific legal rights, and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties.

Date Pur	chased _		
	chased_		
			□ 288-385
Model No			\Box 289-504
	-		
Serial No)		
Vendor No			219054
	□71821	2240304	4 (288-385)
UPC	□71821	2240311	(289-504)
~ ~ ~ —			

Lifetime Limited Warranty

SAFETY RULES	1
PACKAGE CONTENTS	2
INSTALLING YOUR FAN	
HANGING THE FAN.	
MAKING THE ELECTRICAL CONNECTIONS.	
FINISHING THE INSTALLATION.	
BLADE INSTALLATION	
INSTALLING THE MOUNTING PLATE	-
INSTALLING THE LIGHT KIT	
OPERATING THE TRANSMITTER	-
CARE OF YOUR FAN.	
TROUBLESHOOTING. 1	
SPECIFICATIONS 1	

Table of Contents

- 1. Before you begin installing the fan, **shut power off** at the circuit breaker or the fuse box.
- 2. Be cautious! Read all instructions and safety information before installing your new fan. Review accompanying assembly diagrams.
- 3. Make sure that all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor and 18 inches from the tip of the blades to the wall.
- 5. If you are mounting the fan to a ceiling outlet box, use U.L. Listed metal octagonal outlet box marked "Acceptable for fan support". Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 lbs.) Do not use a plastic box.
- 6. Caution: To reduce the risk of personal injury use only the screws provided with the outlet box.
- 7. If you are mounting the fan to a joist, make sure it is able to support the moving weight of the fan (at least 50 lbs.).
- 1. Safety Rules

- 8. After you install the fan, make sure that all mountings are secured to prevent the fan from falling.
- 9. Do not insert anything into the fan blades while the fan is operating.
- 10. To operate the reverse function on this fan, press the reverse button while the fan is running.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which can not be built into this product. These factors must be supplied by the person(s) installing, caring for and operating

NOTE


READ AND SAVE ALL INSTRUCTIONS!


WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR OTHER PERSONAL INJURY, MOUNT FAN ONLY TO A U.L. LISTED OUTLET BOX OR SUPPORTING SYSTEM MARKED ACCEPTABLE FOR FAN SUPPORT AND USE MOUNTING SCREWS AND LOCK WASHERS PROVIDED WITH THE OUTLET BOX IN CONJUNCTION, MOST OUTLET BOXES COMMONLY USED FOR THE SUPPORT OF LIGHTING FIXTURES ARE NOT ACCEPTABLE FOR FAN SUPPORT AND NEED TO BE REPLACED. CONSULT A QUALIFIED ELECTRICIAN IF IN DOUBT.

TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE HOLDERS WHILE INSTALLING, BALANCING THE BLADES, OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

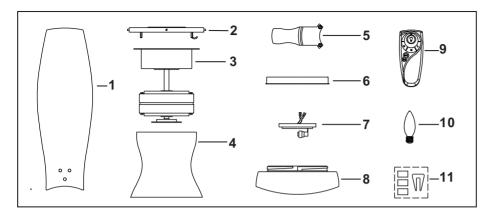

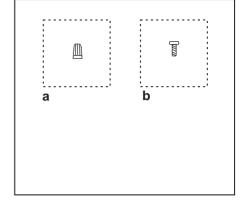

- Unpack your fan and check the contents. You should have the following items;
- 1 Fan blades (3)
- 2. Mounting bracket
- 3. Fan motor assembly
- 4. Motor housing
- 5. Blade holder plate
- 6. Mounting plate

- 7. Light plate
- 8. Glass shade
- 9. Transmitter+holder+2 mounting screws
- 10. 40 Watt candelabra bulbs (3)
- 11. Balancing kit

- a. Mounting hardware: Wire nuts (3)
- **b.** Blade attachment hardware: Screws (10)

Package Contents 2.

Tools Required


Phillips screw driver; slotted screw driver; stepladder; wire cutters; electrical tape.


Mounting Options


If there isn't an existing mounting box, then read the following instructions. **Disconnect the power by removing fuses or turning off circuit breakers.**

Secure the outlet box directly to the building structure. Use appropriate fasteners and building materials. The outlet box and its support must be able to fully support the moving weight of the fan (at least 50 lbs.). Use a UL Listed metal outlet box. Do not use a plastic outlet box.

Figure 1 and 2 are examples of different ways to mount the outlet box. To hang your fan where there is an existing fixture but no ceiling joist, you may need to install a hanger bar as shown in Fig. 3 (available at your Hampton Bay dealer).

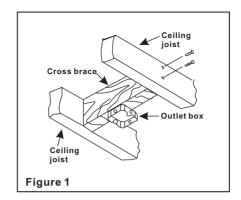

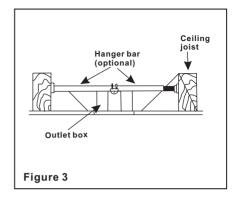

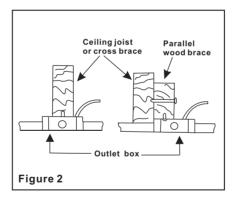

3. Installing Your Fan

4. Hanging the Fan

REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

Step 1. Attach the mounting bracket to the outlet box with two screws and washers provided with the outlet box. Make sure the bracket is tight and secured. (Fig. 4)

Step 2. Lift fan into position by hanging the motor assembly onto the hook from the ceiling mounting bracket allowing it to hang freely. (Fig. 5)


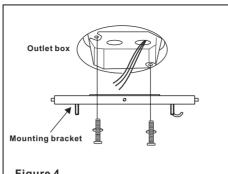


Figure 4

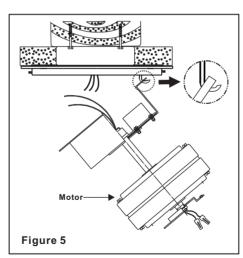

5. Making the Electrical Connections

Remember to disconnect the power.

Follow the steps below to connect the fan to your household wiring. Use the wire connecting nuts supplied with your fan. Secure the connectors with electrical tape. Make sure there are no loose strands or connections

NOTE: The Hand Held Remote or Wall Control units included with your ceiling fan are equipped with 16 code combinations to prevent possible interference from or to other remote units. The dip switches on your Receiver and Transmitter units have been preset at the factory, please re-check to make sure the switches on both units are set to the same positions. The frequency settings should be changed only in case of interference or if a second or more remote controlled ceiling fans are installed in the same structure. Any code combination will operate the ceiling fan and light as long as the Receiver and Transmitter units are set to the same codes (Fig. 6)


Step 1 Connect the fan supply (black) wire to the black household supply wire as shown in Figure 7.


Step 2. Connect the neutral fan (white) wire to the white neutral household wire.

Step 3 Connect the fan ground wire (green) to the household ground wire.

Step 4 After connecting the wires, spread them apart so that the green and white wires are on one side of the outlet box and the black wires are on the other side.

Step 5 Turn the connecting nuts upward and push the wiring into the outlet box.

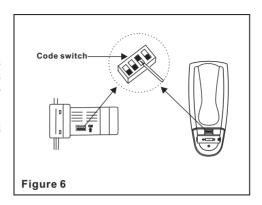


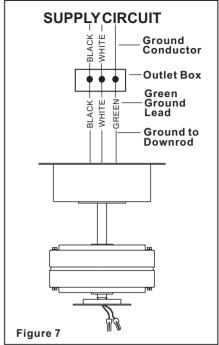


6. Finishing the Installation

Step 1. Move fan into position over the four mounting studs and secure with the provided washers and nuts. (Fig. 8)

Step 2. Raise the motor housing up against the mounting bracket, the four supports inside the housing should be placed against the four studs on mounting bracket, twist the housing clockwise until snug. (Fig. 9)

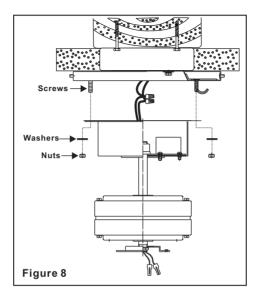


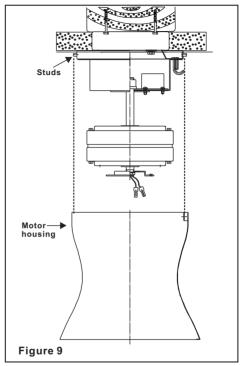

7. Blade Installation

Step 1. Attach the fan blades to the blade holders using the screws and rubber washers provided, tighten screws securely. (Fig. 10)


Step 2. Align motor holes to blade holders and secure with screws provided, tighten screws securely. Repeat procedure with remaining blades. (Fig. 10)

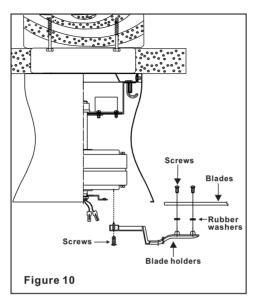

8. Installing the Mounting Plate

Step 1. Remove 1 of the 3 screws from the mounting ring and loosen the other 2 screws. (Do not remove)

Step 2. Place the key holes on the mounting plate over the 2 screws previously loosened from the mounting ring, turn mounting plate until it locks in place at the narrow section of the key holes. Secure by tightening the 2 screws previously loosened and the one previously removed. (Fig. 11)

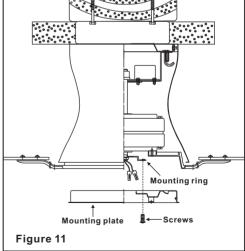

9. Installing the Light Kit

NOTE: Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse box.


Step 1. Loosen the 3 screws from the mounting plate. (Do not remove)


Step 2. Raise and hold the light plate close to the mounting plate and proceed to do the wire connections. Connect the white wire connectors from the light plate and fan, follow the same procedure with the black wire connectors. (Fig. 12)

Step 3. Place the key holes on the light plate over the 3 screws previously loosened from the mounting plate, turn light plate until it locks in place at the narrow section of the key holes. Secure by tightening the 3 screws previously loosened. (Fig. 12)

Step 4. Install 3 x 40W candelabra bulbs (included). (Fig. 13).


Step 5. Raise light kit up against bottom of fan housing and secure it to fan by twisting glass clockwise until snug. DO NOT OVERTIGHTEN. (Fig. 13)

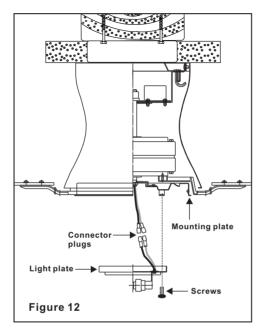

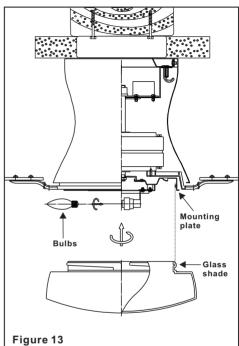

Installing the battery:

Install 12V MN21/A23 battery (not 1. "HI, MED, LOW" buttons: included), to prevent damage to transmitter, remove the battery if not used for long periods.

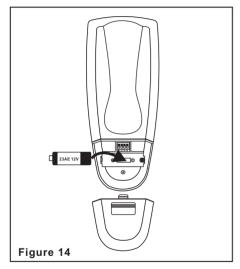

Restore power to the ceiling fan and test for proper operation.

These three buttons are used to set the fan speed as follows:

LOW=Low speed MED= Medium speed HI=High speed

2. "OFF" button:

This button turns the fan off.


- 3. The " button turns the light ON or OFF and also controls the brightness setting. Press and release the button to turn the light ON or OFF. Press and hold the button to set the desired brightness. The light key has an auto-resume, it will stay at the same brightness as the last time it was turned off.
- 4. The " button is used to set the fan forward or reverse, press the button forward (for warm weather) or reverse (for cool weather):

Speed settings for warm or cold weather depend on factors such as room size, ceiling height and number of fans, etc.


NOTE: To operate the reverse function on this fan, press the reverse button while the fan is running.


Warm weather - (Forward) A downward air flow creates a cooling effect as shown in Figure 16. This allows you to set your air conditioner on a higher setting without affecting your comfort.

Cool weather - (Reverse) An upward airflow moves warm air off the ceiling area as shown in Figure 17. This allows you to set your heating unit on a lower setting without affecting your comfort.

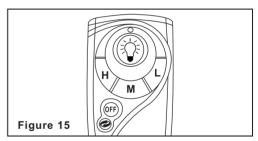

Operating the Transmitter 10.

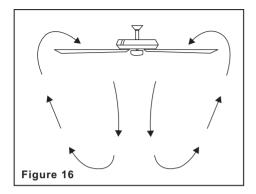

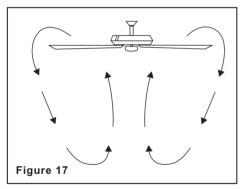

Here are some suggestions to help maintain your fan.

- 1. Because of the fan's natural movement some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure. (It is not necessary to remove fan from the ceiling).
- 2. Clean your fan periodically to help maintain its new appearance over the years. Use only a soft brush or lint free cloth to avoid scratching the finish. Plated finishes are sealed with lacquer to minimize discoloration or tarnishing. Do not use water when cleaning, this could damage the motor, wood blades or possibly cause an electrical shock.
- 3. If your fan is provided with wood veneer blades; you can apply a light coat of furniture polish for additional protection and enhanced beauty. Cover small scratches with a light application of shoe polish.

- 4. Use a lint free lightly damp cloth or duster to remove dust from the blades.
- 5. There is no need to oil your fan. The motor has permanently lubricated bearings.
- 6. If your fan is provided with glass shades, clean with lukewarm soapy water and a soft cloth or sponge. DO NOT IMMERSE GLASS SHADES IN HOT WATER. DO NOT PUT GLASS SHADES INTO AN AUTOMATIC DISHWASHER.

WARNING: Make sure the power is off at the electrical panel box Before you attempt any repairs. Refer to the section, "Making Electrical Connections".

For any additional information on your Hampton Bay Ceiling Fan, please write to:

THE HAMPTON BAY FAN & LIGHTING CO. P. O. Box 395 Norco, CA 92860

Call toll free 1-800-527-0998

11. Care of Your Fan

Problem

Solution

Fan will not star

- 1. Check to make sure the wall switch is turned on
- 2. Check circuit fuses or breakers

Caution! Make sure the power is turned off before performing the following steps;

- 3. Remove canopy and check wire connections
- 4. If using a remote controlled fan; Check to see that the dip switches from transmitter and receiver are set to the same frequency code.
- 5. Check wall control transmitter connections (if applicable)

NOTE: Fan must be installed from a maximum distance of 40 feet from the transmitting unit for proper signal transmission between the transmitting unit and the fan's receiving unit.

Fans/Light Turn On and Off intermittently Fan Sounds Noisy

- 1. This is caused by interference, change the code frequency from the transmitter and receiver. Any code combination will operate the fan or light (remote controlled fans only).
- 1. Allow a 24-hour "break in" period. Most noises associated with a new fan will go away during this time.
- 2. Make sure all blade attachment screws are tight.
- 3. Make sure Outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
- 4. Make sure Hanger Bracket is secure to the outlet box, screws are tight.

Fan Wobble

NOTE: All blade sets are grouped by weight. Because wood and plastic blades vary in density, the fan may wobble even though blades are matched.

- 1. Make sure all blade attachment screws are tight.
- 2. Make sure Outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
- 3. Make sure Hanger Bracket is secure to the outlet box, screws are tight.
- 4. Use the balancing kit provided if the wobble is excessive (follow instructions included with balancing kit).

Troubleshooting 12.

Fan Size	Speed	Volts	Amps	Watts	RPM	CFM	N.W.	G.W.	C.F.
52"	Low	120	0.32	20	77	2589	8.80 kgs (19.41 lbs)	10.5 kgs (23.16 lbs)	2.80'
	Medium	120	0.39	33	112	3549			
	High	120	0.42	52	145	4726			

These are typical readings. Your actual fan may vary. They do not include Amps and Wattage used by the light kit.

Distributed by Your Other Warehouse, LLC 12100 Little Cayman Dr. Baton Rouge, LA 70809

13. Specifications