



User Manual

CS-X4 Series

COPYRIGHT © 2015 EZVIZ Inc. ALL RIGHTS RESERVED.

UD.6L0208D0041A01

About this Manual

This manual includes instructions for using and managing the product. Pictures, charts, images, and all other information hereinafter are for description and explanation only. The information contained in this manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the **EZVIZ™** website (<http://www.ezvizlife.com>).

Any and all information, including, among others, wordings, pictures, graphs are the properties of EZVIZ Inc. or its subsidiaries (hereinafter referred to be "EZVIZ"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees, or representations, express or implied, regarding to the Manual.

Trademarks Acknowledgement

EZVIZ™, ™ and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE, AND FIRMWARE, IS PROVIDED "AS IS," WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE PURCHASE PRICE OF THE PRODUCT.

EZVIZ does not undertake any liability for personal injury or property damage, as the result of product interruption or service termination cause by: a) improper installation or usage other than as requested; b) the protection of national or public interests; c) Force Majeure; d) yourself or the third party, including without limitation, using any third party's products, software, applications, and among others.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE, OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

The purpose of the Products is to provide an adequate warning in the event of illegal encroachment in certain area(s); however, the proper installation of the Products will not eliminate, but only reduce, accidents, personal injury, or property loss. You are highly recommended to raise your vigilance and strengthen the safety awareness in daily life.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAWS. YOU FURTHER AGREE THAT THIS PRODUCT IS ONLY FOR CIVIL USE, AND EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED FOR ILLEGITIMATE PURPOSES SUCH AS THIRD PARTY RIGHTS INFRINGEMENT, MEDICAL TREATMENT, SAFETY EQUIPMENT, OR OTHER SITUATIONS WHERE THE PRODUCT FAILURE COULD LEAD TO DEATH OR PERSONAL INJURY, OR USE IN A WEAPON OF MASS DESTRUCTION, CHEMICAL AND BIOLOGICAL WEAPON, NUCLEAR EXPLOSION, AND/OR ANY UNSAFE NUCLEAR ENERGY USES OR ANTI-HUMANITY USAGES. YOU SHOULD UNDERTAKE ALL RESPONSIBILITIES FOR LOSSES OR DAMAGES RESULTING FROM THE ABOVE USAGES WHATSOEVER.

IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and, if applicable, the supplied accessories are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, and the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

CALIFORNIA PROP. 65

WARNING

This product may contain one or more chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an uninterruptible power supply (UPS) if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- Use only a factory recommended HDD for this device.
- Improper use or replacement of the battery may result in explosion hazard. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the manufacturer.



USE A STRONG PASSWORD

For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including uppercase letters, lowercase letters, numbers, and special characters) in order to increase the security of your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

Trademarks and Registered Trademarks

- Windows and the Windows mark are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- HDMI, HDMI mark, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- The products contained in this manual are authorized by HDMI Licensing LLC with the use right of the HDMI technology.



- VGA is a trademark of IBM.
- Other names of companies and product contained in this manual may be trademarks or registered trademarks of their respective owners.

TABLE OF CONTENTS

About this Manual	1
TABLE OF CONTENTS	4
1 Introduction	6
1.1 Product Key Features	6
1.1.1 General	6
1.1.2 Local Monitoring	6
1.1.3 HDD Management	6
1.1.4 Recording and Playback	6
1.1.5 Backup	7
1.1.6 Alarms and Exceptions	7
1.1.7 Network Functions	7
1.2 Front Panel	7
1.3 USB Mouse Operation	8
1.4 Input Method Description	9
1.5 Rear Panel	10
2 Getting Started	11
2.1 Starting Up and Shutting Down the NVR	11
2.2 Using the Wizard for Basic Configuration	12
2.3 Connecting the IP Cameras	14
2.4 Resetting the Password	14
2.5 Connecting to the EZVIZ Cloud	15
3 Live View	16
3.1 Live View Introduction	16
3.2 Live View Icons	16
3.3 Live View Mode Operations	16
3.4 Using the Mouse in Live View	17
3.5 Live View Mode Quick Setting Toolbar	17
3.6 Adjusting Live View Settings	18
3.7 User Logout	19
4 Recording Settings	20
4.1 Configuring Parameters	20
4.2 Configuring the Recording Schedule	22
4.3 Configuring Motion Detection Recording	23
4.4 Configuring Holiday Recording	24
5 Playback	27
5.1 Playing Back by Channel	27
5.2 Playing Back by System Logs	29
5.3 Multi-Channel Reverse Playback	31
5.4 Playing Back Frame-by-Frame	32
6 Backup	33
6.1 Backing Up Recorded Files	33
6.1.1 Backing Up by Normal Video Search	33
6.1.2 Backing Up Video Clips	34

6.2	Managing Backup Devices	36
7	Network Settings	37
7.1	Configuring General Settings	37
7.2	Checking Network Traffic	39
7.3	Configuring Network Detection	40
7.3.1	Testing Network Delay and Packet Loss	40
7.3.2	Exporting Network Packets	41
7.3.3	Checking Network Status	41
7.3.4	Checking Network Statistics	42
8	Hard Disk Drive (HDD) Management	43
8.1	Formatting HDDs	43
8.2	Checking HDD Status	44
8.3	Checking Recording Time Left	44
9	Camera Settings	46
9.1	Configuring Image Parameters	46
9.2	Configuring Privacy Mask	48
10	NVR Management and Maintenance	50
10.1	Configuring General Settings	50
10.2	Viewing System Information	52
10.3	Searching and Export Log Files	53
10.4	Upgrading IP Camera and NVR	55
10.4.1	Online Upgrading by EZVIZ	55
10.4.2	Upgrading by Local Backup Device	55
10.5	Restoring Default Settings	57
	Glossary	58

1 Introduction

Thank you for purchasing the EZVIZ X4 Network Video Recorder (NVR). If there are any questions or requests, please do not hesitate to contact your dealer.

The figures in the manual are for reference only.

This manual is applicable to the models listed in the following table:

Series	Models
CS-X4	CS-X4-108P
	CS-X4-116P

1.1 Product Key Features

1.1.1 General

- Connect up to 16 EZVIZ IP cameras
- Each channel supports dual streams
- Individually configure each camera's resolution, frame rate, bit rate, image quality, etc.

1.1.2 Local Monitoring

- Simultaneous HDMI™ and VGA outputs at up to 1920 × 1080 resolution
- Live view multiple screen display, with adjustable channels' display sequence.
- Live view screen can be switched in groups, and manual switching and automatic cycling of live views are supported. Also, the automatic cycle interval can be adjusted.
- Quick setting menu is provided for live views.
- Privacy mask

1.1.3 HDD Management

- A built-in HDD

1.1.4 Recording and Playback

- Holiday recording schedule configuration
- Continuous and motion detection triggered video recording parameters
- Two recording types: continuous and motion
- Eight recording periods, with recording types separated each day
- Search recorded files by motion detection
- New playback interface with easy and flexible operation
- Search and playback recorded files by camera number and date
- Multichannel reverse playback
- Supports pause, play reverse, speed up, speed down, skip forward, and skip backward on

playback, and locate by dragging the mouse

- Up to six-channel synchronous playback

1.1.5 Backup

- Export video data by USB device
- Export video clips when using playback
- Management and maintenance of backup devices

1.1.6 Alarms and Exceptions

- Alarm for IP camera disconnected, motion detection, video tampering, HDD full, HDD error, network disconnected, IP conflict, illegal login, abnormal record, etc.

1.1.7 Network Functions

- 1 self-adaptive 10M/100M/1000M network interface
- 8 independent PoE network interfaces for CS-X4-108P
- 16 independent PoE network interfaces for CS-X4-116P
- IPv6 is supported
- Extranet access and remote live view, playback, and control via the EZVIZ platform
- Two-way audio

1.2 Front Panel



Figure 1 Front Panel of CS-X4 Series

Table 1 Description of Control Panel Buttons

No.	Name	Description
1	Status Indicator	 Power indicator turns on when system is running.
		 Status indicator blinks when data is being read from or written to HDD.
		 Network status indicator blinks when network connection is functioning properly.
2	USB Interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).

1.3 USB Mouse Operation

A regular 3-button (left/right/scroll-wheel) USB mouse can also be used with this NVR. To use a USB mouse:

1. Plug USB mouse into one of the USB interfaces on the front panel of the NVR.
2. The mouse should automatically be detected. In the rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible. Refer to the recommended device list from your provider.

Table 2 Description of the Mouse Control

Name	Action	Description
Left-Click	Single-Click	Live View: Select channel and show the quick set menu Menu: Select and enter
	Double-Click	Live View: Switch between single-screen and multi-screen
	Click and Drag	PTZ Control: Pan, tilt, and zoom Video Tampering, Privacy Mask, and Motion Detection: Select target area Digital Zoom-In: Drag and select target area Live View: Drag channel/time bar
Right-Click	Single-Click	Live View: Show menu Menu: Exit current menu to upper level menu
Scroll-Wheel	Scroll Up	Live View: Previous screen Menu: Previous item
	Scroll Down	Live View: Next screen Menu: Next item

1.4 Input Method Description



Figure 2 Soft Keyboard

Table 3 Description of the Soft Keyboard Icons

Icons	Description	Icons	Description
	Lowercase/Uppercase English		Numerals/Symbols
	Space		Backspace
	Enter		Adjust Cursor Position

1.5 Rear Panel

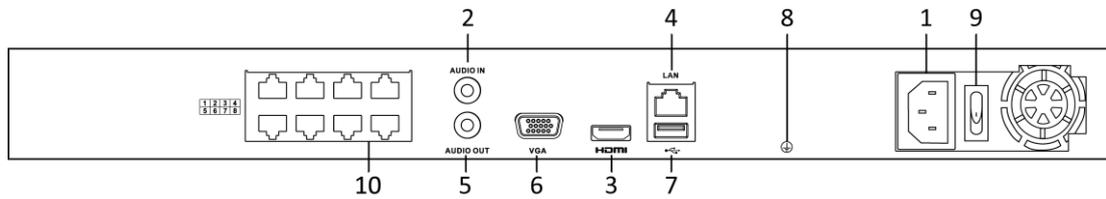


Figure 3 Rear Panel of CS-X4-108P

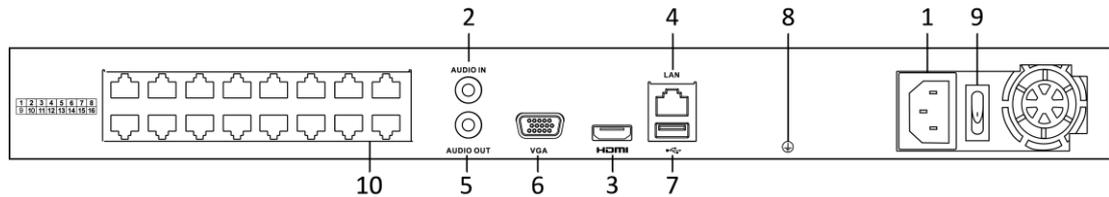


Figure 4 Rear Panel of CS-X4-116P

Table 4 Description of Rear Panel Interfaces

No.	Item	Description
1	Power Supply	12 VDC power supply for CS-X4-108P and 100 to 240 VAC for CS-X4-116P.
2	Audio In	RCA connector for audio input
3	HDMI™ Interface	HDMI™ video output connector
4	LAN Network Interface	(1) 10/100/1000 Mbps self-adaptive Ethernet interface
5	Audio Out	RCA connector for audio output
6	VGA Interface	DB-9 connector for VGA output to display local video output and menu
7	USB Interface	Universal Serial Bus (USB) port for additional devices such as USB mouse and USB Hard Disk Drive (HDD)
8	Ground	Ground (needs to be connected when DVR starts up)
9	Power Switch	Switch for turning the device on/off
10	Network Interfaces with PoE function	Network interfaces for the cameras and to provide power over Ethernet (there are eight PoE interfaces for the CS-X4-108P and 16 PoE interfaces for the CS-X4-116P)

2 Getting Started

2.1 Starting Up and Shutting Down the NVR

Proper startup and shutdown procedures are crucial to expanding the life of the NVR.

Before You Start

Check that the voltage of the extra power supply is the same as the NVR's requirement, and that the ground connection is working properly.

2.1.1 Starting Up the NVR

1. Plug the power supply into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device.
2. Turn on the power switch on the rear panel. The Power indicator LED should turn on indicating that the device has started up.

2.1.2 Shutting Down the NVR

There are two proper ways to shut down the NVR:

1. Enter the Shutdown menu by clicking  on the right-click menu.

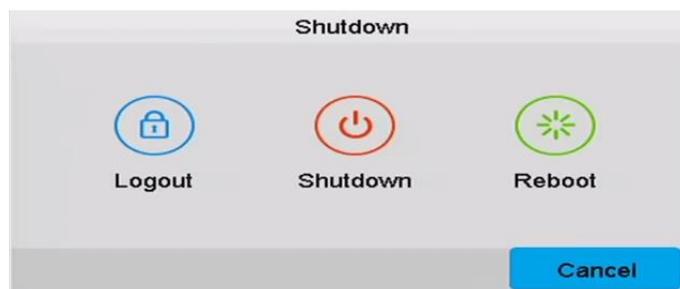


Figure 5 Shutdown Menu

2. Enter the password, if required.
3. Click the Shutdown button.
4. Click the Yes button in the pop-up attention prompt.
5. Turn off the power switch on the rear panel when the attention prompt pops up.



Figure 6 Shutdown Attention Prompt

2.1.3 Rebooting the NVR

In the Shutdown menu, you can also reboot the NVR.

1. Enter the Shutdown menu by clicking  on the right-click menu.
2. Click the Logout button to lock the NVR or the **Reboot** button to reboot the NVR.

2.2 Using the Wizard for Basic Configuration

By default, a welcome attention dialog pops up once the NVR has started, as shown in the following figure.

Click **OK** button to show the setup wizard.

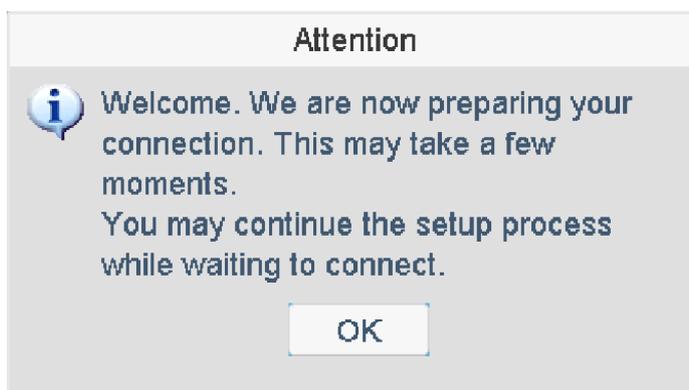


Figure 7 Welcome Attention Dialog

2.2.1 Operating the Setup Wizard:

1. The Setup Wizard walks you through important NVR settings. Select the system language in the dropdown list as desired. Click **Apply** to the next window.


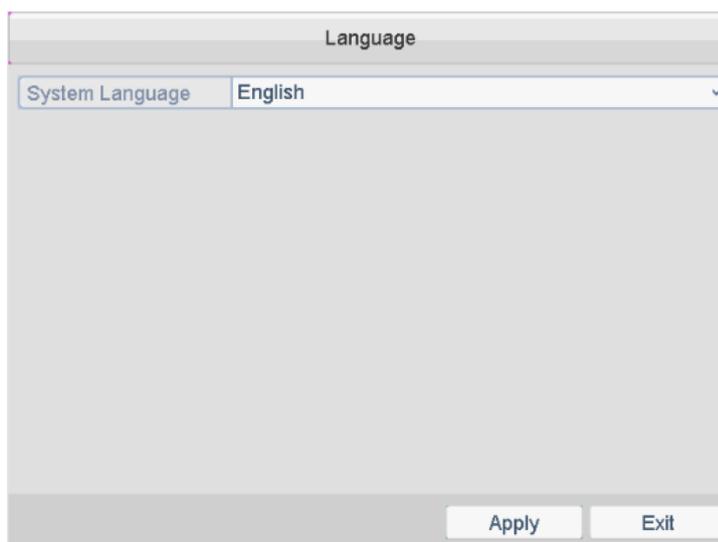


Figure 8 Select Language Window

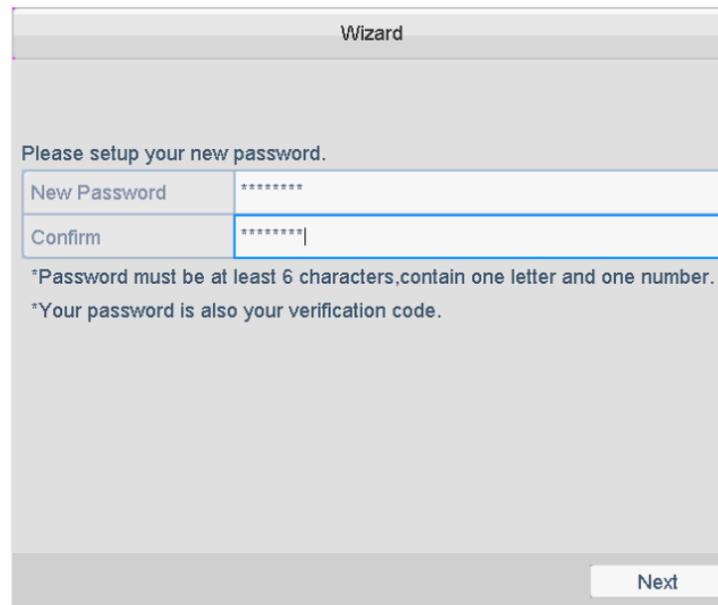

Wizard

Please setup your new password.

New Password	*****
Confirm	*****

*Password must be at least 6 characters, contain one letter and one number.
*Your password is also your verification code.

Next

Figure 9 Change Password Window

3. Enter the new password and confirm the password in the given fields.



For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including uppercase letters, lowercase letters, numbers, and special characters) in order to increase the security of your product.

NOTE: *The password is also the verification code when you adding the device to your EZVIZ account. Refer to the Quick Start Guide for the device adding procedure.*

4. Click the **Next** button to enter the date and time settings window, as shown in the following figure.

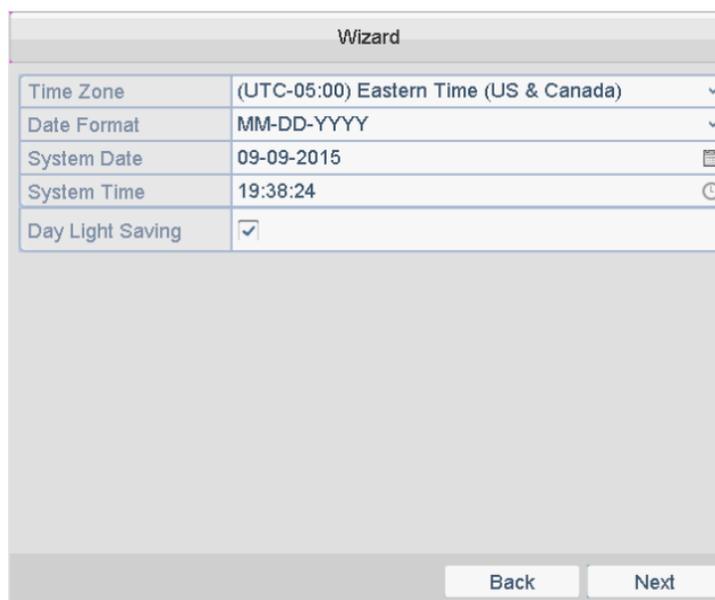


Figure 10 General System Settings

5. Click **Next** to start the EZVIZ service setup.

You are recommended to use the EZVIZ service to realize remote live view, playback, NVR control, and cloud recording videos. To connect to the EZVIZ service, make sure the Ethernet cable of your NVR is well connected to the router. And then follow the wizard to set the connection.

2.3 Connecting the IP Cameras

Connect your IP cameras via your NVR's PoE interfaces with the supplied network cable(s) in the bundle package. Refer to the *Quick Start Guide* for the connection guide.

2.4 Resetting the Password

If you forgot the NVR password, you can reset your password in the following two ways:

- Option 1 (For the EZVIZ service user)
 1. Click the Forget Password in the Login window to pop up the Reset Password window.
 2. Check your registered mailbox or the mobile phone for the 4-digit verification code.
 3. Input the received verification code in the given field and click the **Verify** button.
 4. Input the New Password and Confirm in the popup window and click the OK button to finish password resetting.

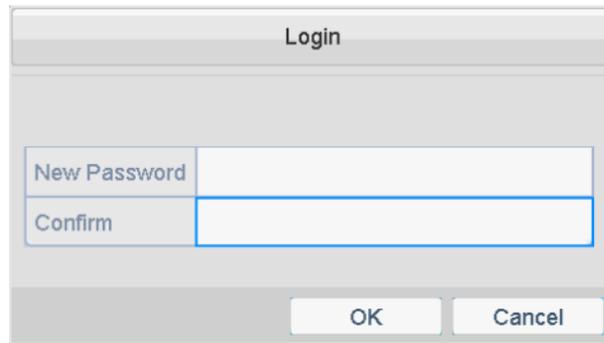
The image shows a 'Login' dialog box with a title bar. Below the title bar, there are two input fields: 'New Password' and 'Confirm'. Both fields are currently empty. At the bottom right of the dialog box, there are two buttons: 'OK' and 'Cancel'.

Figure 11 Set New Password

- Option 2 (For other users)
 1. Click the Forget Password in the Login window.
 2. An attention box pops up showing the contact information: 1-855-MYEZVIZ (693-9849).
 3. Click the **OK** button to get the device serial number, call the phone number and provide the device serial number, and then you can get a secure code.
 4. Input the secure code in the given field and click **OK** button to enter the resetting password window.
 5. Input the new password and confirm it in the given fields and click the **OK** button to reset the password.

2.5 Connecting to the EZVIZ Cloud

You can record the video on the EZVZ cloud storage if you successfully connect the device to the EZVIZ Cloud.

You can set the EZVIZ connection in the wizard. But if you miss it, you can also go to *Menu* → *Maintenance* → *System Info* or *Device Management* → *Configuration*, and click the **Add to EZVIZ** button to set the connection.

3 Live View

3.1 Live View Introduction

Live View mode shows the video image from each camera in real time. The NVR automatically enters Live View mode when powered on. It is also at the very top of the menu hierarchy, thus pressing the ESC key repeatedly (the number of times depends on which menu you're on) brings you to Live View mode.

3.2 Live View Icons

In Live View mode, there are icons at the upper-right of the screen for each channel, showing the status of the channel's recording and alarm, so that you can know whether the channel is recording or be notified of alarms occurring as soon as possible.

Table 5 Descriptions of Live View Icons

Icons	Description
	Alarm (motion detection and exception information)
	Record (continuous record and motion detection triggered record)
	Alarm and Record
	Event/Exception (motion detection or exception information appears at the lower-left corner of the screen)

3.3 Live View Mode Operations

In Live View mode, there are many functions provided. The functions are listed below:

- **Single Screen:** Show only one screen on the monitor
- **Multi-Screen:** Simultaneously show multiple screens on the monitor
- **Auto-Switch:** Screen auto switches to the next one

NOTE: You must set the dwell time for each screen on the configuration menu before enabling auto-switch, at the following location:

Device Management→*Advanced Setting*→*Configuration*→*Live View*→*Dwell Time*

- **Playback:** Play back the recorded videos for the current day

3.4 Using the Mouse in Live View

Right click the mouse or move the mouse to the upper area of the screen to show the right-click menu, as shown below.



Figure 12 Menu Bar

Table 6 Mouse Operation in Live View

Name	Description
	Switch to single full screen by choosing channel number from the dropdown list
	Adjust the screen layout by clicking the specific icon
	Switch to the previous/next screen
	Enable/disable auto-switching of the screens.
	Enter playback interface and immediately play the selected channel's video
	Enter the Device Management interface
	Show the System Information
	Auto hide/lock the Live View toolbar

3.5 Live View Mode Quick Setting Toolbar

On each channel's screen, there is a quick setting toolbar that shows when you click the mouse in the corresponding screen.



Figure 13 Quick Setting Toolbar

Table 7 Description of Quick Setting Toolbar Icons

Icon	Description	Icon	Description	Icon	Description
	Instant Playback		Mute/Audio On		Reserved
	Digital Zoom		Close		



Instant Playback shows only the video in the last five minutes. If no video is found, it means there was no recording during the last five minutes.



Digital Zoom can zoom into the selected area to full screen. You can click and draw in the small image to select the area to zoom in, as shown in 0.



Figure 14 Digital Zoom

3.6 Adjusting Live View Settings

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

1. Enter the Live View Settings interface:

Device Management → *Advanced Settings* → *Configuration* → *Live View*

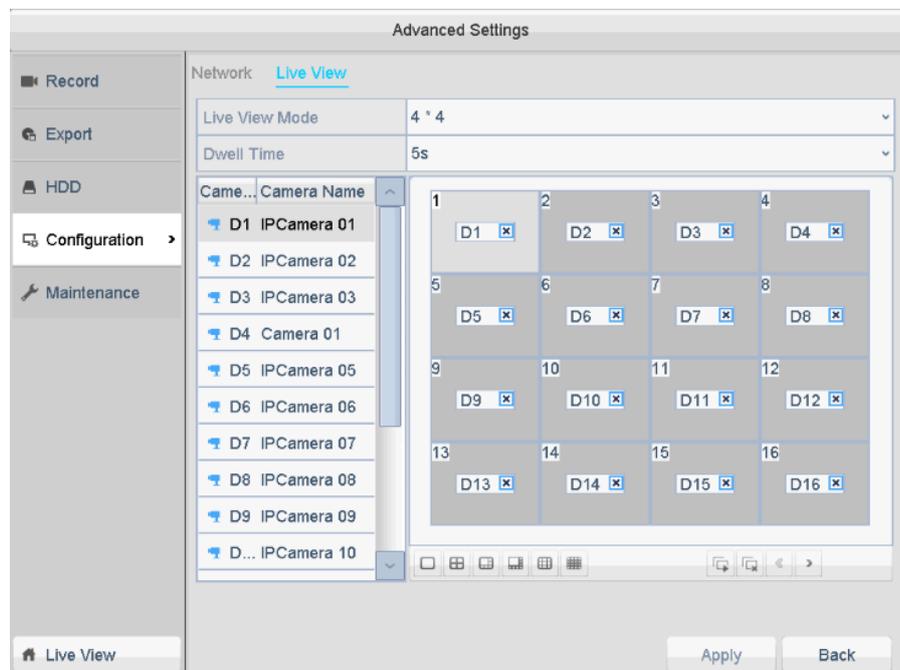


Figure 15 Live View

2. Set the following functions.
 - **Live View Mode:** Designates the display mode to be used for Live View.
 - **Dwell Time:** The time in seconds to wait (dwell) between switching of channels. You can also select "No Switch" if you want to disable the auto switch.
3. Set cameras' order.
 - Click to select a **View** mode in , which should be the same as the Live View Mode you set.
 - Select the small window, and double-click the camera number to display the camera in the window.
4. If you do not want the camera to be displayed on the Live View interface, click the corresponding  to stop it.
5. You can also click  to start Live View for all the cameras and click  to stop all Live Views.
6. Click the **Apply** button to save the setting.

3.7 User Logout

After logging out, the monitor switches to Live View mode. If you want to perform an operation, you will need to enter your user name and password to log in again.

1. Enter the Shutdown menu.

Menu → Shutdown

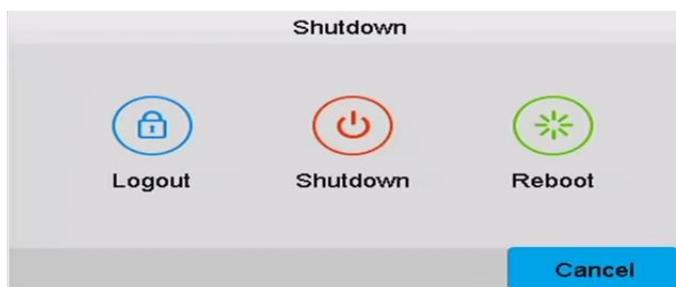


Figure 16 Shutdown

2. Click **Logout**.

NOTE: After you have logged out of the system, the menu operation on the screen is invalid. It is required that you input a user name and password to unlock the system.

4 Recording Settings

4.1 Configuring Parameters

You can configure the parameters that affect image quality such as the transmission stream type, the resolution, and so on.

Make sure that an HDD has been installed. If not, install an HDD and initialize it by going to the following location:

Device Management → *Advanced Settings* → *HDD*

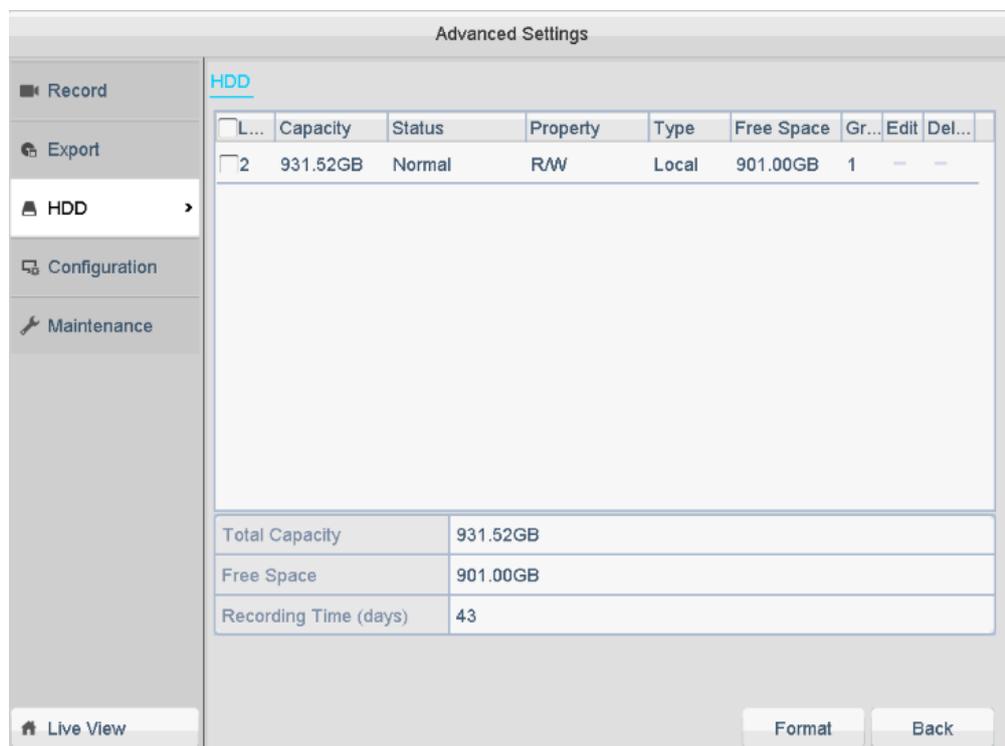


Figure 17 HDD

1. Enter the parameters settings interface to configure the recording:

Device Management → *Advanced Settings* → *Record* → *Parameters*

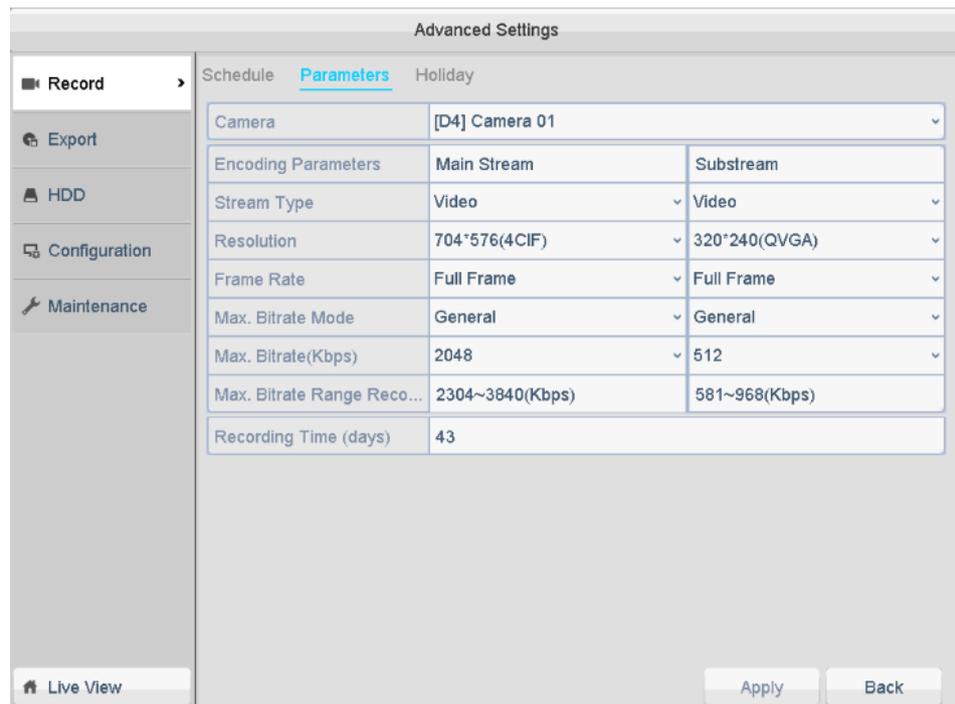


Figure 18 Recording Parameters

- Select a camera number in the Camera drop-down list and configure the following parameters for the main stream and sub stream respectively.

Table 8 Record Parameter Descriptions

Parameters	Descriptions
Resolution	Select the resolution for each stream in the drop-down list.
Frame Rate	Select the frame rate in the drop-down list.
Maximum Bitrate Mode	Select General or Custom in the drop-down list for each stream.
Maximum Bitrate (Kbps)	For General mode, you can select the bitrate value in the dropdown list; For Custom mode, you can input the bitrate value using the soft keyboard as desired.
Recommended Maximum Bitrate Range	The bitrate range recommended by the system according to the selected resolution and frame rate.
Recording Time (Days)	The time left for recording at the current parameters until the HDD is full.

- Click **Apply** to save the settings.

4.2 Configuring the Recording Schedule

Camera will automatically start/stop recording according to the schedule you configure.

1. Enter the Record Schedule interface.

Device Management → *Advanced Settings* → *Record* → *Schedule*

2. Configure the record schedule.

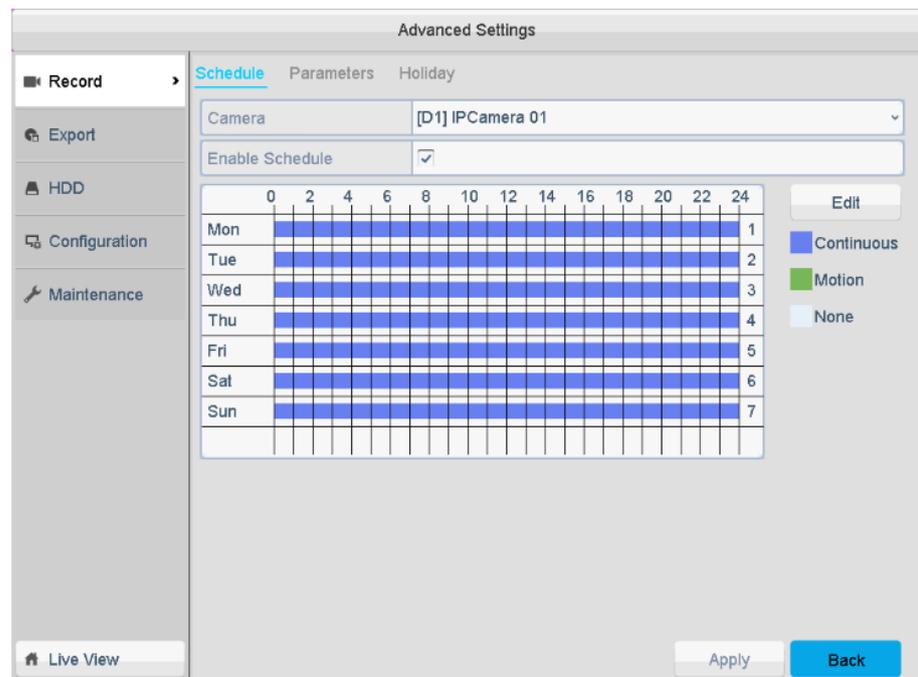


Figure 19 Record Schedule

3. Choose the camera you want to configure.
4. Select the checkbox after the **Enable Schedule** item.
5. Click the **Edit** button or the color icon under the edit button and draw the schedule line on the panel.
- 6A. Edit the schedule (option 1):
 - a. In the message box, choose the day you want to schedule.

Weekday		Mon	
All Day	<input type="checkbox"/>	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous
Start/End Time	00:00-00:00	Type	Continuous

Buttons: Copy, Apply, OK, Cancel

Figure 20 Recording Schedule Interface

- b. To schedule an all-day recording, check the **All Day** item checkbox.
- c. To arrange other than an all day schedule, leave the **All Day** checkbox blank and click on the schedule to edit the Start Time and End Time.

NOTE: Up to eight periods can be configured for each day (time periods cannot overlap).

To enable motion-triggered recording, you must configure the motion detection settings (refer to Section 4.3, Configuring Motion Detection Recording).

- d. Repeat the above edit schedule steps to schedule recording for other days. You can click **Copy** to call up the "Copy to" interface to copy the schedule settings to other days.
 - e. Click **Apply** in the Record Schedule interface to save the settings.
- 6B. Draw the schedule (option 2):
- a. Click on a color icon to choose the schedule type as "continuous" or "event."
 - b. You can also select "None" if you want to cancel the set recording schedule.
 - c. Click and drag the mouse to draw a rectangle on the schedule.
7. Click **Apply** to save the settings.

4.3 Configuring Motion Detection Recording

Follow the steps to set the motion detection parameters. In Live View mode, once a motion detection event takes place, the NVR can analyze it and perform a variety of actions to handle it. Enabling the motion detection function can trigger certain channels to start recording or trigger full screen monitoring, audio warning, notify the surveillance center, and so on. This section explains the steps to schedule a recording

triggered by detected motion.

1. Enter the Motion Detection interface.

Device Management → *Motion Detection*

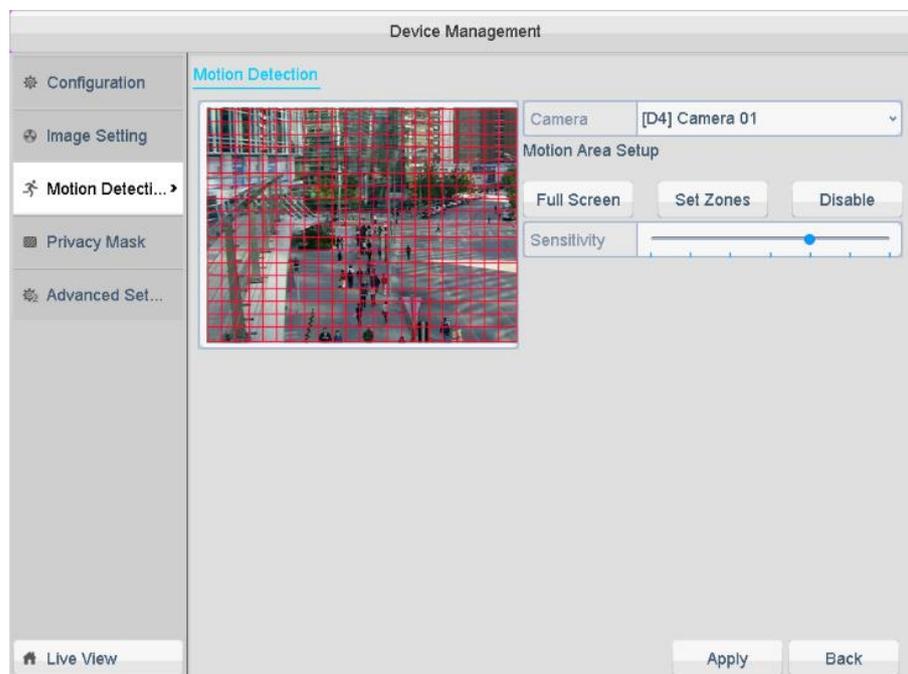


Figure 21 Motion Detection

2. Choose the camera you want to configure in the Camera drop-down list.
3. Motion detection is enabled by default once the camera is connected. If not, click the **Enable** button.
4. Click and drag the mouse to draw an area for motion detection. If you want to set the motion detection for the entire area shown by the camera, click **Full Screen**.
5. Edit the Motion Detection Record Schedule. For detailed schedule configuration information, see *Section 4.2 Configuring the Recording Schedule*.

4.4 Configuring Holiday Recording

Follow the steps to configure the recording schedule on holidays for that year. You may want to have different plans for recording on a holiday.

1. Enter the Record setting interface.

Device Management → *Advanced Settings* → *Record* → *Holiday*

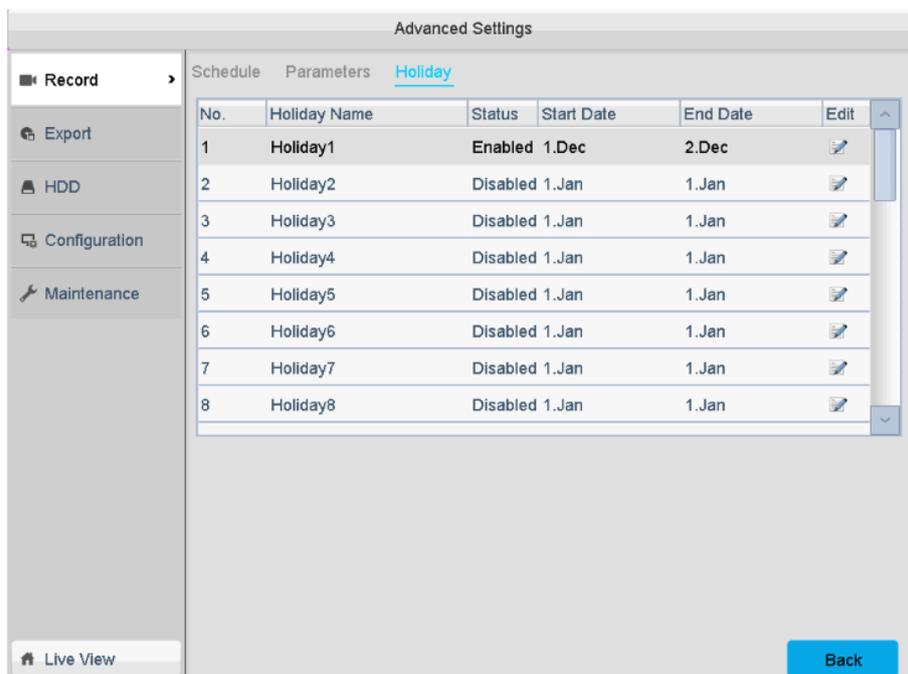


Figure 22 Holiday Settings

2. Enable Edit Holiday schedule.
 - A. Click to enter the Edit interface.

The 'Edit' dialog box shows the configuration for 'Holiday1'. The 'Enable' checkbox is checked. The 'Mode' is set to 'By Month'. The 'Start Date' is set to 'Dec' and '1', and the 'End Date' is set to 'Dec' and '2'. Buttons for 'Apply', 'OK', and 'Cancel' are at the bottom.

Holiday Name	Holiday1		
Enable	<input checked="" type="checkbox"/>		
Mode	By Month		
Start Date	Dec	1	
End Date	Dec	2	

Figure 23 Edit Holiday Settings

- B. Check the **Enable Holiday** checkbox.
- C. Select **Mode** from the drop-down list.

NOTE: *There are three different modes to configure the date format for the holiday schedule.*

- D. Set the start and end date.
 - E. Click **Apply** to save settings.
 - F. Click **OK** to exit the Edit interface.
3. Enter the Record Schedule settings interface to edit the holiday recording schedule. See *Section 4.2 Configuring the Recording Schedule*.

5 Playback

5.1 Playing Back by Channel

Play back the recorded video files of a specific channel in the Live View mode. Channel switch is supported.

1. Choose a channel in Live View mode using the mouse, then click the  button in the quick setting toolbar.

NOTE: In instant playback mode, only files recorded during the last five minutes on this channel will be played back.



Figure 24 Instant Playback Interface

2. Enter the Playback interface.
3. Move the mouse to the top of the screen or right-click the mouse when you are in Live View mode to show the right-click menu, as shown in the following figure, and select the  button to enter the playback interface.



Figure 25 Right-Click Menu Under Live View

4. Playback management.

The toolbar in the bottom part of the Playback interface can be used to control playing progress, as shown in the following figure.

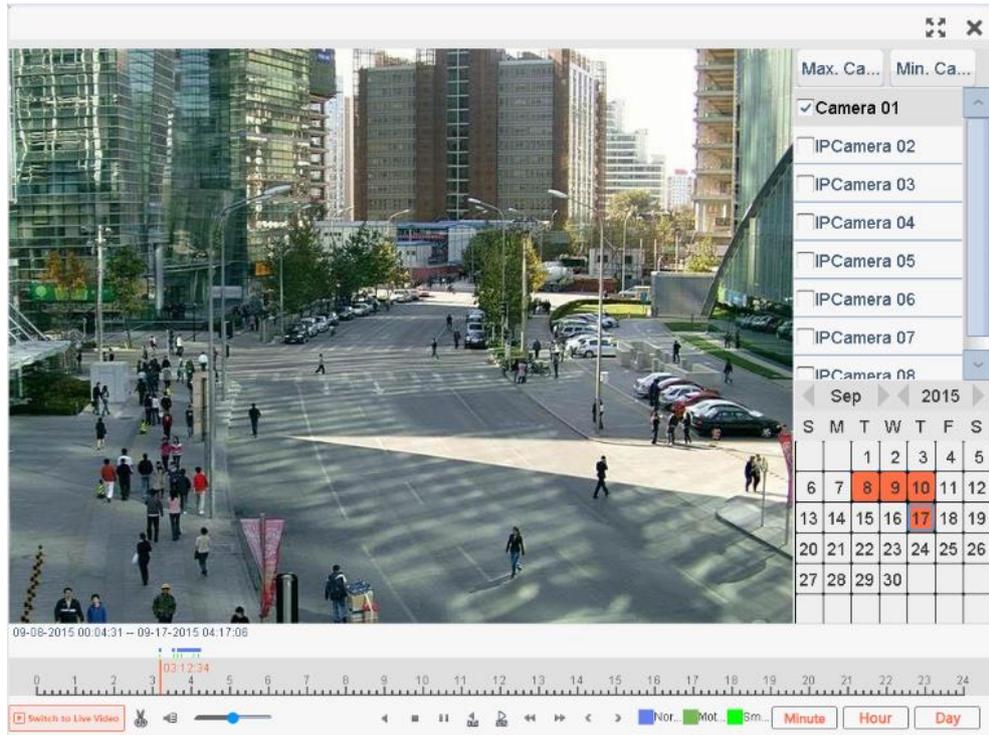


Figure 26 Playback Interface

6. (Optional) Click the channel(s) to execute simultaneous playback of multiple channels.
7. Double-click a date on the calendar to start playback.



Figure 27 Playback Calendar

NOTE: If there are recorded files for that camera on that day, the icon for that day is displayed as colored (e.g., 10). Otherwise it is displayed without color (e.g., 10).



Figure 28 Toolbar of Playback

NOTE: The `04-01-2015 15:36:13 -- 07-12-2015 22:39:25` indicates the start/end time of the recording.

Table 9 Detailed Explanation of Playback Toolbar

Button	Operation	Button	Operation	Button	Operation
	Audio On/Mute		Manage Clipping		30 sec. Forward
	30 sec. Reverse		Speed Down		Pause Reverse Play/ Reverse Play/ Single-Frame Reverse Play
	Pause Play/Play/ Single-Frame Play		Speed Up		Stop
	Previous Day		Next Day		Full Screen
	Exit				

NOTE: Click any point of the progress bar or drag the progress bar to locate special frames.

Different color in the progress bar stands for different recording type: ■ stands for normal recording, ■ stands for motion detection recording. And If any motion is detected in that video file (no matter what the recording type is), ■ will appear below the progress bar.

You can click the Minute / Hour button to switch the progress bar display unit, to locate the cursor accurately; click Day to resume.

5.2 Playing Back by System Logs

Play back recorded file(s) associated with channels after searching system logs.

1. Enter Log Information interface.

Device Management → Advanced Settings → Maintenance → Log Search

2. Set the search time and type, and click **Search** button.

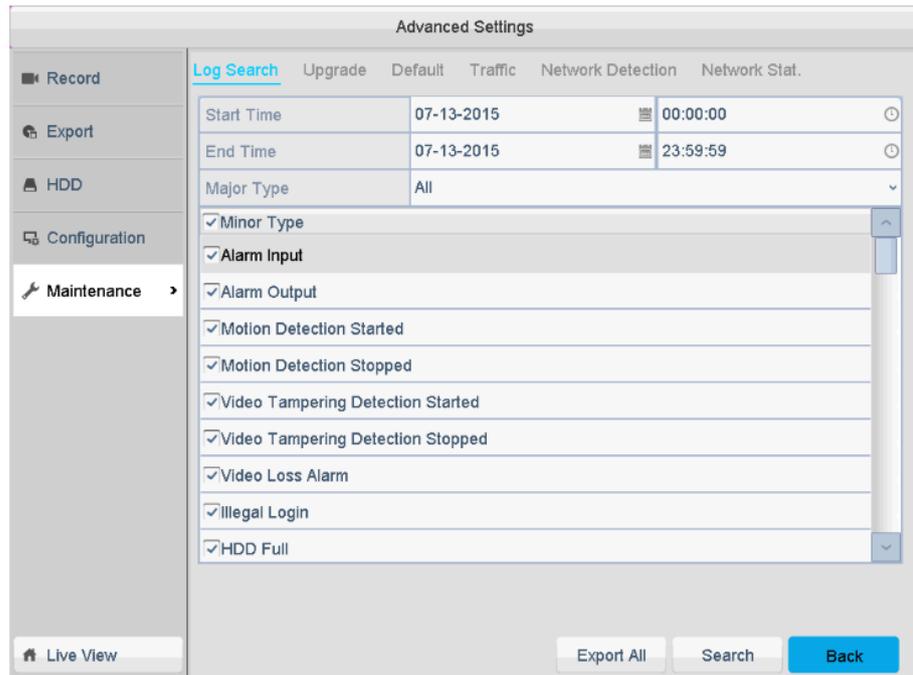


Figure 29 System Log Search Interface

3. Choose a log with a recorded file and click  button to enter Playback interface.

NOTE: If there is no recorded file at the time point of the log, a “No result found” message will pop up.

No.	Major Type	Time	Minor Type	Parameter	Play	Details
1	Alarm	07-13-2015 00:03:11	Motion Detectio...	N/A		
2	Alarm	07-13-2015 00:03:28	Motion Detectio...	N/A		
3	Alarm	07-13-2015 00:03:28	Motion Detectio...	N/A		
4	Alarm	07-13-2015 00:03:44	Motion Detectio...	N/A		
5	Information	07-13-2015 00:10:21	HDD S.M.A.R.T.	N/A	—	
6	Alarm	07-13-2015 00:11:00	Motion Detectio...	N/A		
7	Alarm	07-13-2015 00:11:12	Motion Detectio...	N/A		
8	Alarm	07-13-2015 00:11:15	Motion Detectio...	N/A		
9	Alarm	07-13-2015 00:11:33	Motion Detectio...	N/A		
10	Alarm	07-13-2015 00:13:20	Motion Detectio...	N/A		

Total: 63 P: 1/1

Figure 30 Result of System Log Search

4. The toolbar in the bottom part of Playback interface can be used to control the playback process.

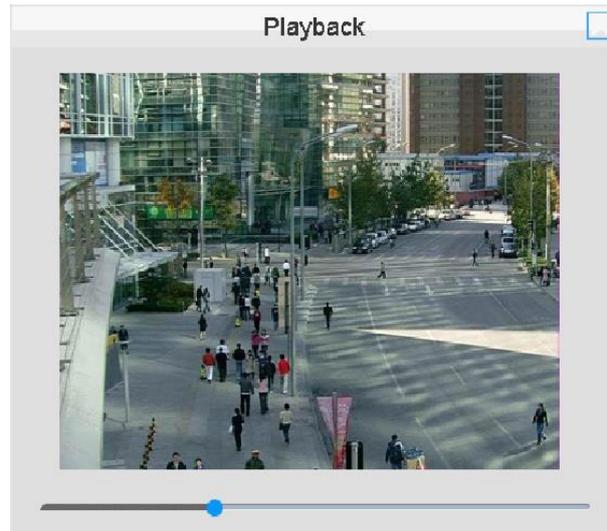


Figure 31 Interface of Playback by Log

5.3 Multi-Channel Reverse Playback

You can play back recorded files of multi-channel in reverse. Up to 6-channel simultaneous reverse playback is supported.

1. Enter the Playback interface.
2. Check more than one checkbox to select multiple channels, and click to select a date on the calendar.

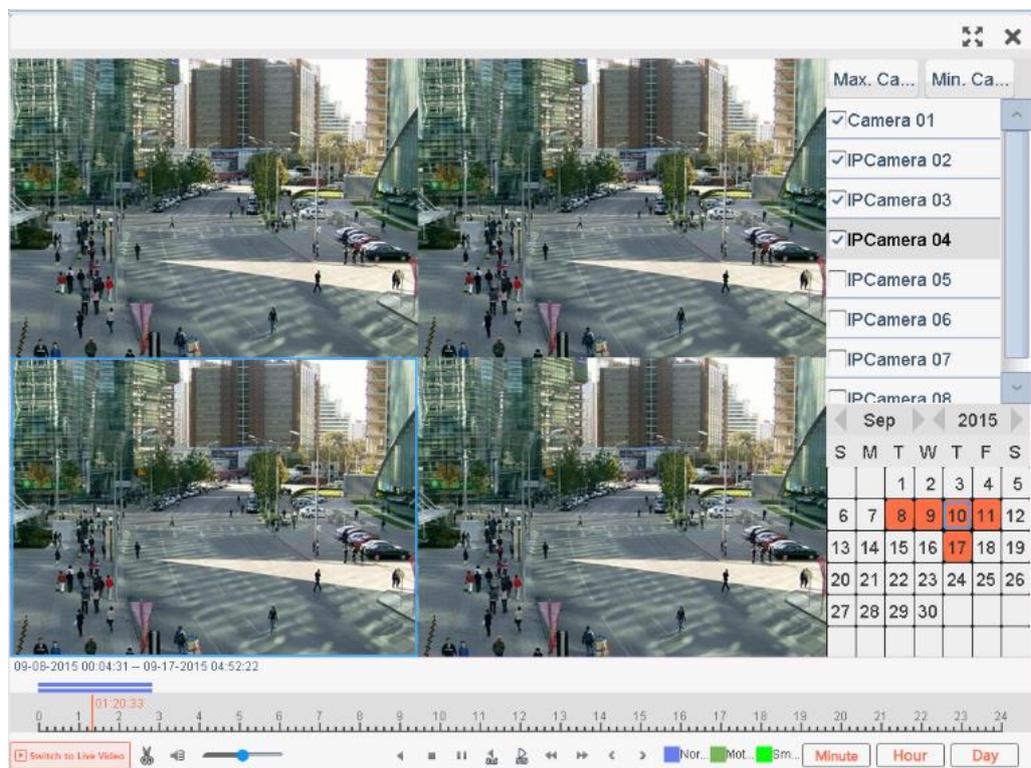


Figure 32 4-ch Synchronous Playback Interface

3. Click  to play back the recorded files in reverse.

5.4 Playing Back Frame-by-Frame

Play video files frame-by-frame, to check video image details when abnormal events occur.

1. Go to the Playback interface.
2. If you choose playback of the recorded file: Click the  button until the speed changes to single frame. One click on the playback screen causes playback of one frame.
3. If you choose reverse playback of the recorded file: Click the  button until the speed changes to single frame. One click on the playback screen causes reverse playback of one frame. It is also feasible to use the  button in the toolbar.

6 Backup

6.1 Backing Up Recorded Files

6.1.1 Backing Up by Normal Video Search

Recorded files can be backed up to various devices such as USB flash drives, USB HDDs, USB writer, etc.

1. Enter the Export interface.

Device Management → *Advanced Settings Menu* → *Export*

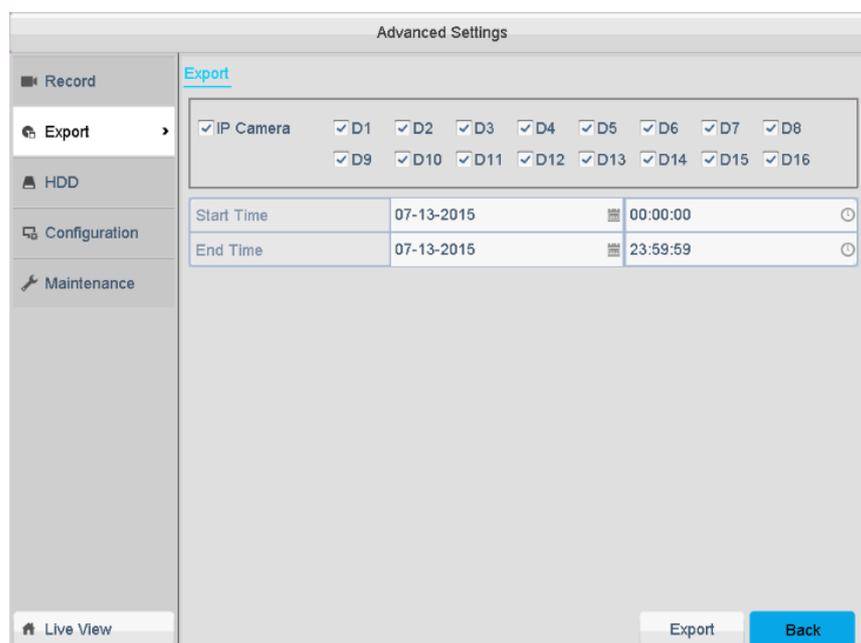


Figure 33 Video Search for Backup

2. Set the search condition and click the **Export** button to view the USB device file list.
3. Click the **Export** button to export all the files matching the search condition. Stay in the Exporting interface until all recorded files are exported, as noted by the pop-up message, "Export finished." A video player will automatically be backed up along with the video files.

NOTE: If the inserted USB device is not recognized:

- Click the **Refresh** button
 - Reconnect device
 - Check for compatibility from vendor
4. Check backup result by choosing the recorded file in the Export interface and clicking the  button to check it.

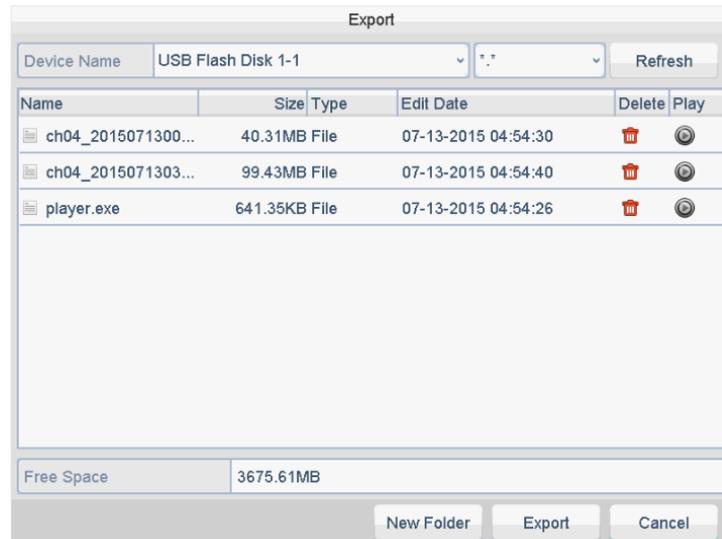


Figure 34 Export Result

6.1.2 Backing Up Video Clips

You may also select video clips to export directly during playback, using USB flash drives, USB HDDs, USB writer, etc.

1. Enter the Playback interface.

NOTE: Refer to Section 5.1, *Playing Back by Channel*

2. During playback, click the video clipping button  on the playback toolbar to start clipping the recorded file.
3. Configure the Start Time and End Time for the video clip in the pop-up dialog box.

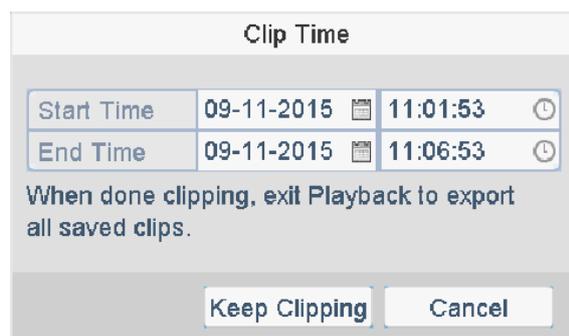


Figure 35 Set Clip Time

4. The Save Clips? prompt will pop up when you quit the playback interface.
5. Click **Yes** to enter the export clipped video interface.

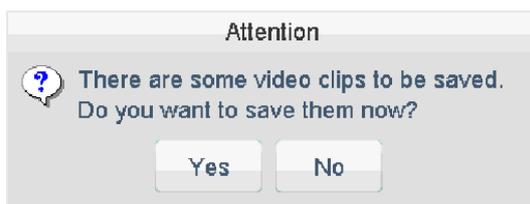


Figure 36 Saving Attention

NOTE: A maximum of 1,000 clips can be selected for each channel.

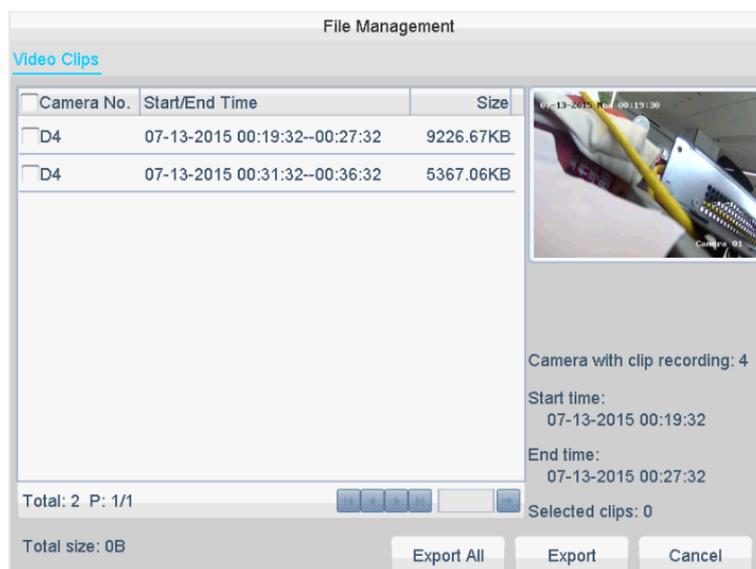


Figure 37 Clips Export Interface

6. Do one of the following to select the files to back up:
 - Check the box in front of the files to select them, and click the Export button to start backing up
 - Or, click the **Export All** button to export all of the clipped videos

NOTE: If the inserted USB device is not recognized:

- Click the Refresh button
- Reconnect device
- Check for compatibility from vendor

Stay in the Exporting interface until all record files are exported, noted by the pop-up message, "Export finished."

7. Check backup result.

6.2 Managing Backup Devices

This section explains how to manage USB flash drives and USB HDDs for backing up recorded files.

1. Enter the Export interface.

Device Management → Advanced Settings Menu → Export

2. Set the search condition and click the Export button to view the USB device file list.
3. Manage the backup device.
 - Click the **New Folder** button if you want to create a new folder on the backup device.
 - Select a file format in the drop-down list to filter the displayed files.
 - Select a recorded file or folder on the backup device and click the  button if you want to delete it.
 - Select a recorded file on the backup device and click the  button to play it.

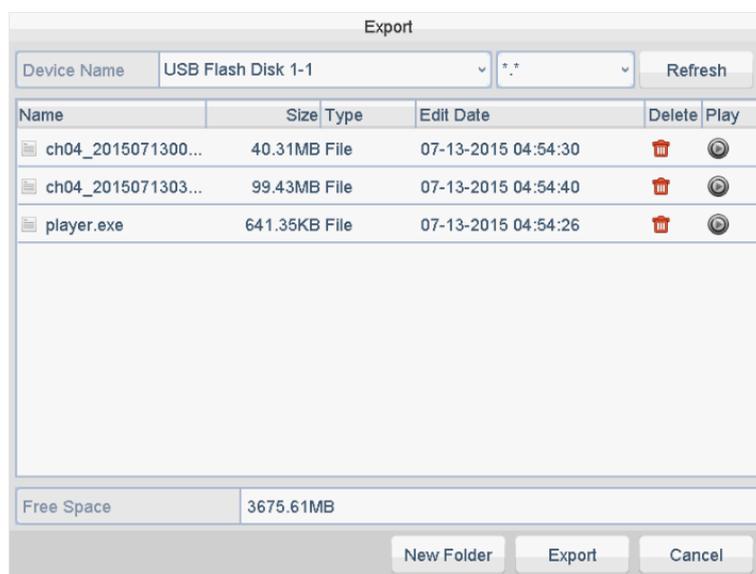


Figure 38 USB Flash Drive Management

7 Network Settings

7.1 Configuring General Settings

Network settings must be properly configured before you can operate the NVR over a network.

1. Enter the Network Settings interface.

Device Management → *Advanced Settings* → *Configuration* → *Network*

The screenshot displays the 'Advanced Settings' window with the 'Network' tab selected. The settings are as follows:

Advanced Settings	
NIC Type: 10M/100M/1000M Self-adaptive	
Enable DHCP: <input type="checkbox"/>	
IPv4 Address...	10 .16 .2 .248
IPv6 Address...	fe80::c256:e3ff:fe07:7572/64
IPv4 Subn...	255 .255 .255 .0
IPv6 Address...	
IPv4 Defa...	10 .16 .2 .254
IPv6 Defa...	
MAC Address	c0:56:e3:07:75:72
MTU(Bytes)	1500
Preferred DNS Server	10.1.7.88
Alternate DNS Server	10.1.7.77
Internal NIC IPv4 Address	192 .168 .254 .1

Figure 39 Network Settings Interface

2. In the **General Settings** interface, you can configure the following settings:

Parameter	Description
NIC Type	Do not change the value unless under a debugging circumstance
Enable DHCP	Recommended. Enable DHCP to obtain an IP address automatically and DNS server settings from a DHCP server.
IP Parameters	Configure the IP parameters if DHCP is disabled, including IPv4 Address, IPv4 Subnet Mask, and IPv4 Default Gateway. If IPv6 is supported, you can also configure the IPv6 Address, IPv6 Subnet Mask, and IPv6 Default Gateway.
MAC Address	Read only. Every device has a unique MAC address.
MTU	The valid value range of MTU (Maximum Transfer Unit) is 500 to 9676.
DNS Server	DNS (Domain Name Server) is required for domain name analysis if the device is connected to a service by domain name.
Internal NIC IPv4 Address	The internal NIC IPv4 address is required to be configured for the cameras connecting to the NVR's PoE interfaces.

3. After having configured the general settings, click the **Apply** button to save the settings.

7.2 Checking Network Traffic

You can check the network traffic to obtain real-time NVR information such as linking status, MTU, sending/receiving rate, etc.

1. Enter the Network Traffic interface.

Device Management → *Advanced Settings* → *Maintenance* → *Traffic*

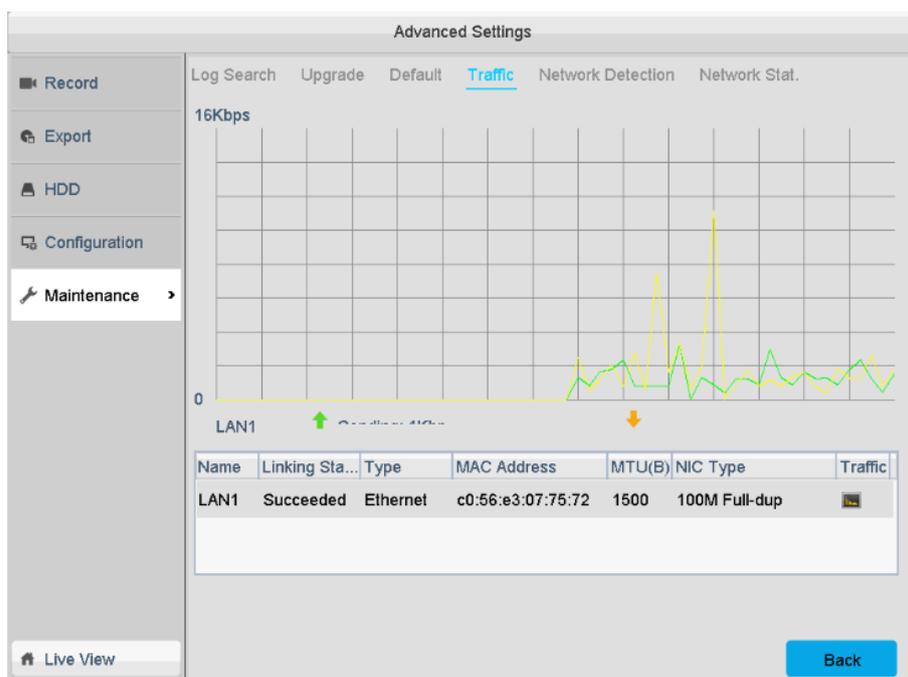


Figure 40 Network Traffic Interface

2. You can view the sending and receiving transfer rates on this screen. Traffic data is refreshed every second.

7.3 Configuring Network Detection

You can obtain the NVR's network connecting status through the network detection function, including network delay, packet loss, etc.

7.3.1 Testing Network Delay and Packet Loss

1. Enter the Network Detection interface.

Device Management → *Advanced Settings* → *Maintenance* → *Network Detection*

2. Click the **Network Detection** tab to enter the Network Detection menu, as shown in the following figure.

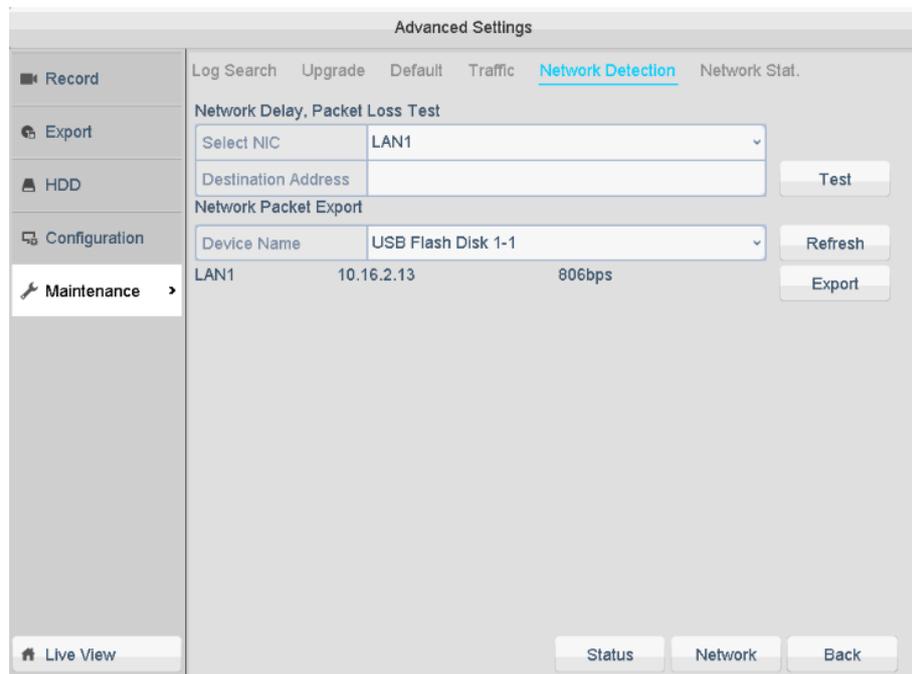


Figure 41 Network Detection Interface

3. Enter the destination address in the **Destination Address** text field.
4. Click the **Test** button to start testing network delay and packet loss. The testing result pops up on the window. If the testing fails, the error message box will pop up as well.

7.3.2 Exporting Network Packets

By connecting the NVR to a network, the captured network data packet can be exported to a USB flash disk, SATA, and other USB backup devices.

1. Enter the Network Detection interface.

Device Management → Advanced Settings → Maintenance → Network Detection

2. Select the backup device from the drop-down list of Device Names.

NOTE: Click the **Refresh** button if the connected local backup device is not displayed.
If it fails to detect the backup device, please check whether it is compatible with the NVR. You can format the backup device if the format is incorrect.

3. Click the **Export** button to start exporting.
4. After exporting is complete, click **OK** to finish the packet export.

NOTE: Up to 1 MB of data can be exported each time.

7.3.3 Checking Network Status

You can also check the network status and quick set the network parameters in this interface.

1. Click the **Status** button on the lower right corner of the page.

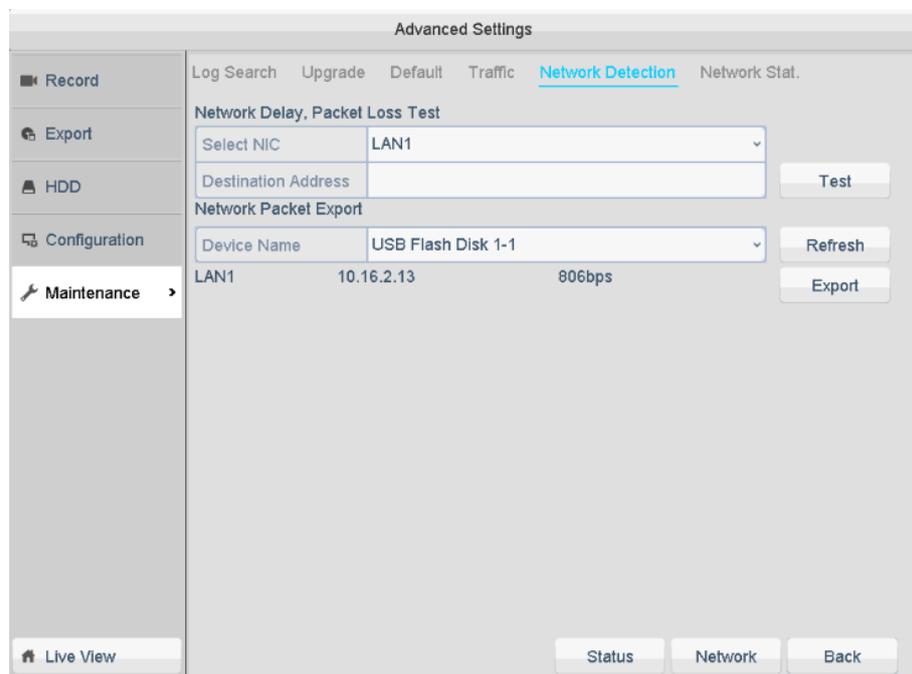


Figure 42 Network Status Checking

2. If the network is normal, the following message box will pop up:

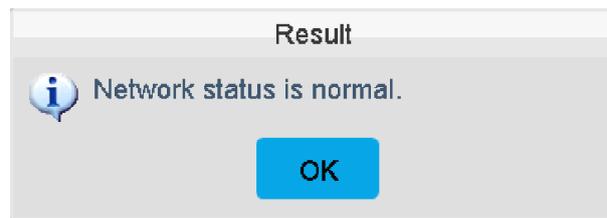


Figure 43 Network Status Checking Result

*NOTE: If a message box pops out with information other than this, click the **Network** button to show the quick setting interface of the network parameters.*

7.3.4 Checking Network Statistics

You can check the network status to obtain real-time information of the NVR.

1. Enter the Network Statistics interface.

Device Management → Advanced Settings → Maintenance → Network Stat.

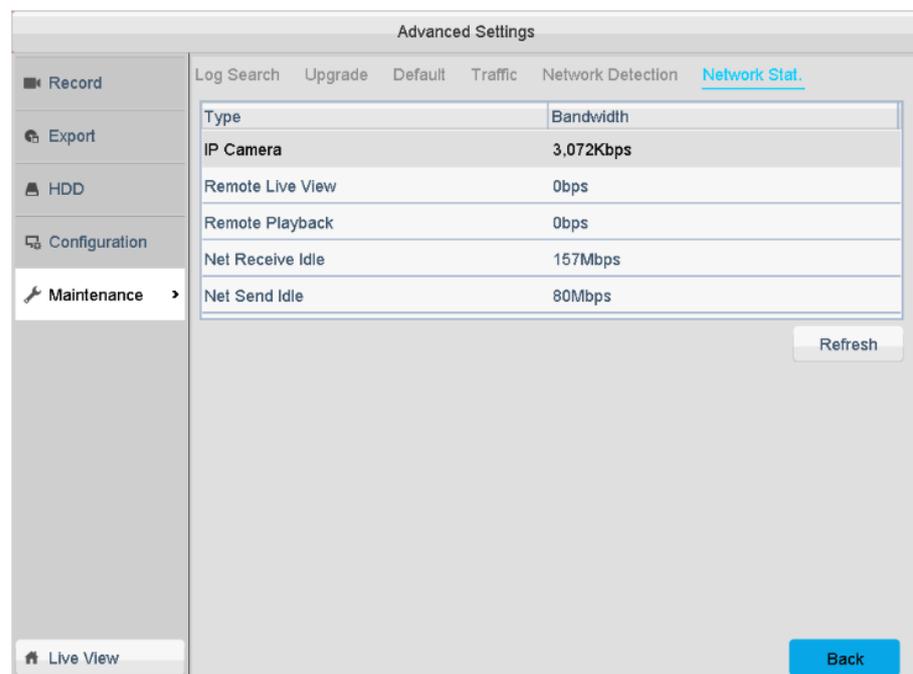


Figure 44 Network Stat. Interface

2. Check the IP Camera bandwidth, Remote Live View bandwidth, Remote Playback bandwidth, Net Receive Idle bandwidth, and Net Send Idle bandwidth.
3. Click Refresh to update the status.

8 Hard Disk Drive (HDD) Management

8.1 Formatting HDDs

This section explains how to format the HDD (erase all data and prepare it for use).

1. Enter the HDD Information interface.

Device Management → *Advanced Settings* → *HDD*

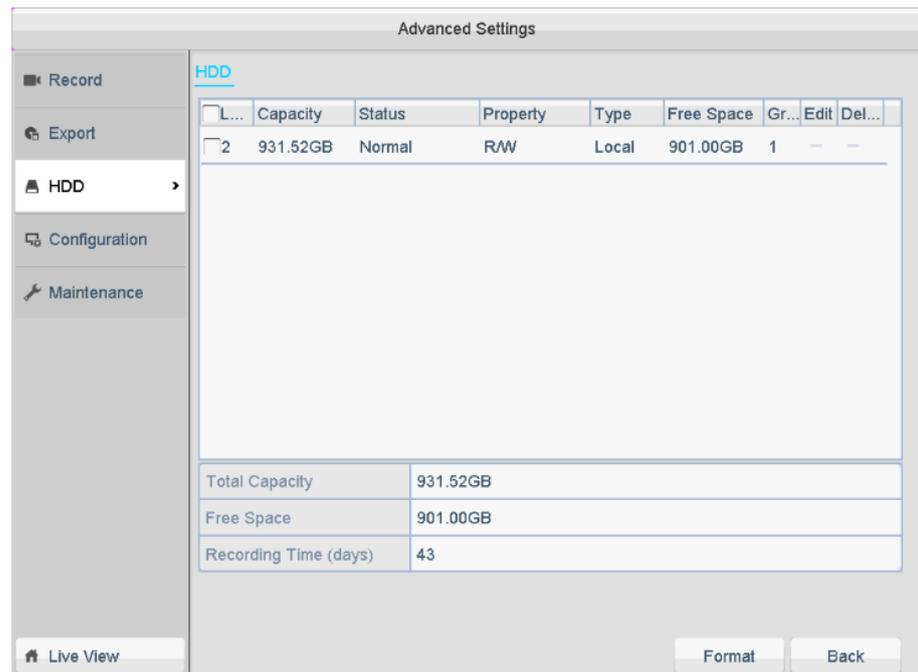


Figure 45 HDD Information Interface

2. Check the HDD checkbox to select an HDD to format.
3. Click the **Format** button.

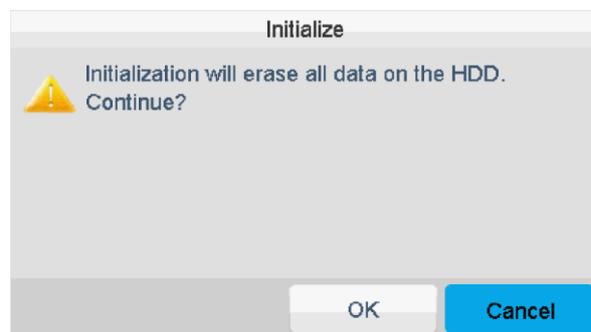


Figure 46 Confirm Initialization

4. Select the **OK** button to start initialization.

8.2 Checking HDD Status

You can check the status of all HDDs installed on an NVR and immediately perform maintenance, as necessary, to prevent HDD failure.

1. Enter the HDD Information interface.

Menu → HDD → General

2. Check the status of the HDD(s) that are displayed on the list, as shown in the following figure.

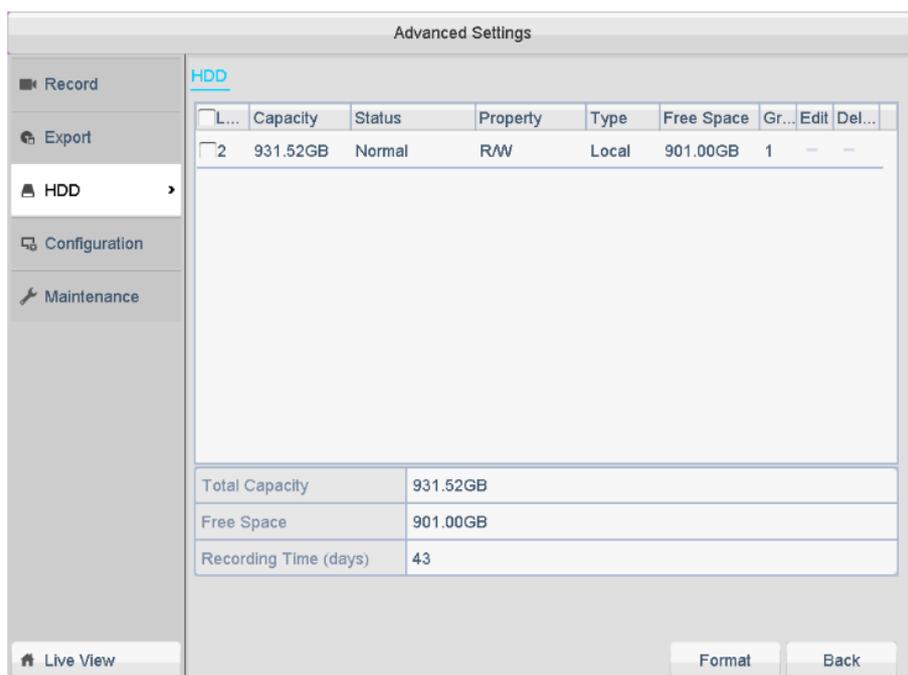


Figure 47 View HDD Status (1)

8.3 Checking Recording Time Left

You can check the Recording Time value for the time left for recording until the HDD is full.

1. Enter the System Information interface.

Menu → Maintenance → System Info

2. Click the **HDD** tab to view the status of each HDD displayed on the list, as shown in the following figure.

System Information

Device Info Camera Record Network **HDD**

Label	Status	Capacity	Free Space	Property	Type	Group
2	Normal	931.52GB	928.00GB	R/W	Local	1

Total Capacity	931.52GB
Free Space	928.00GB
Recording Time (days)	11

[Back](#)

Figure 48 View HDD Status [2]

9 Camera Settings

9.1 Configuring Image Parameters

1. Enter the Image Settings interface.

Device Management → *Image Settings*

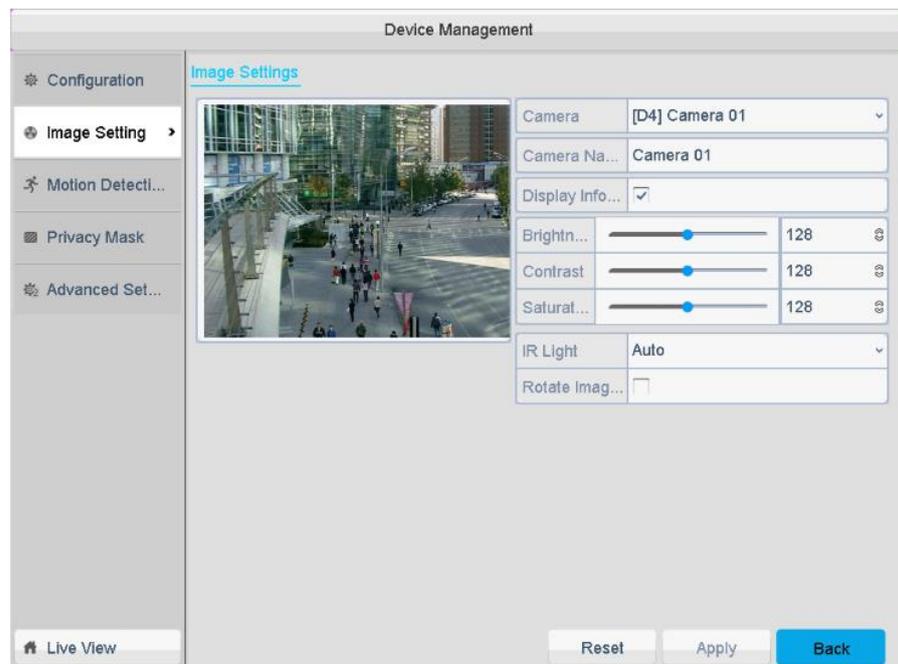


Figure 49 Image Settings Interface

2. Select a camera in the Camera drop-down list to set image parameters.
3. Configure the image parameters as desired.

Parameter	Description
Camera Name	You can specify the Camera Name to be displayed on the image and in the camera list of system information.
Display Information	Enable this function to display the date, time, and camera name on the image.
Brightness	Adjust the image brightness by dragging the slider or clicking the arrows.
Contrast	Adjust the image contrast by dragging the slider or clicking the arrows. The higher the contrast, the more distinguishable the object in the image will be.
Saturation	Adjust the image saturation by dragging the slider or clicking the arrows.
IR Light	For cameras supporting the IR light supplement, you can set it to "Auto" if you want the IR light to turn on automatically when the environment is dark. Or, you can set it to "Off" to disable this function.
Rotate Image 180 Degrees	You can rotate the image 180 degrees if the camera is installed upside down.

4. (Optional) You can click the **Reset** button to reset all the image parameters.

5. Click the **Apply** button to save the settings.

9.2 Configuring Privacy Mask

You can define the four-sided privacy mask zones that cannot be viewed by an operator. The privacy mask can prevent certain surveillance areas to be viewed or recorded.

Steps:

1. Enter the Privacy Mask Settings interface:
Device Management → *Privacy Mask*
2. Select the camera on which you wish to set a privacy mask.
3. Click the **Enable Privacy Mask** checkbox to enable this feature.

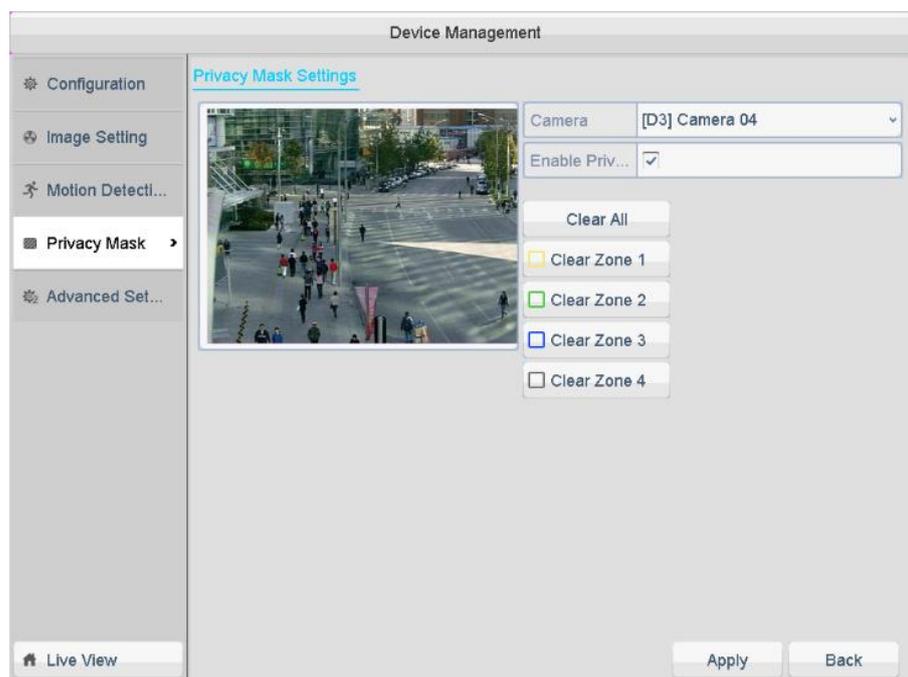


Figure 50 Privacy Mask Settings Interface

4. Use the mouse to draw a zone on the window. Zones will be marked with different frame colors.
5. [Optional] Move the mouse onto a mask and the cursor will become an arrow. You can then adjust the size of the existed area by clicking-and-dragging a side.

NOTE: Up to four privacy masks zones can be configured.

6. The privacy mask zone(s) on the window can be cleared by clicking the corresponding **Clear Zone1-4** icons on the right side of the window, or click the **Clear All** button to clear all zones.

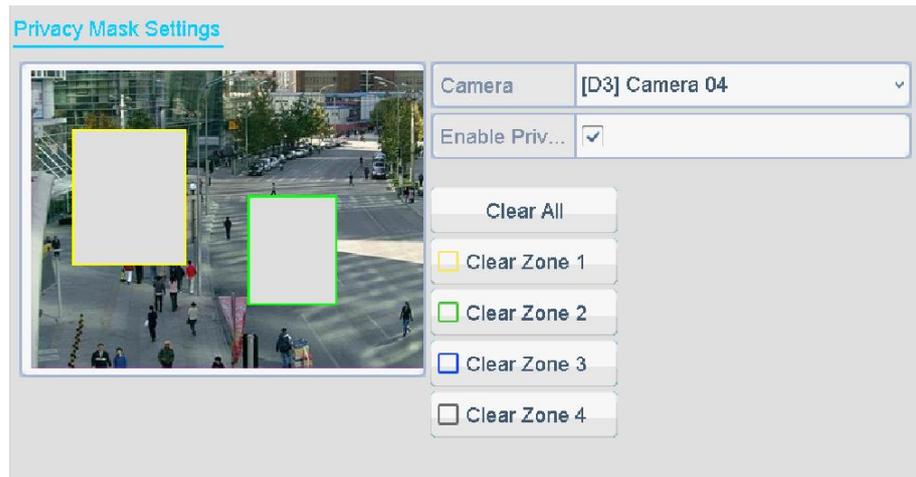


Figure 51 Set Privacy Mask Areas

7. Click the **Apply** button to save the settings.

10 NVR Management and Maintenance

10.1 Configuring General Settings

You can configure the device language, video output resolution, system time, etc.

1. Enter the General Settings interface:

Device Management → *Configuration*

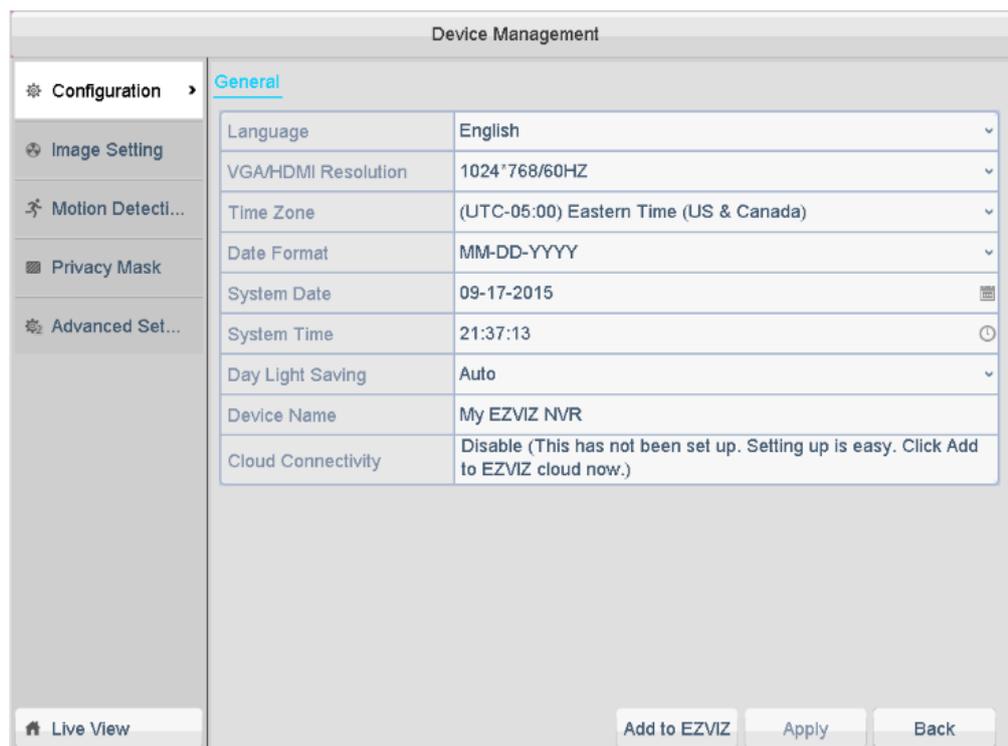


Figure 52 General Settings Interface

2. Configure the following settings:
 - **Language:** The default language is *English*.
 - **VGA/HDMI Resolution:** Select the video output resolution, which must be the same as the monitor screen resolution.
 - **Time Zone:** Select the time zone.
 - **Date Format:** Select the date format.
 - **System Date:** Select the system date.
 - **System Time:** Select the system time.
 - **Day Light Saving:** Select "Auto" if you want to enable the DST function.
 - **Device Name:** Edit the NVR name.

- **Cloud Connectivity:** The connection status of the EZVIZ Cloud. If it displays as Disable, you can click the **Add to EZVIZ** button to set the EZVIZ Cloud connection.
3. Click the **Apply** button to save the settings.

10.2 Viewing System Information

1. Enter the System Information interface.

Menu → Maintenance → System Info

2. You can click the **Device Info**, **Camera**, **Record**, **Network**, and **HDD** tabs to view system information about the device.
3. You can also scan the device's QR code with a mobile phone to add it to your EZVIZ account.

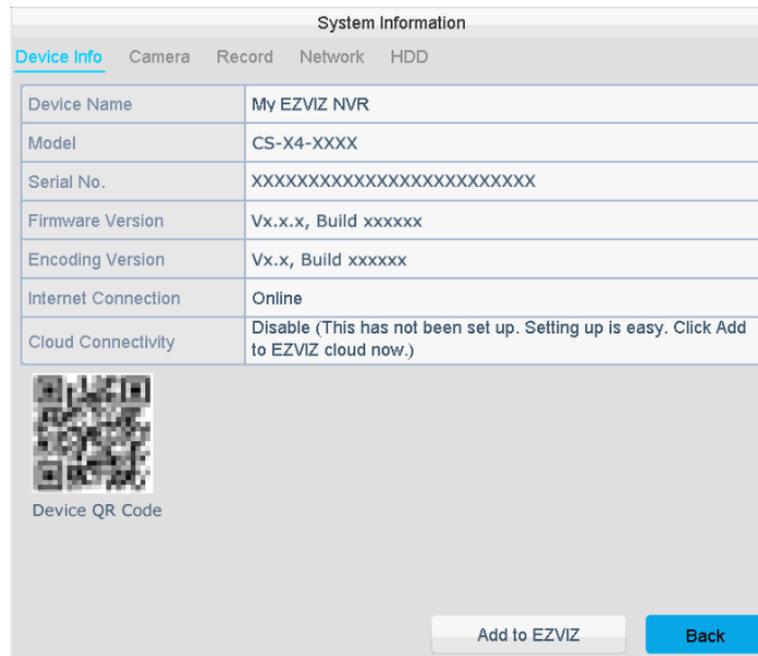


Figure 53 Device Information Interface

10.3 Searching and Export Log Files

The NVR's operation, alarm, exception, and information can be stored in log files, which can be viewed and exported at any time.

1. Enter the Log Search interface.

Menu → Advanced Settings → Maintenance → Log Search

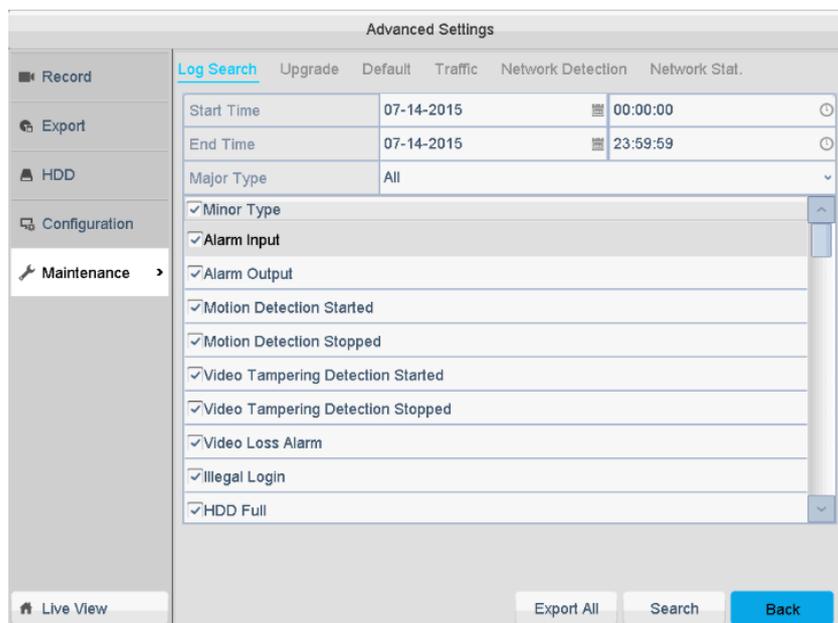


Figure 54 Log Search Interface

2. Set the log search conditions to refine your search, including Start Time, End Time, Major Type, and Minor Type.
3. Click the **Search** button to start searching the log files. Or, you can click the **Export All** button to export all the log files of the device.
4. The matched log files will be displayed on the list as shown below.

No.	Major Type	Time	Minor Type	Parameter	Play	Details
1	Exception	07-14-2015 02:03:32	HDD Error	N/A	✓	✓
2	Exception	07-14-2015 02:03:35	HDD Error	N/A	—	✓
3	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
4	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
5	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
6	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
7	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
8	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
9	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓
10	Exception	07-14-2015 02:04:06	IP Camera Disco...	N/A	⏸	✓

Total: 35 P: 1/1

Export Back

Figure 55 Log Search Results

NOTE: Up to 2,000 log files can be displayed each time.

- You can click the button of each log or double click it to view its detailed information, as shown in the following figure. You can also click the button to view the related video files, if available.

Log Information	
Time	07-14-2015 02:04:06
Type	Exception--IP Camera Disconnected
Local User	N/A
Host IP Address	N/A
Parameter Type	N/A
Camera No.	D4
Description:	
Camera No.: D4 IP address: 192.168.254.5 Domain name: Protocol: EZVIZ Management port: 8000 Channel port: 1 Transfer Protocol: Auto Extra information: Unreachable	
<div style="text-align: right;"> <input type="button" value="Previous"/> <input type="button" value="Next"/> <input type="button" value="OK"/> </div>	

Figure 56 Log Details

- If you want to export the log files, click **Export** to enter the Export menu.
- Select the backup device from the drop-down **Device Name** list.
- Click **Export** to export the log files to the selected backup device.
- You can click the **New Folder** button to create a new folder on the backup device

NOTE: Connect the backup device to an NVR before operating log export.

The log files exported to the backup device are named after the export time, e.g., 20110514124841logBack.txt.

10.4 Upgrading IP Camera and NVR

The firmware on your NVR can be upgraded by a local backup device or on the EZVIZ website.

10.4.1 Online Upgrading by EZVIZ

Before You Start: Make sure your device is connected to the network.

1. Enter the Upgrade interface:

Device Management → *Advanced Settings* → *Maintenance* → *Upgrade*

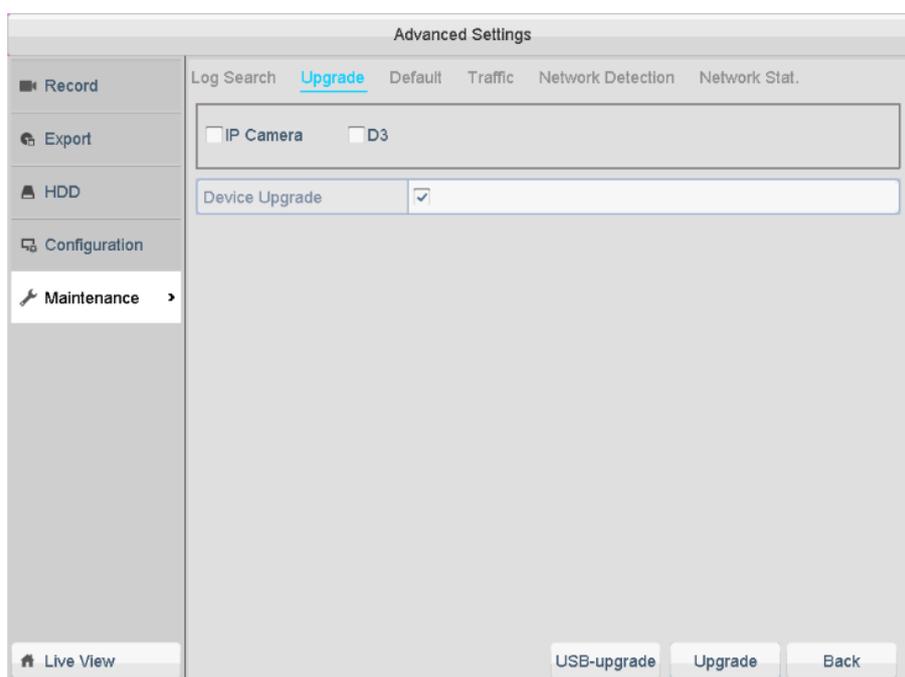


Figure 57 Upgrade

2. Check the checkbox of the device you want to upgrade. You can choose to upgrade either the IP cameras or the device.
3. Click the **Upgrade** button to search for a matching upgrade package online. If an upgrade package is found, the upgrade process will continue and the device will reboot after the upgrade is complete.

10.4.2 Upgrading by Local Backup Device

1. Connect a UBS device that contains the update firmware file to the DVR.
2. Enter the Upgrade interface.

Device Management → *Advanced Settings* → *Maintenance* → *Upgrade*

3. Check the checkbox of the device you want to upgrade. You can choose to upgrade either

the IP cameras or the device.

4. Click the **USB-Upgrade** button to enter the Upgrade menu, as shown in the following figure.

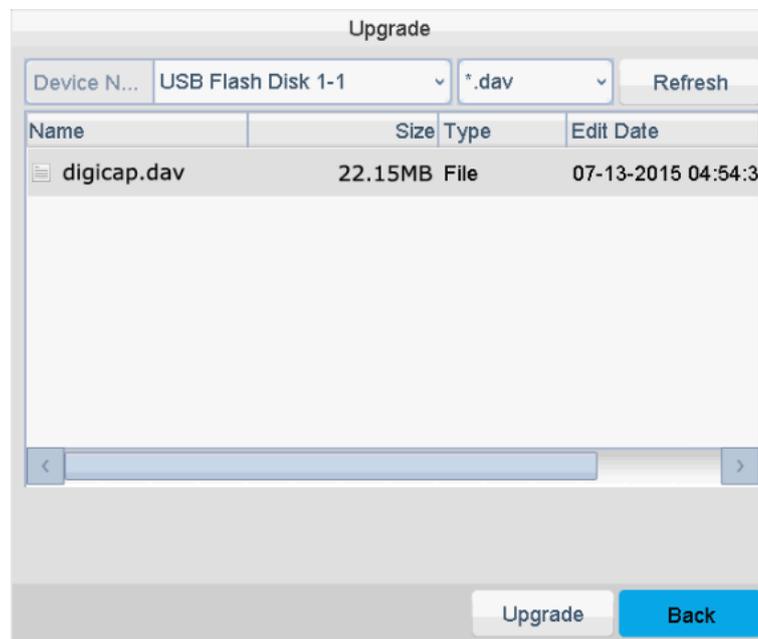


Figure 58 Local Upgrade Interface

5. Select the update file on the backup device.
6. Click the **Upgrade** button to start upgrading.
7. After the upgrade is complete, reboot the NVR to activate the new firmware.

10.5 Restoring Default Settings

1. Enter the Default interface:

Device Management → *Advanced Settings* → *Maintenance* → *Default*

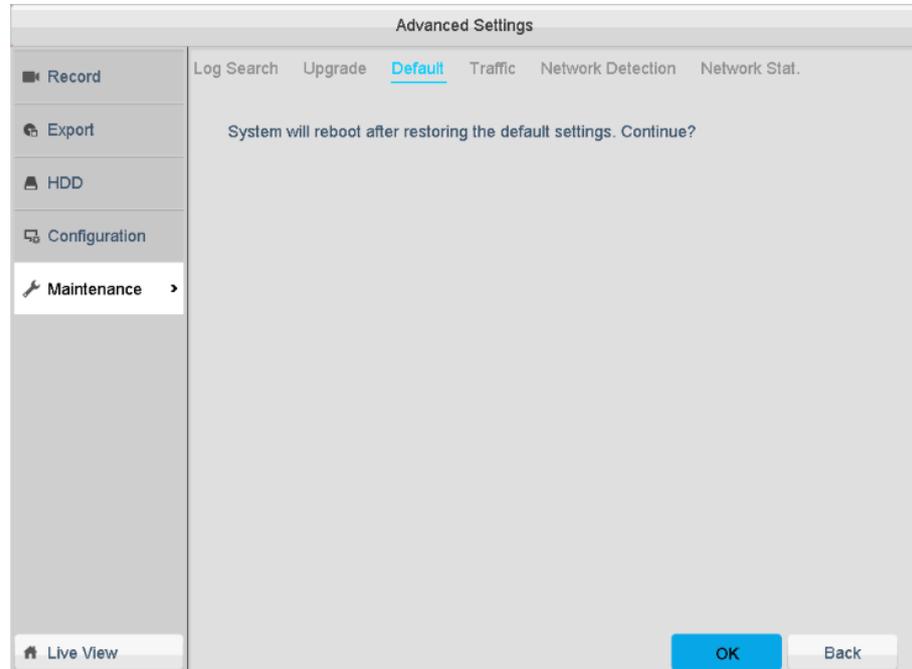


Figure 59 Restore Factory Default

2. Click the **OK** button to restore the factory default settings.

NOTE: Except for the network parameters (including IP address, subnet mask, gateway, MTU, default route, and server port), all other device parameters will be restored to factory default settings.

Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the NVR, with the main stream having a maximum resolution of 1080p and the sub-stream having a maximum resolution of 4CIF.
- **HDD:** Acronym for Hard Disk Drive. A storage medium that stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext requests and information between servers and browsers over a network
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize computer clocks over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in countries such as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60 Hz.
- **NVR:** Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP domes, and other DVRs.
- **PAL:** Acronym for Phase Alternating Line. PAL is a video standard used in broadcast television systems in large parts of the world. The PAL signal contains 625 scan lines at 50 Hz.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.