

Step 5. Configure start up wizard

- 1 Select the screen resolution from the drop-down menu based on your TV/monitor's resolution.

Resolution	
System Resolution:	1024 * 768/60HZ

- 2 If you reboot your system and want the wizard to start again check this box.

Wizard	
<input checked="" type="checkbox"/>	Start wizard when device starts?

- 3 We strongly recommend that you change the default Admin password '12345' for better security protection.

Wizard	
Admin Password	*****
New Admin Password	
New Password	
Confirm	

- 4 Select the applicable time zone, date/time format, and time.

Wizard	
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore
Date Format	MM-DD-YYYY
System Format	09-29-2014
System Time	18:14:37

- 5 We recommend checking 'Enable DHCP' even if your DVR is not connected to the internet, this will automatically get the DVR IP address.

Wizard	
NIC Type	10M/100M Self-adaptive
Enable DHCP	<input checked="" type="checkbox"/>
IPv4 Address	192.0.0.64

- 6 The wizard will show additional network information, click 'Next' to proceed.

Wizard	
Server Port	8000
HTTP Port	80
RTSP Port	8554

- 7 To initialize the hard drive click the 'Init' box otherwise the DVR will NOT record.

Wizard					
Capacity	Status	Property	Type	Free Space	
<input checked="" type="checkbox"/>	1 465.76GB	Normal	R/W	Local	464GB

- 8 If you wish to add an IP camera click 'Search' otherwise, click 'Next' to proceed.


Wizard			
IP Address	Amount	Model	
<input checked="" type="checkbox"/>	1 192.168.1.36	1	CMIP3412

- 9 Choose continuous or motion detection recording from the listed options. Check the 'Start Recording' box to initialize recording. Click 'OK' to finish the wizard.

Wizard	
<input checked="" type="checkbox"/>	Start Recording
<input type="radio"/>	Continuous
<input type="radio"/>	Motion Detection

What is in the box?

- | | |
|---------------------------------|------------------------|
| 1 HD-TVI Digital Video Recorder | 1 DVR Power Adapter |
| 4 720p Analog Cameras | 1 Camera Power Adapter |
| 4 90ft. Siamese BNC Cables | 1 Quick Start Guide |
| 1 1-to-4 Power Splitter | 1 Warranty Card |
| 1 Mouse | 2 Security Stickers |
| 1 Remote Control | |

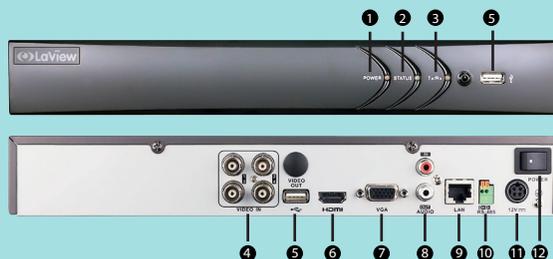

- | | | | |
|--------------|--|-------------|---|
| 1 Power LED | Indicates if the DVR is powered on | 7 VGA Port | Connects to TV or computer monitor |
| 2 Status LED | Indicates if the Hard Drive is working | 8 Audio I/O | Connects an extra microphone/speaker (not included) |
| 3 Tx/Rx LED | Indicates if the Network is active | 9 LAN | Connects to your router |
| 4 Video In | Connects cameras via BNC cables | 10 RS-485 | Connection for additional PTZ camera (not included) |
| 5 USB Port | Connects to a USB mouse or flash drive | 11 12V | Connects the 12V DC Power Supply |
| 6 HDMI Port | Connects to HDTV or computer monitor | 12 Power | Power Switch |

Troubleshooting

Problem	Possible Solution(s)
No display/No signal/Invalid format	<ul style="list-style-type: none"> Make sure the VGA/HDMI cable is properly connected to both the DVR and TV/monitor <i>NOTE: A laptop cannot be used as a screen</i> Make sure your TV/monitor is on the correct video input (e.g. HDMI1, HDMI2, etc.) Try switching to another 1080p TV/monitor and adjust the output resolution in the DVR menu On the front of the DVR check that the power LED light is on
No picture/No video	<ul style="list-style-type: none"> Make sure the camera is completely connected to the power splitters well as the Video In plug
Cannot log in	<ul style="list-style-type: none"> The default user name is: admin and the default password is: 12345. If you don't remember your old password, please submit a ticket to us at www.laviewusa.com/contact/.
Camera picture is not clear	<ul style="list-style-type: none"> Make sure the camera is not placed behind a window, there is no interference or a strong light source in front of the camera In DVR Menu>Record>Parameter>Resolution, set the sub stream resolution to CIF for all channels Move the camera to a different location and/or direction <i>NOTE: The live view (sub stream) resolution is NOT the actual image quality recorded (Main stream); Connection of excessive length (over 200ft) of BNC cable will drop the camera image quality; Working at extreme weather condition (below -40F or above 140F) will drop the image quality and damage the camera.</i>
Night vision is not working	<ul style="list-style-type: none"> The infrared activates automatically when the environment is dark enough. You can check that the camera infrared bulbs are working properly as they turn light red in dark environments
DVR is not recording	<ul style="list-style-type: none"> Check that the hard drive status is normal and is initialized under the Main Menu>HDD>General Enable the record mode (Normal or Motion Detection) under the Main Menu>Record>Schedule>Edit for the selected camera



HD-TVI QUICK START GUIDE

Remote Viewing

View footage on your mobile devices with our app. You can either scan the provided QR code or search LaView Net in the app store.



LaView NET



SCAN ME

Content may vary by model, including the number of channels, cameras, configuration, and hard drive capacity.

Questions?

Call us at: **626-898-4988** (M-F from 9am to 6pm PST)
Open support ticket at: www.laviewusa.com/contact
Tutorial videos & user manual at: www.laviewusa.com/support