

OPERATION INSTRUCTIONS

1. An adult should supervise play on this product for children of all ages.
2. Only for family residential domestic use. Designed for single rider use or two plus riders simultaneously. Any combination of riders should not exceed 300 lb. maximum load.
3. Maximum fall height 9 ft. (determined by swing pivot point, maximum hanging rope length and 24 in. above ground surface).
4. Riders should be dressed appropriately including wearing well-fitting shoes that fully protect feet. Remove articles before swinging that create hazards when they get tangled and caught (examples include: ponchos, scarves, and other loose-fitting clothing, bike or sports helmets).
5. Instruct children: Not to swing higher than hook attachment • Get off swing only after it has completely stopped and hold onto the rope or chain until both feet are planted firmly on the ground • Not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope • To avoid swinging empty seats • Not to walk close to, in front of, or behind, or between moving items • To sit in center of the swings with their full weight on the seats • Not to use the equipment in a manner other than intended • Not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard • To remove their bike or other sports helmet before playing on the playground equipment • Do not climb swing when it is wet • In direct sunlight, check that seating surface is not too hot

MAINTENANCE INSTRUCTIONS

1. At the BEGINNING of each play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed; Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303; Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary
2. TWICE A MONTH DURING play season: Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
3. ONCE A MONTH DURING play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
4. At the END of each play season or when the temperature drops below 32°F: Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate dept h. Replace as necessary; Owners shall be responsible for maintaining the legibility of the warning labels.
5. When you are ready to dispose of swing, make sure that all swing components are disposed of in accordance with local waste ordinances.
6. Swing should be disassembled and disposed of in such a way that no unreasonable hazards exist at the time the swing is discarded.
7. WARNING: Failure to carry out these checks and inspections could result in fall or injury.

SAFETY INFORMATION

To reduce the likelihood of injury please follow the guidelines as outlined in this instructions. You can visit our website www.mandmsalesinc.com to review the instruction manual in the future or keep this instruction sheet for reference: Hammock Swing™ Model MM00157.

The installation instructions above are reflective of the U.S. Consumer Product Safety Commission's Outdoor Playground Safety Handbook. For a complete description of installation instructions and warnings for outdoor playground equipment you can visit our website www.mandmsalesinc.com to link to the current CPSC handbook and review in its entirety.

Our products are tested to ensure safety and compliance with Consumer Product Safety Improvement Act of 2008 (CPSIA) including specifications for lead paint and phthalates and ASTM International F1148 Standard Consumer Safety Performance Specifications.

INSPIRING *outdoor* ADVENTURES

JOIN OUR MISSION TO INSPIRE CHILDREN
TO GET UP, GET OUT, AND PLAY!

MANDMSALESINC.COM

Ages
5+

HAMMOCK SWING™



HAMMOCK SWING™ • MM00157

INSTRUCTIONS

ASSEMBLY • INSTALLATION • OPERATION • MAINTENANCE • SAFETY

M&M

M&M SALES ENTERPRISES, INC.
Dubuque, Iowa 877.242.0154
mandmsalesinc.com

HAMMOCK SWING™

ASSEMBLY INSTRUCTIONS

BEFORE YOU START

- **WARNING:** Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete. To prevent serious injury, children must not use the swing until properly installed.
- Assembly should be completed by adult person(s). We intend for our products to bring joy not frustration. Because the Hammock Swing™ is meant to enjoy with friends too, we say invite a friend (or someone you can spend at least 20 minutes with) to help you assemble and install your new swing.
- A flat level surface approximately 6 ft. x 4 ft. will be needed to spread out swing cover material for assembly.
- A wrench is included for tightening the four nuts.


ASSEMBLY



1. Lay out all necessary swing components pictured above.



2. Unfold material swing cover on level surface with design facing up. Pull the four hook/loop straps toward the center so the fastening side faces up.

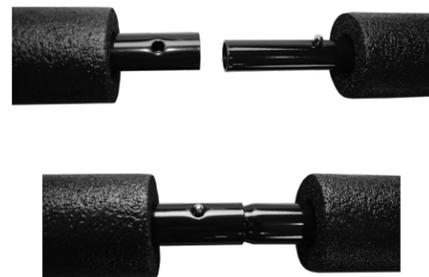

3. Connect a one-end shrunk straight tube (with metal pin) with a two-end shrunk straight tube. Depress metal pin with thumb to slide end into tube, pin will pop through hole and hold tubes together. This creates the side length tube. Slide through swing cover sleeve. Repeat this step on second side with remaining two poles.

Insert the narrow ends of the side sections with the wider ends of the curved-tubes that come pre-inserted in the sleeves at ends of cover.



4. Remove the nut and one washer from the bolt assemblies at the end of the hanging ropes. Pull the bolt ends of each rope through the slot at the end of the straps. One washer will remain on top of the tube threaded onto the bolt. Insert the bolt through the holes formed at the tubes connection points.



5. Add washer and nut to the bottom side of tube bolt and secure. Tighten with included wrench. Repeat Steps 4 and 5 on the remaining three straps with remaining three bolt ends.




6. Pull the hook/loop straps back over the tubing frame and attach to the hook/loop fastener on underside of swing.



7. Finished swing should look as pictured above. Ropes should not cross each other above swing.

INSTALLATION INSTRUCTIONS

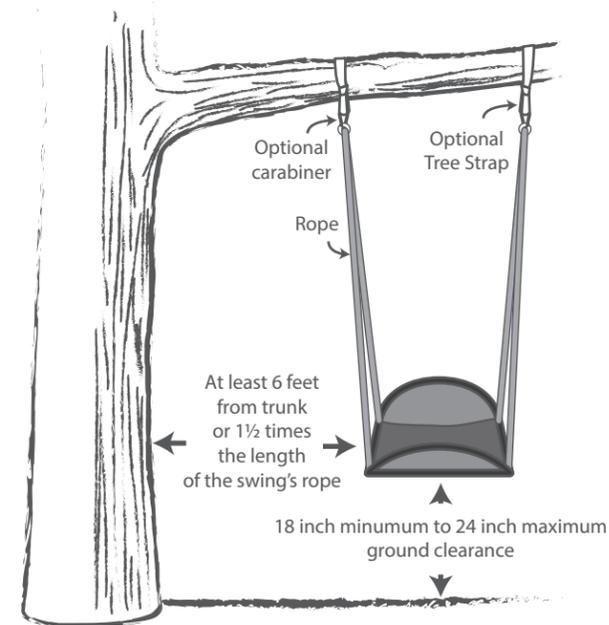

TREE LIMB ASSEMBLY: Test tree limb to ensure that it will hold the weight limit of 300 lbs. safely.

SWING SET OR OTHER HORIZONTAL BEAM ASSEMBLY: Attach swing to a swing set by removing two sets of swings from the existing swing set and attach the four metal loops to the swing support hook hardware installed on equipment or optional carabiners/spring clips.

1. Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
2. To prevent serious injury, children must not use the equipment until properly installed.
3. Confirm that the supporting structure is secure, it will support at least 300 lbs., is over level ground, has a minimum height of 7 ft. and is no less than 6 ft. on all sides from vertical elements. Swing should have a clearance of at least 1.5 times the total length of all the rope measured from the tree limb/horizontal beam to the spring clip(s) attachment point.
4. Adjust swing hanging length so platform is parallel with ground. Bottom of swing should be no more than 24 in. and no less than 18 in. from the ground.

ADJUSTING SWING HEIGHT

Adjust swing hanging length so bottom of swing when rider is in it is parallel with the ground. Bottom of swing with rider on it should be no more than 24 in. and no less than 18 in. from the ground.

This swing is made to enjoy like a hammock. We hope you enjoy kicking back and relaxing in it. In the same spirit, please enter and exit the swing as you would a hammock — carefully.

Ensure that the swing hangs horizontal after adjustment of the ropes.